

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
 3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed : Screwdriver (not provider).


HARDWARE LIST		
ITEM	DESCRIPTION	QTY
A	BACK	1 PC
B	CUSHION SEAT	1 PC
C	ARM	2 PCS
D	STRETCHER	1 PC
E	BACK STRETCHER	1 PC

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC Bolt M6 x 65mm	6 PCS
2	JCBB Bolt M8 x 60mm	2 PCS
3	M8 FLAT WASHER	2 PCS
4	M8 SPRING WASHER	2 PCS
5	WOOD DOWEL M10 x 40mm	6 PCS
6	BARREL NUT M6 x 10 x 13mm (ZB)	6 PCS
7	WOOD BUTTON DIA 14.5 x 9mm	6 PCS
8	M4 ALLEN KEY (BALL SHAPE)	1 PC
9	M5 ALLEN KEY (BALL SHAPE)	1 PC

STEP 1

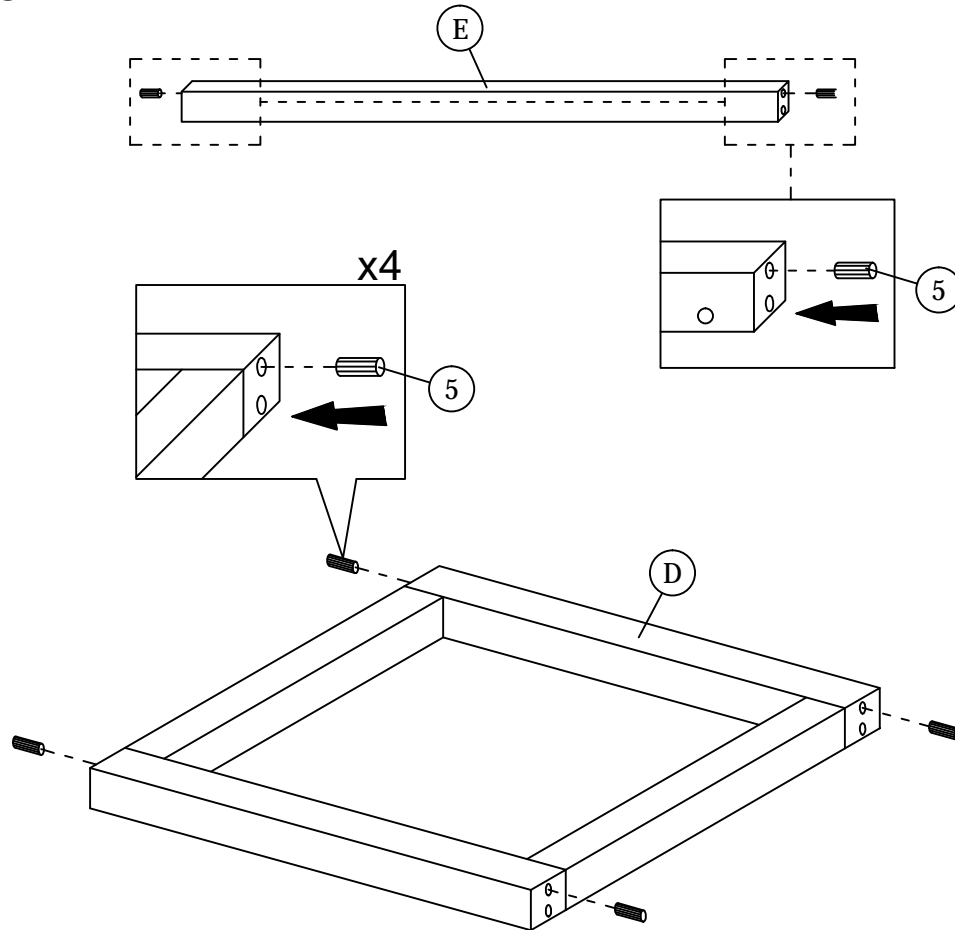


STEP 2

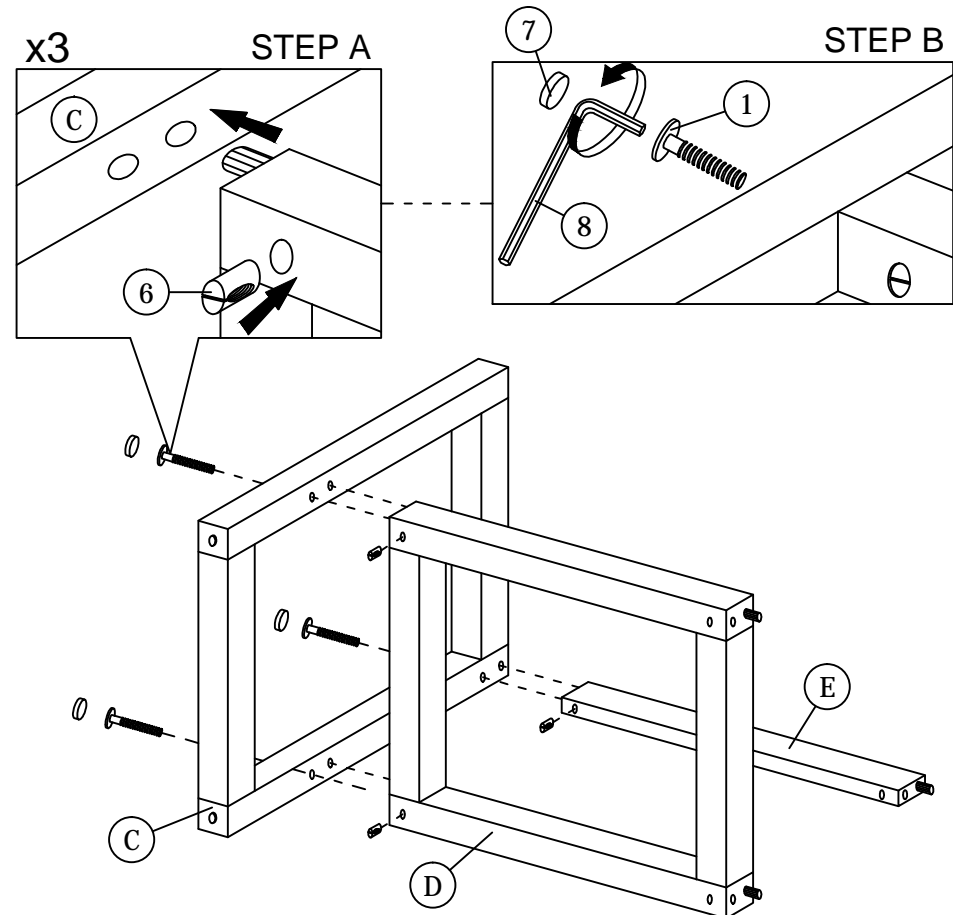

ASSEMBLY INSTRUCTIONS



STEP 3

STEP B

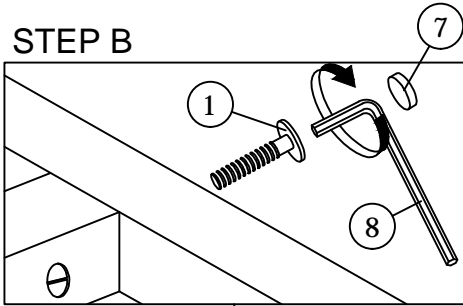



STEP A

x3

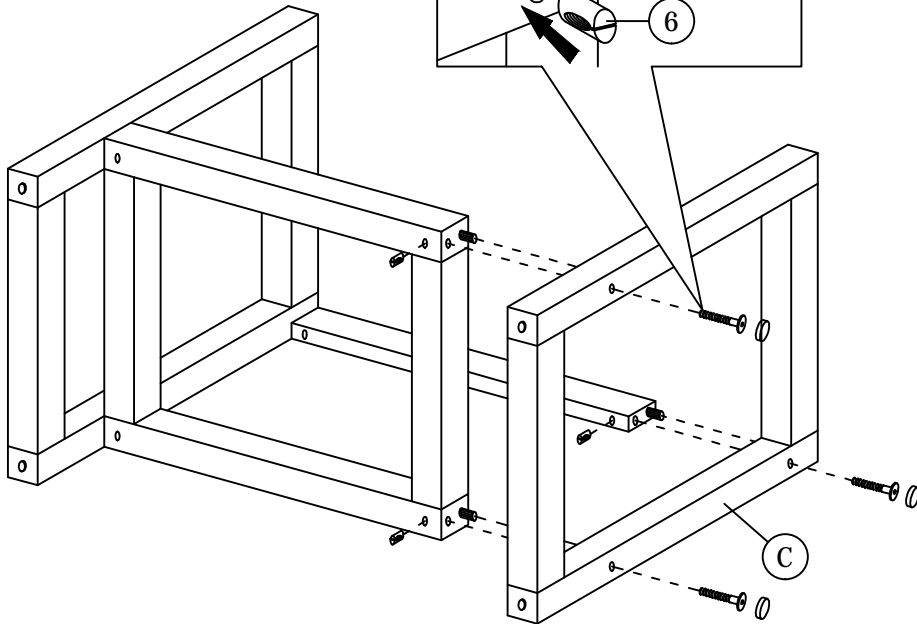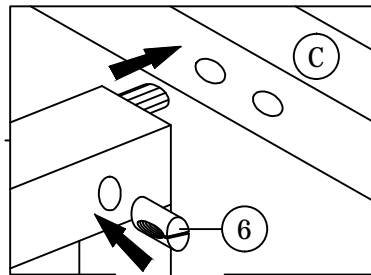

STEP 4


x2

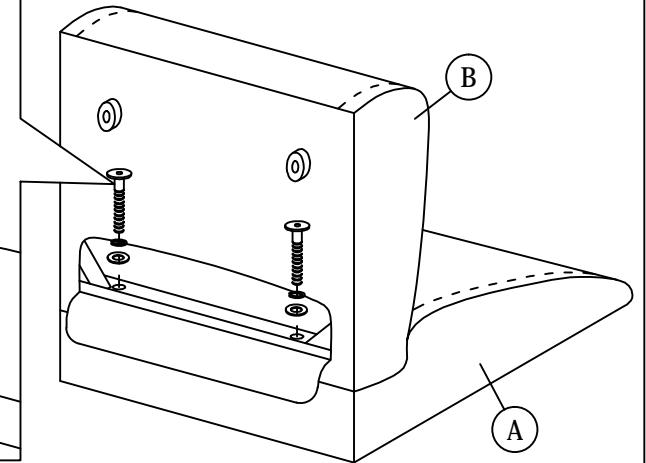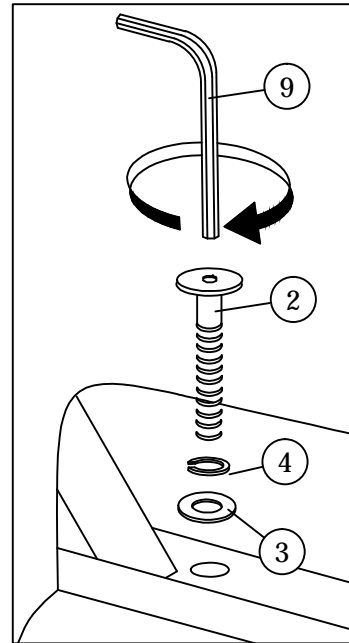

ASSEMBLY INSTRUCTIONS

STEP 5

CUSHION

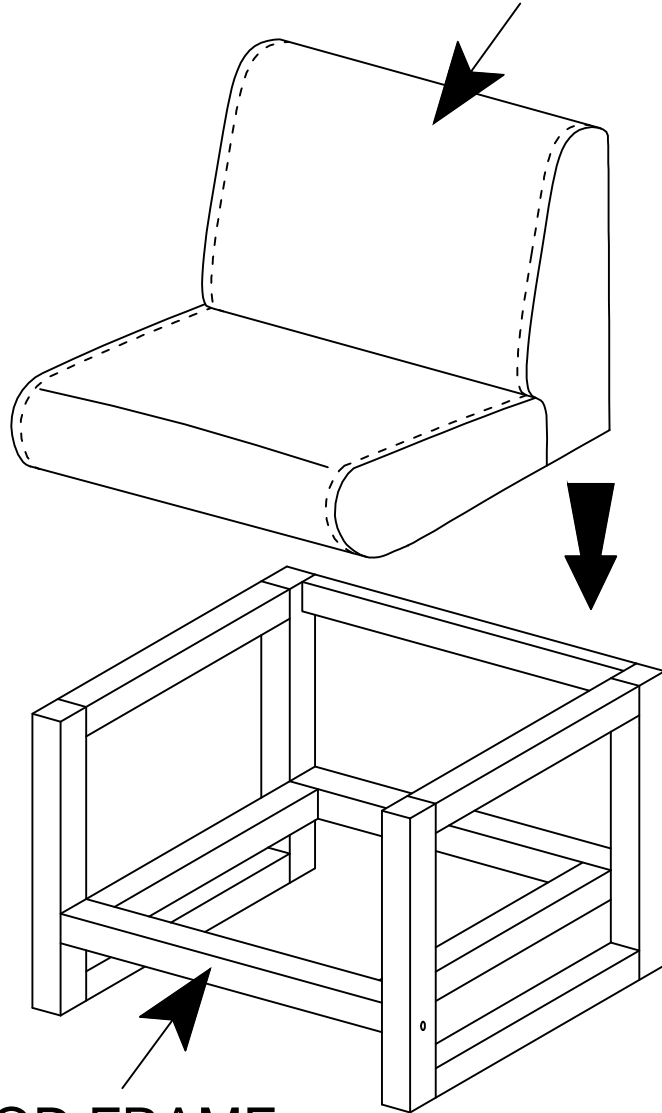

WOOD FRAME

STEP 6

