

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

 


CAUTIONS :

1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.



NOTE :

1. THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY
2. EXTRA M4 ALLEN KEY WERE PROVIDED TO USE FOR TIGHTEN ALL HINGES OF PART C, D AND E


PART LIST		
ITEM	DESCRIPTION	QTY
A	CUSHION BACK	1 PC
B	CUSHION SEAT	3 PCS
C	BOX SEAT	1 PC
D	ARM (L)	1 PC
E	ARM (R)	1 PC
F	LEG	4 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBB Bolt M8 x 70mm 	4pcs
2	M5 ALLEN KEY (BALL SHAPE) 	1pc
3	M4 ALLEN KEY (BALL SHAPE) 	1pc

STEP 1

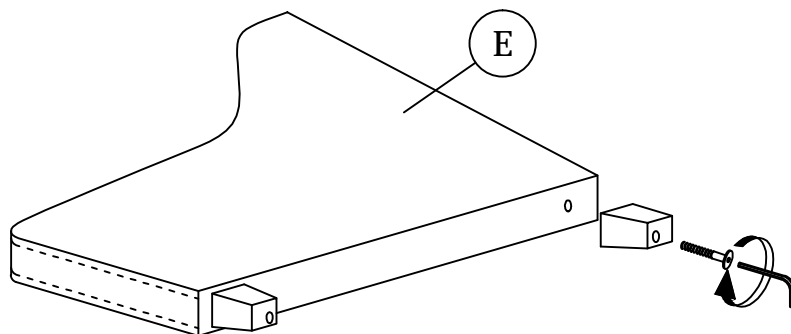
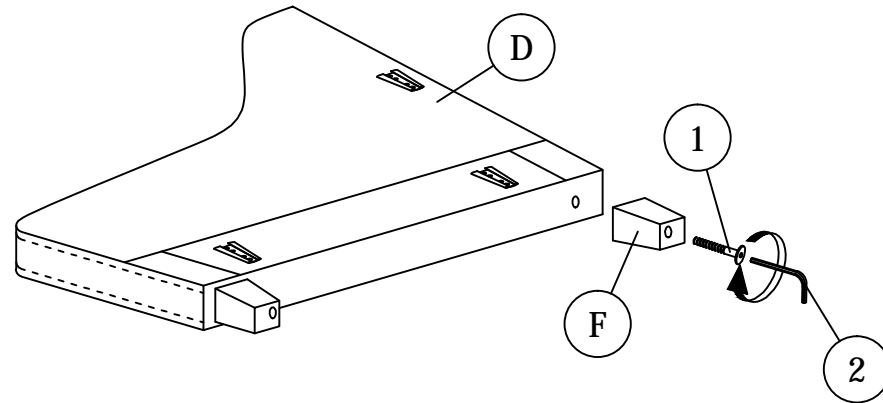


STEP 2

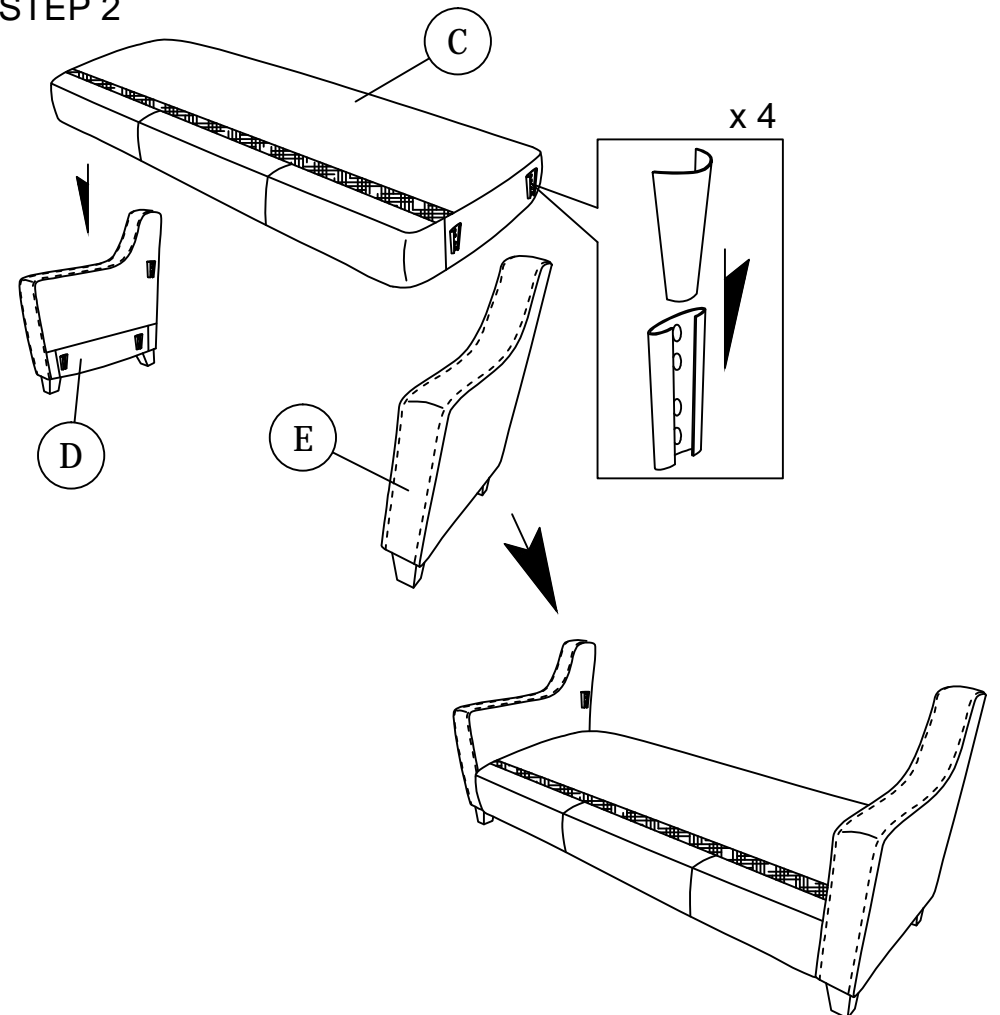

ASSEMBLY INSTRUCTIONS

STEP 3

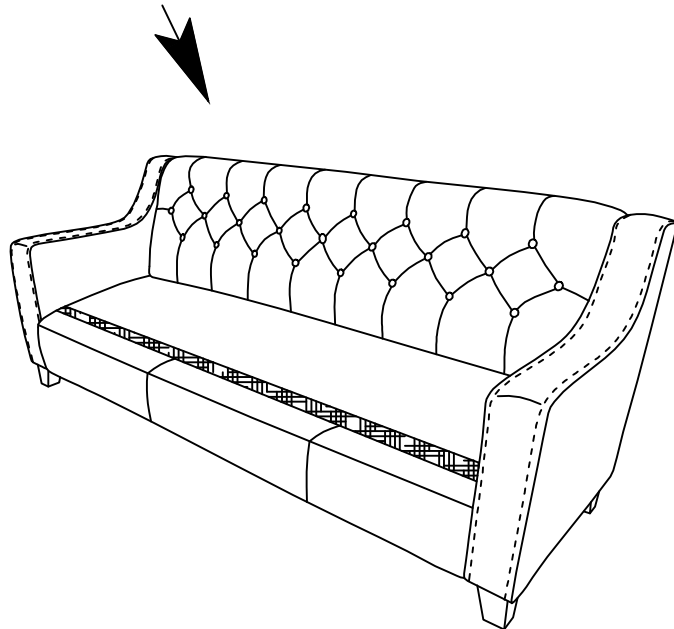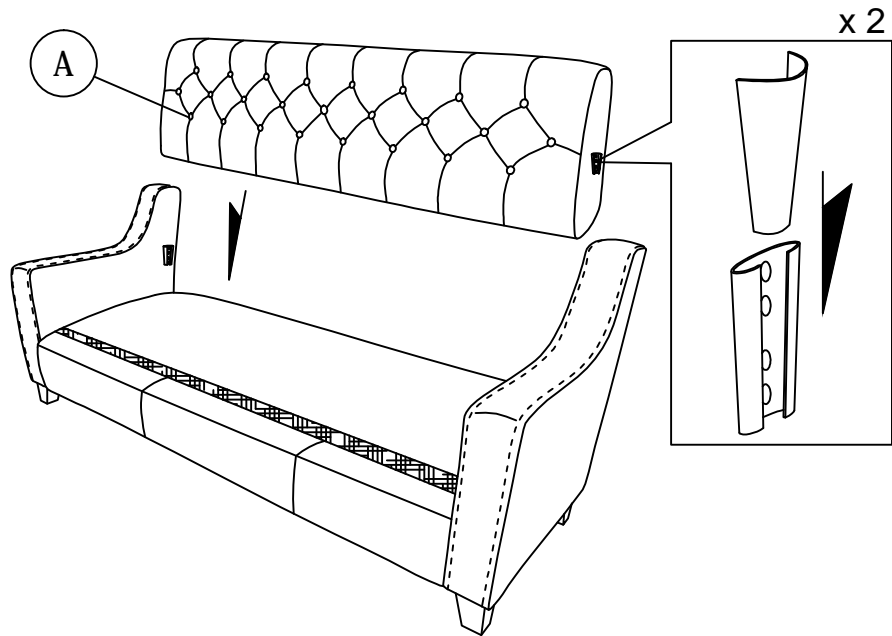

STEP 4

