

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS :

1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed : Screwdriver & Hammer (not provider).


PART LIST		
ITEM	DESCRIPTION	QTY
A	ARM (L&R)	2 PCS
B	BACK	1 PC
C	RAIL	2 PCS
D	SUPPORT WOOD	2 PCS
E	CUSHION BACK	1 PC
F	CUSHION SEAT	1 PC
G	PILLOW	2 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC BOLT M6 x 50mm	12 PCS
2	WOOD SCREW M4 x 32mm	4 PCS
3	M6 SPRING WASHER	12 PCS
4	WOOD DOWEL M10 x 40mm	12 PCS
5	M4 ALLEN KEY (BALL SHAPE)	1 PC


STEP 1

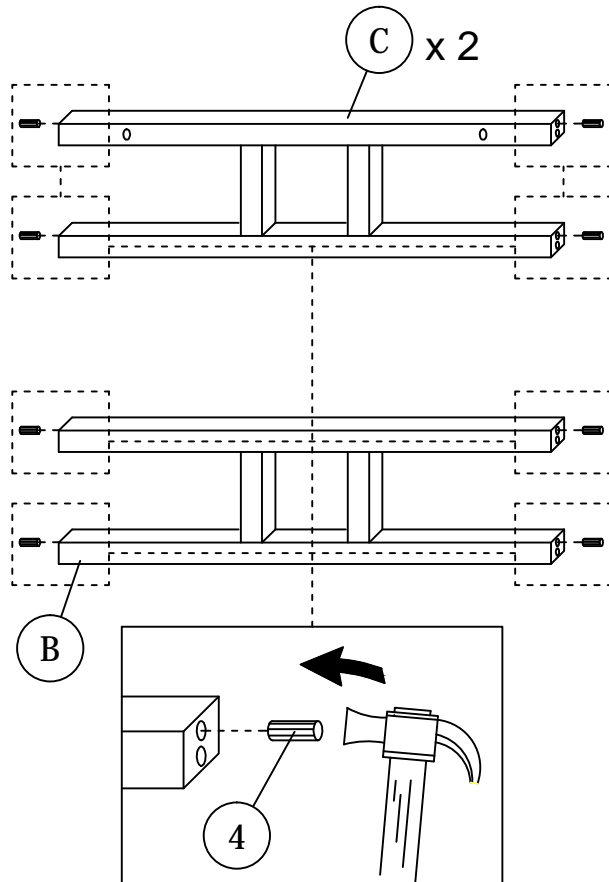

STEP 2

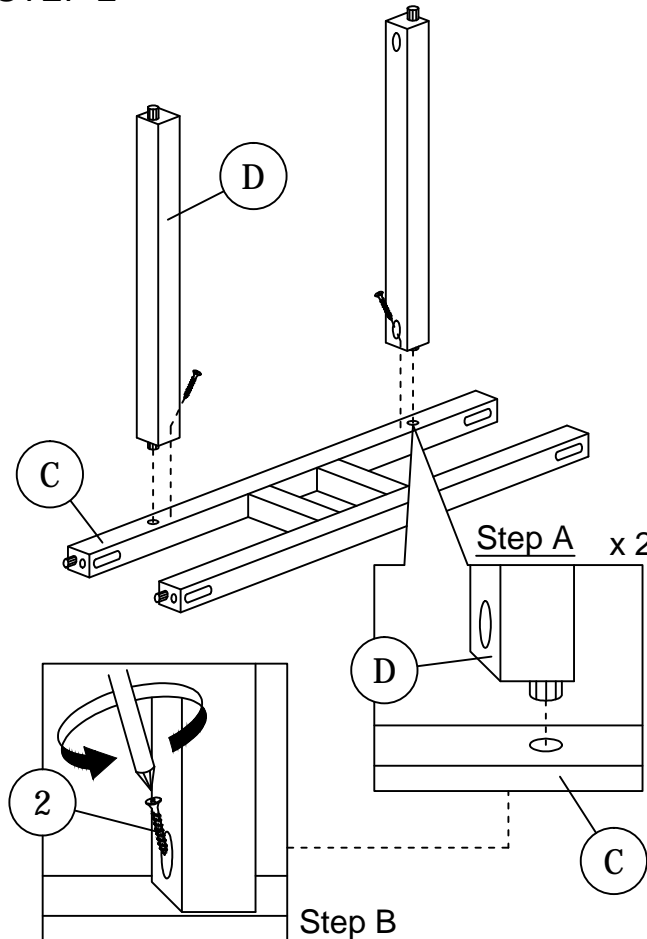


STEP 3

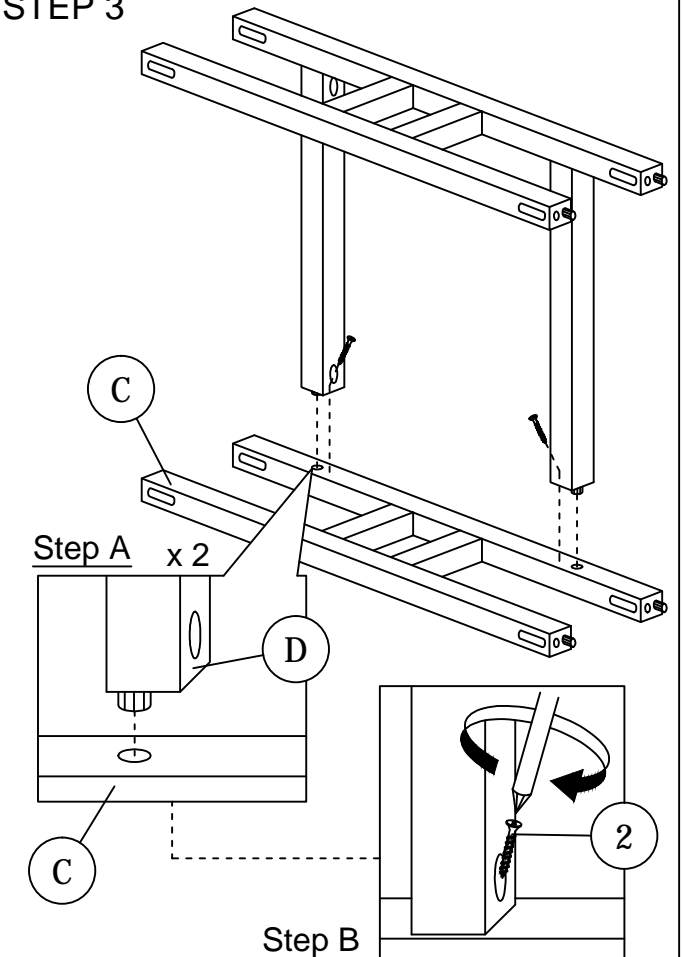


ASSEMBLY INSTRUCTIONS

STEP 4

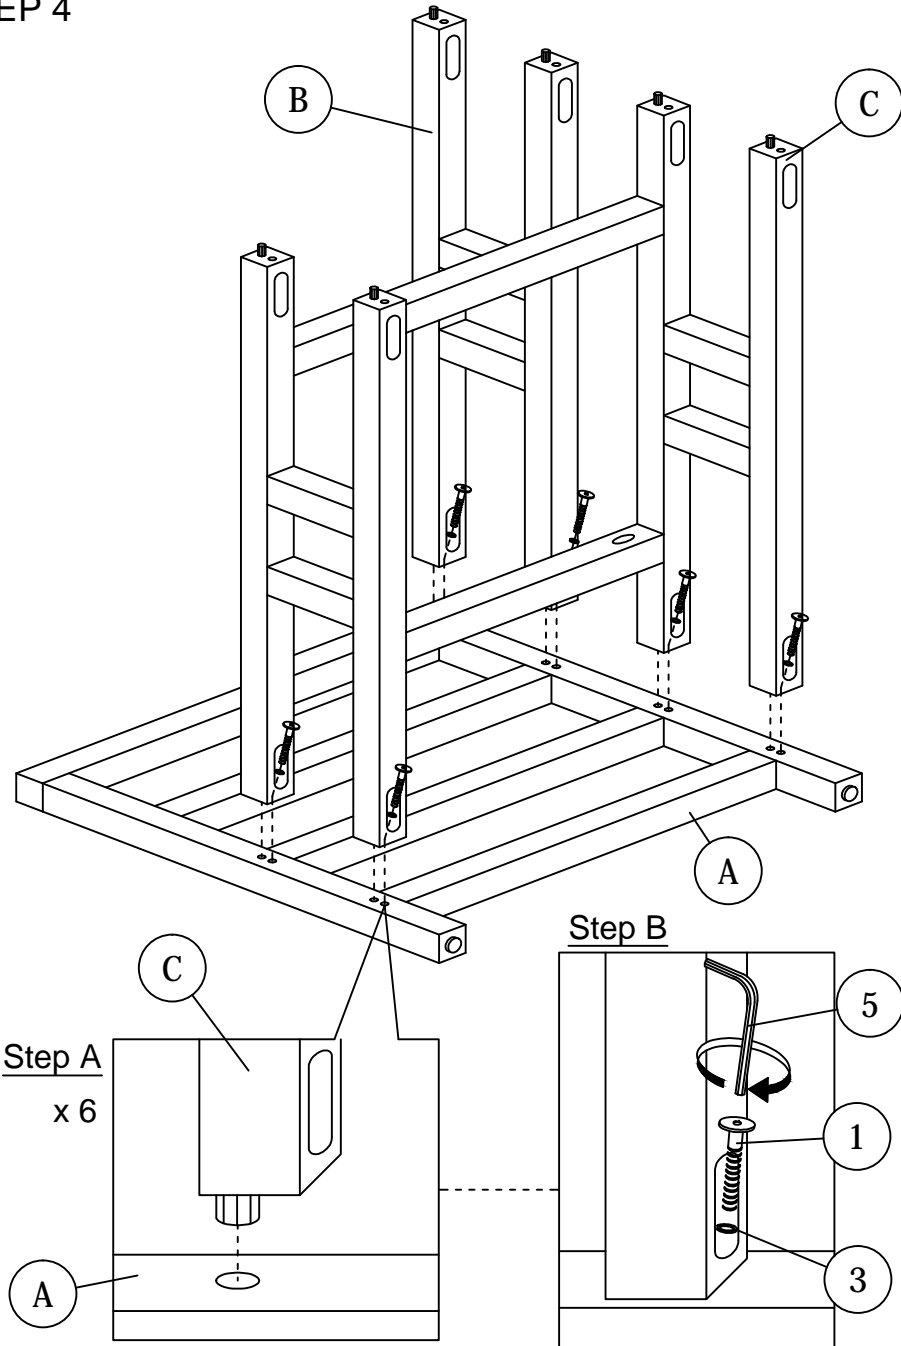


STEP 5

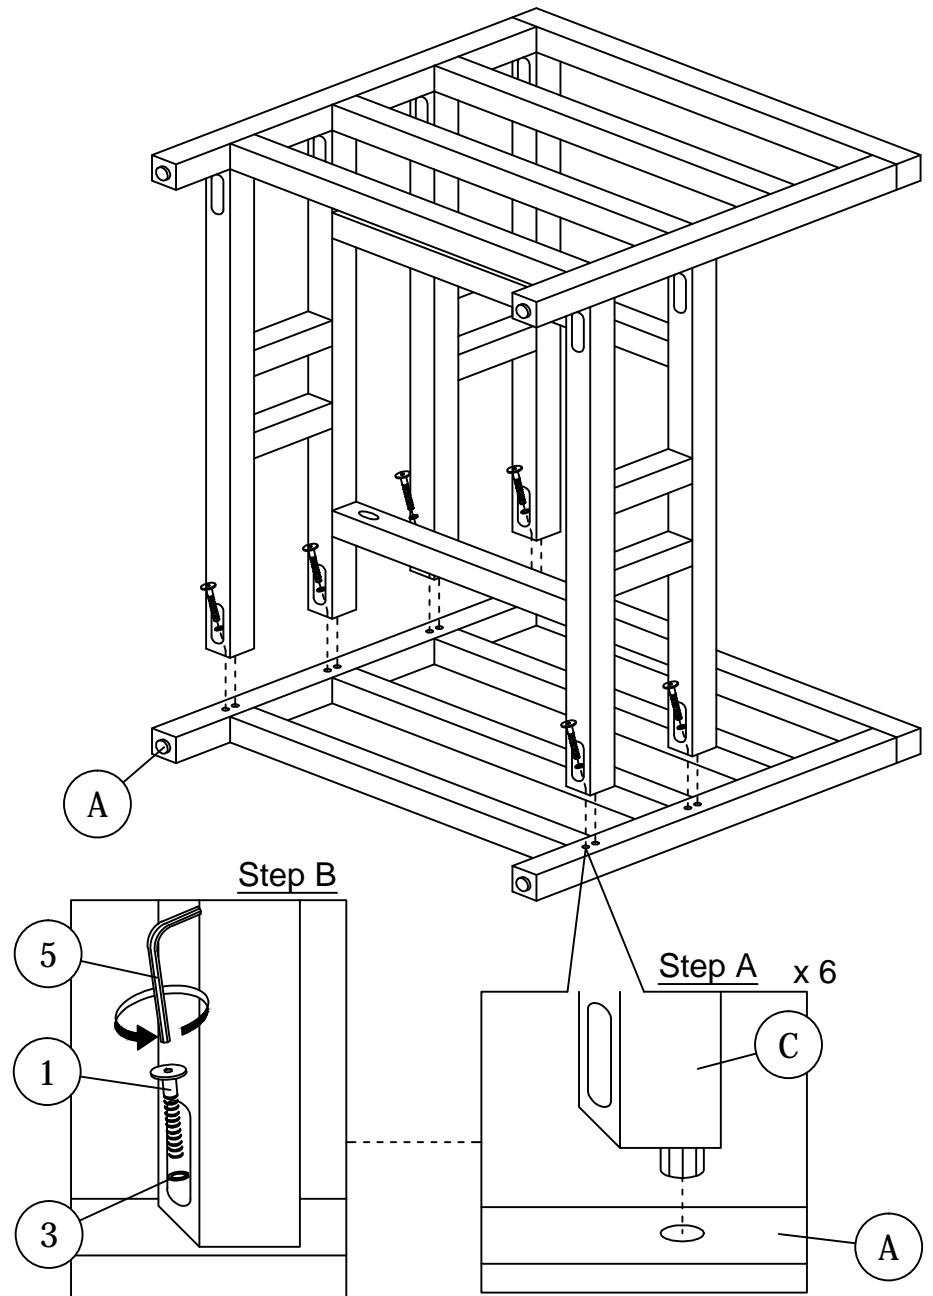

ASSEMBLY INSTRUCTIONS

STEP 6

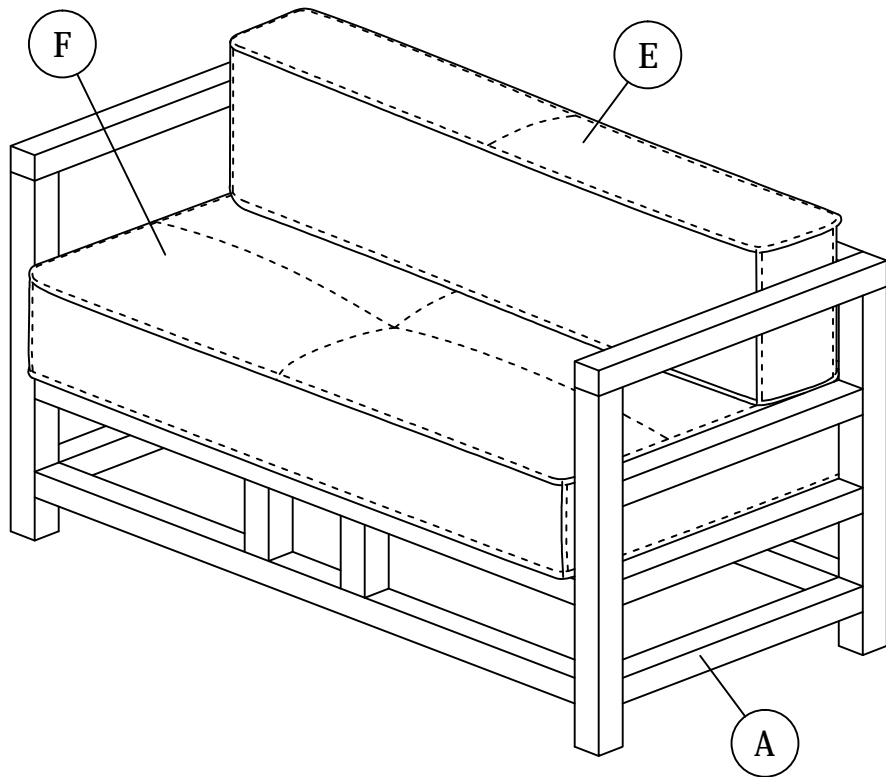

STEP 7

