## **ASSEMBLY INSTRUCTIONS**

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.
- 4. Strictly no power drill to assemble. Use only the screwdrivers for installation to protect the wood frame.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver & Hammer (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	ARM (L&R)	2 PCS	
В	BACK	1 PC	
С	SEAT	1 PC	
D	LEG	2 PCS	
Е	SUPPORT RAIL	2 PCS	
F	CUSHION BACK (L & R)	2 PCS	
G	CUSHION SEAT	3 PCS	
Н	CUSHION ARM	2 PCS	
I	CENTER RAIL	1 PC	
J	CENTER SUPPORT LEG	1 PC	
K	CUSHION BACK (CENTER)	1 PC	

HARDWARE LIST				
ITEM	DESCRIPTION		QTY	
1	JCBC BOLT M6 x 40mm	—(∂	2 PCS	
2	JCBC BOLT M6 x 50mm	enmanar=(-	2 PCS	
3	JCBB BOLT M8 x 45mm	emenec <u>-</u> ()	6 PCS	
4	JCBB BOLT M8 x 60mm	anananac⊏()	4 PCS	
5	M6 FLAT WASHER	0	2 PCS	
6	M6 SPRING WASHER	0	4 PCS	
7	M8 FLAT WASHER	0	6 PCS	
8	M8 SPRING WASHER		10 PCS	
9	WOOD SCREW M4 x 45mm		12 PCS	
10	WOOD DOWEL M10 x 30mm		8 PCS	
11	M4 ALLEN KEY (BALL SHAPE)		1 PC	
12	M5 ALLEN KEY (BALL SHAPE)	<u> </u>	1 PC	











