

 




## ASSEMBLY INSTRUCTION

### MODEL : CHEER DINING CHAIR


Important note: - Place all wooden part on a clean and smooth surface such as rug or carpet to avoid the part from being scratch.  
 - Please follow the assembly instruction step by step.  
 - Do not tighten all screw until the chair is fully set-up.

#### Hardware List


No	DESCRIPTION	QTY.
A	JCBC M6 x 50mm 	12 pcs
B	Spring Washer 	12 pcs
C	CSK M4 x 30mm 	6 pcs
D	Wood Dowel 	8 pcs
E	Allen Key 	1 pc

#### Part List


No	DESCRIPTION	QTY.
1	Back Rest	2 pcs
2	Side Rail	4 pcs
3	Front Leg	2 pcs
4	Cushion	2 pcs

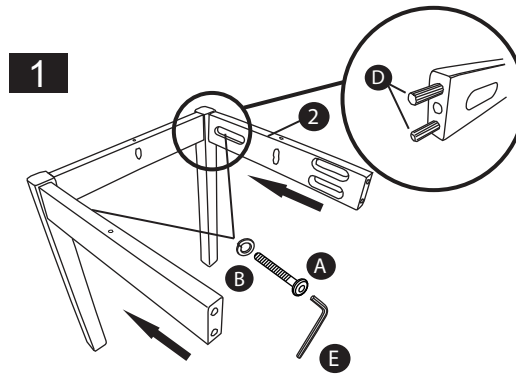


**2**

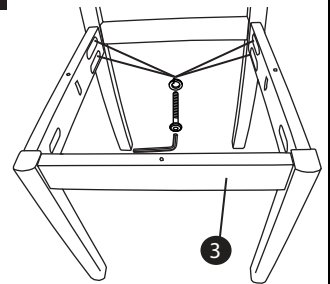

**3**

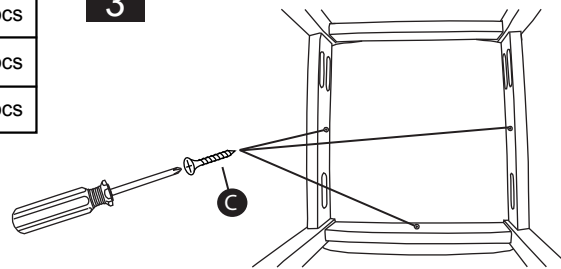

**4**

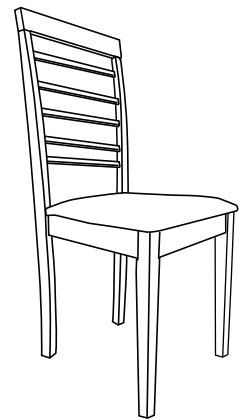 

 
 



## ASSEMBLY INSTRUCTION

### MODEL : CHEER DINING CHAIR


Important note: - Place all wooden part on a clean and smooth surface such as rug or carpet to avoid the part from being scratch.  
 - Please follow the assembly instruction step by step.  
 - Do not tighten all screw until the chair is fully set-up.

#### Hardware List


No	DESCRIPTION	QTY.
A	JCBC M6 x 50mm 	12 pcs
B	Spring Washer 	12 pcs
C	CSK M4 x 30mm 	6 pcs
D	Wood Dowel 	8 pcs
E	Allen Key 	1 pc

#### Part List


No	DESCRIPTION	QTY.
1	Back Rest	2 pcs
2	Side Rail	4 pcs
3	Front Leg	2 pcs
4	Cushion	2 pcs

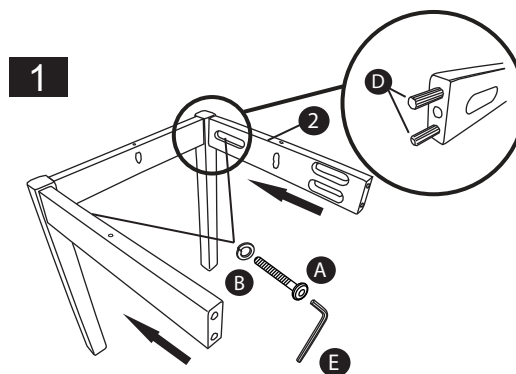

**2**

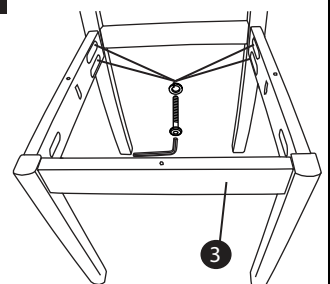

**3**

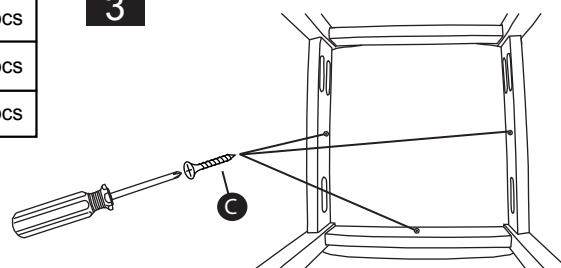

**4**

