



## **ASSEMBLY TIPS**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instructions in the same sequence as as numbered to assure fast and easy assembly.
- 4. Estimated 45 minutes required for assembly.



## Warning!

- Don't attempt to repair or modify parts that are broken or defective Please contact the store immediately.
- $\left|2
  ight.$  This product is for home use only and not intended for commercial establishments.

	FLAT WASHER	4 PCS	SPRING WASHER		ALLEN KEY (M4) 4 PCS		ARE LIST		
	0			В				>	
FRONT RAIL	Chan Chain (FELL)	ARM CHAIR (1 FFT)		1 PC	ARM CHAIR (RIGHT)			1 PC	COMPONENT LIST
			П		Г			D	NT LIS
		SEAT DECK		BACK REST		BACK RAIL			)T

4

WOODEN CAP Ø15.2mm

PAGE 1 OF 2

WOOD DOWEL Ø10 x 30mm

2 PCS

ω

WOOD SCREW 4.0 x 38mm

9 PCS

N

X CHEEN TO

**JCBC** 

M6 x 50mm

12 PCS

6

10 PCS | 5

HARDWARE LIST

