



## **ASSEMBLY TIPS**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instructions in the same sequence as as numbered to assure fast and easy assembly.
- 4. Estimated 45 minutes required for assembly.



## Warning!

- Don't attempt to repair or modify parts that are broken or defective Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

		5 PCS		5 PCS	1 PC		
	0		В			>	
FRONT RAIL	ARM CHAIR (LEFT) 1 PC		1 PC	ARM CHAIR (RIGHT)			COMPONENT LIST
	SEAT DECK	T PC	BACK REST	T PC	BACK RAIL	D IPC	<b>&gt;</b>

4

WOODEN CAP Ø15.2mm

PAGE 1 OF 2

WOOD DOWEL Ø10 x 30mm

2 PCS

FLAT WASHER

ω

WOOD SCREW 4.0 x 38mm

9 PCS

SPRING WASHER

N

X CONTRACTOR

JCBC M6 x 50mm

15 PCS

6

ALLEN KEY (M4)

11 PCS 5

HARDWARE LIST

