

ASSEMBLY INSTRUCTIONS

MODEL : PCH 6811 / 6822 / 6844 / 6874 DINING CHAIR


IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST


NO	DESCRIPTION	QTY
A	JCBC BOLT	6 PCS
B	SPRING WASHER	6 PCS
C	WOOD SCREW	7 PCS
D	ALLEN KEY	1 PC
E	WOOD DOWEL	4 PCS

6811

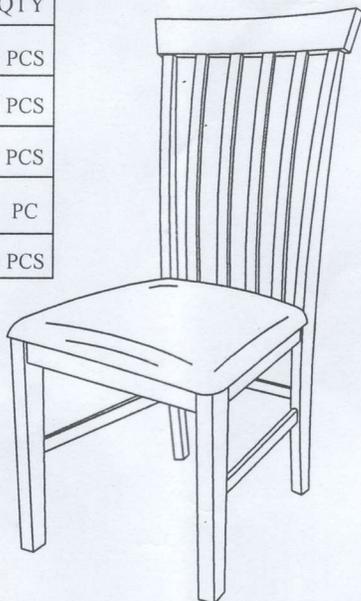


Fully Set-up



STEP 1

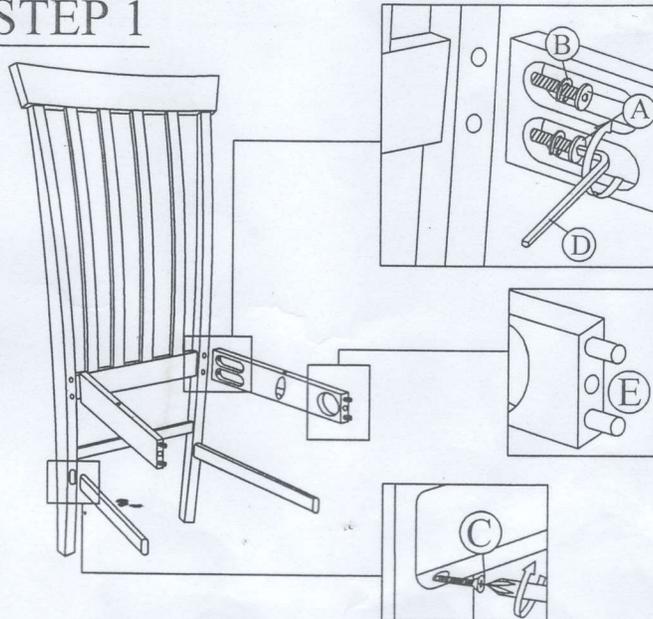

STEP 2

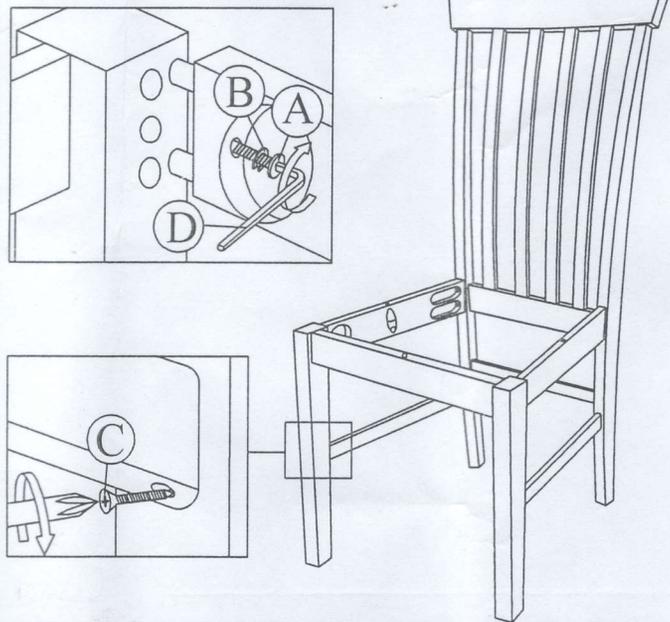


STEP 3

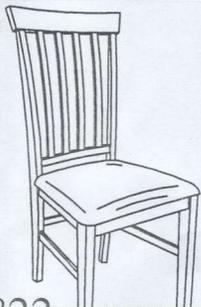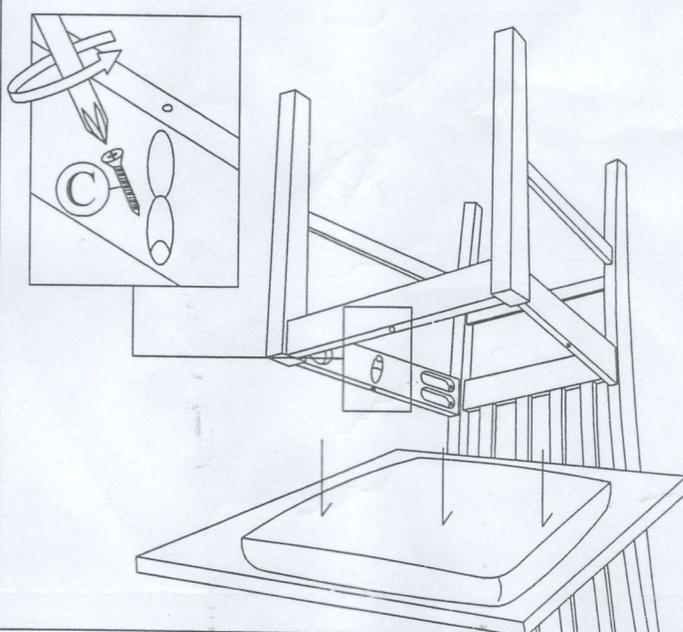

6822



6844

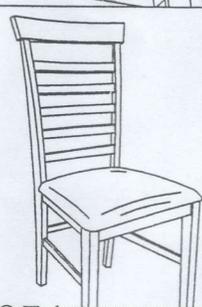

6874