

SOFT, DRY CLOTH

CHEMICAL

HEAT

KEEP DRY

HANDLE WITH CARE

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : WS 883200

DESCRIPTION : KITCHEN CABINET

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
	WOOD DOWEL 8 X 25 1X9	WOOD DOWEL 8 X 40 1X4	CB SCREW M3X12MM 1X4	CB SCREW M3.5X16MM 1X24	CB SCREW M4X25MM 1X8	CB SCREW M4X38MM 1X10	CSK CAP WOOD M6X50MM 1X18	MINIFIX CAP 1X24	L KEY 1X1	J1 J2 4 SETS	DOOR SUPPORT SPRING 1X8	MOON HANDLE 1X5	M1 M2 6 SETS	NAIL 5/8 1X50	FURNITURE GLUE 1X1	SHELF SUPPORT 1X8	MIRROR BRACKET 1X12	DRAWER SLIDE 14" 1 SET

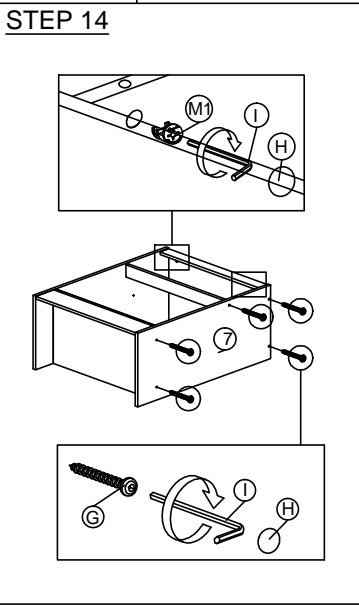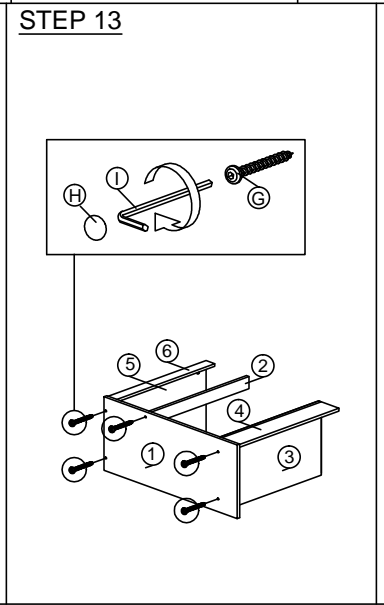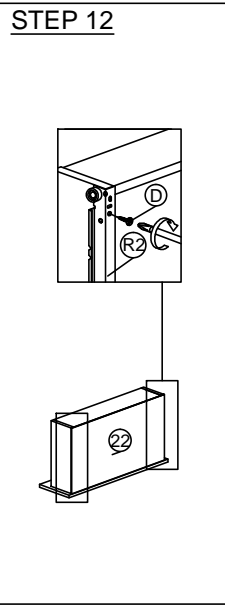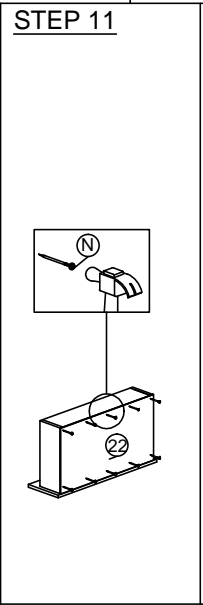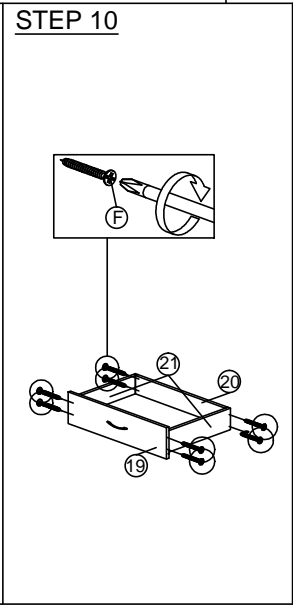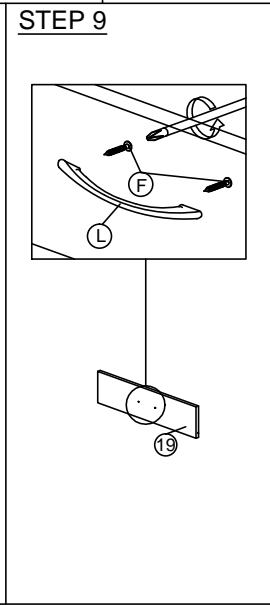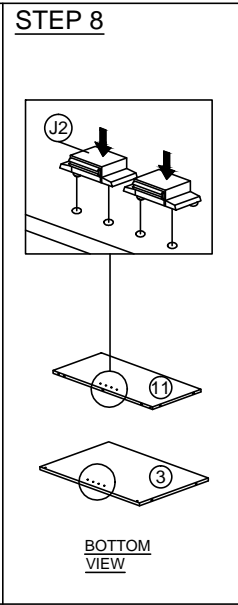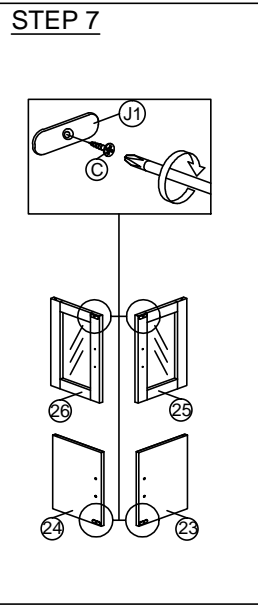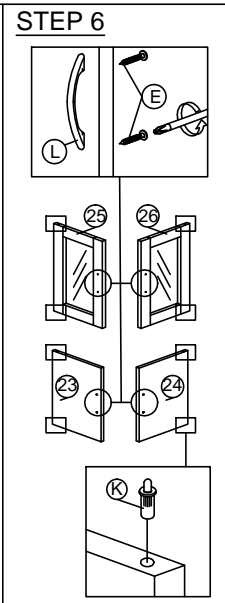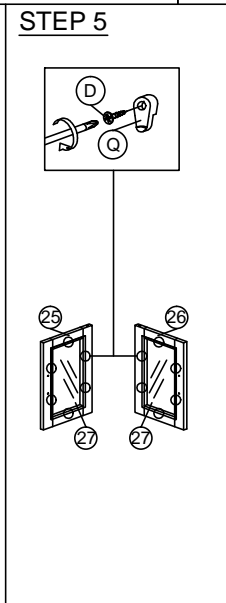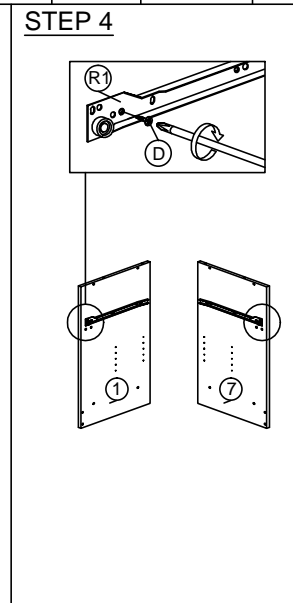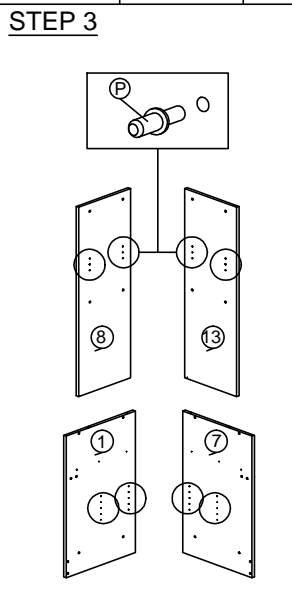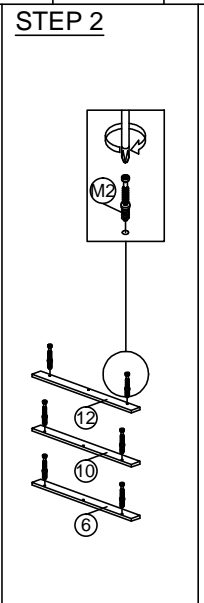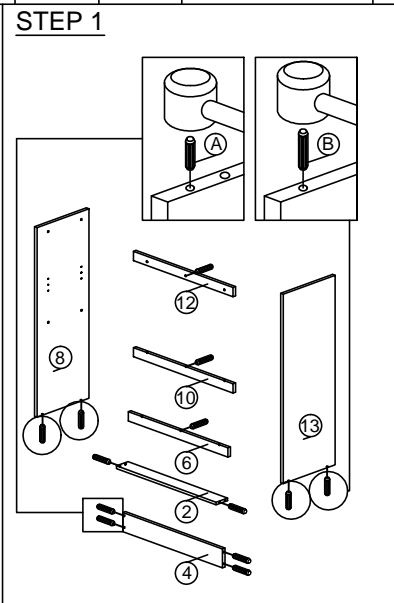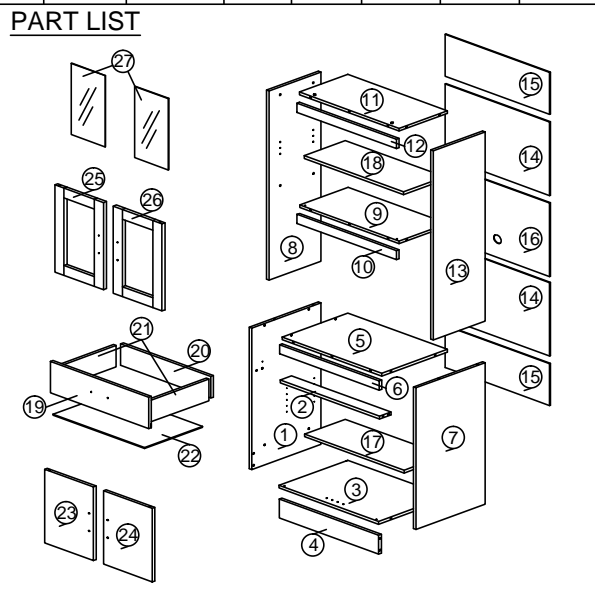




SOFT, DRY CLOTH



 CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION


 
MODEL : WS 883200

DESCRIPTION : KITCHEN CABINET




## PART 1

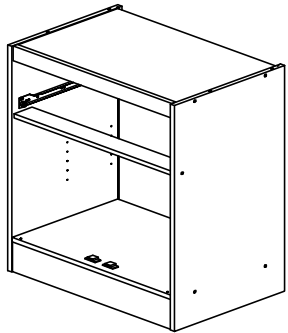


### STEP 15

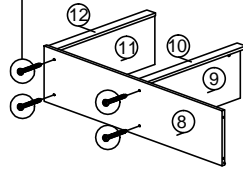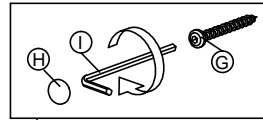  


### STEP 16

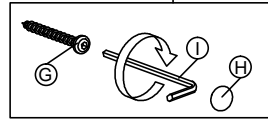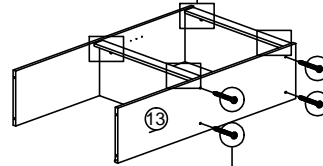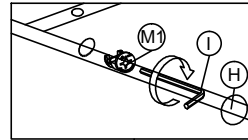   



## PART 2

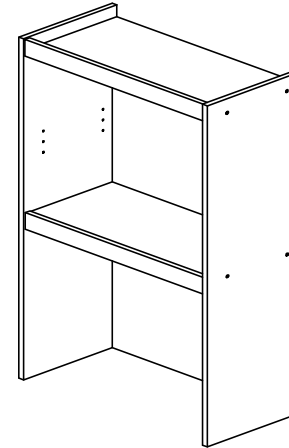 

### COMPLETED

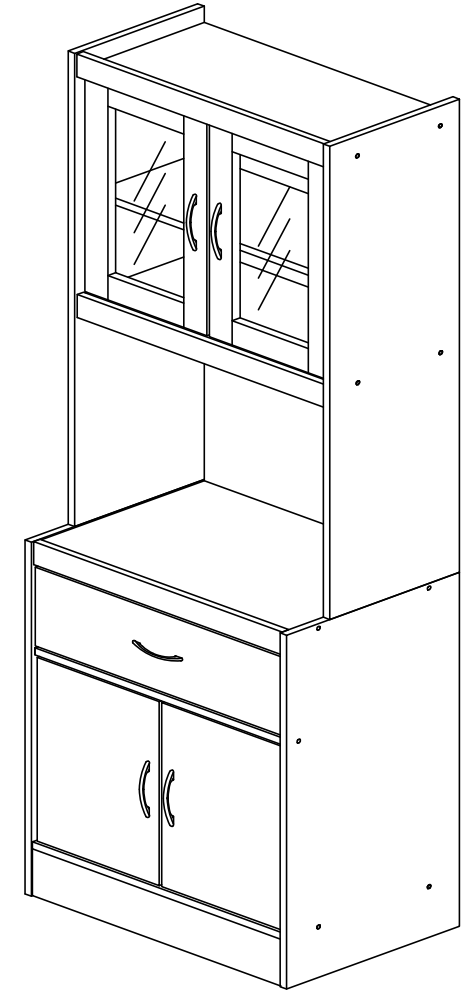 



### STEP 17

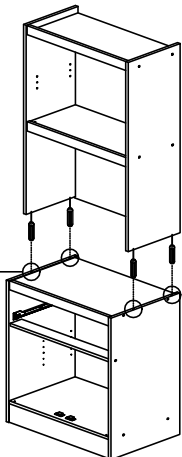  


PART 2

PART 1



### STEP 18

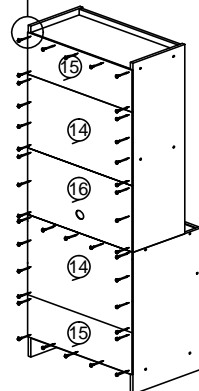  

### STEP 19

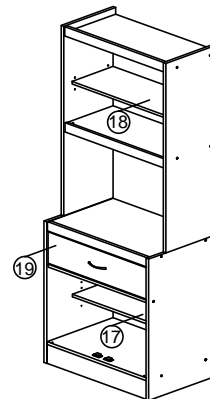 


### STEP 20

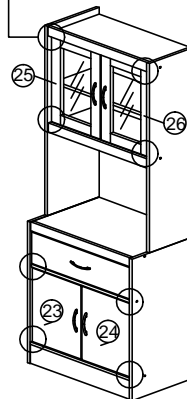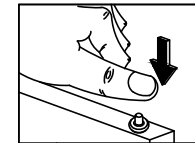  




SOFT, DRY CLOTH

 

CHEMICAL

 

HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : WS 883200

DESCRIPTION : KITCHEN CABINET


ANTI STOPPER

V




WASHER  
X4

W

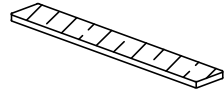

SAFETY STRAP  
X2

X

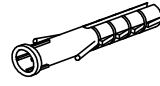


PLASTIC WALL ANCHOR-RED  
X2

Y




CB SCREW  
M3.5X16MM  
X2

Z

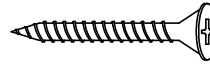



CB SCREW  
M4X38MM  
X2

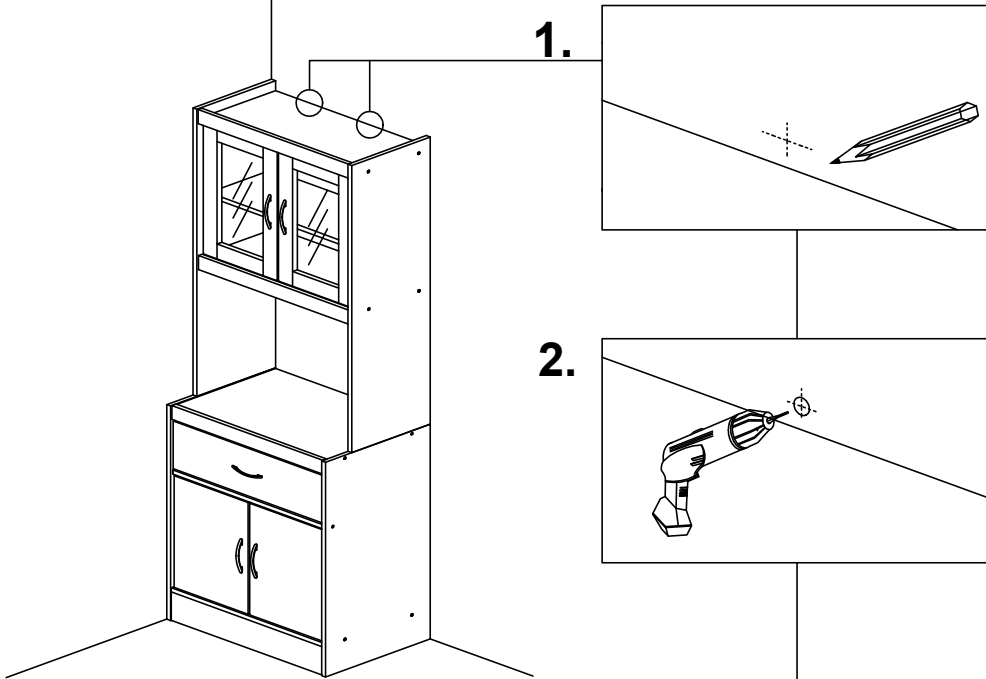 

1.



2.

  3.

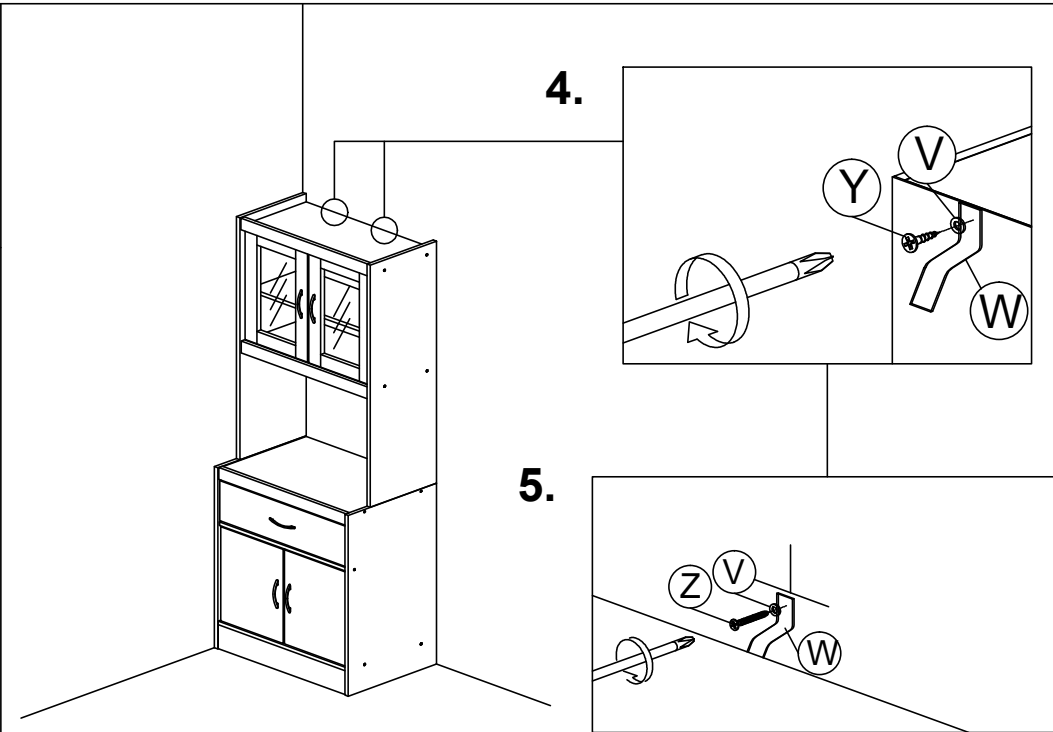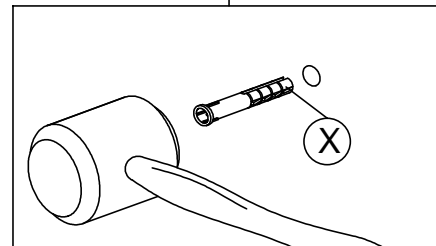

4.

  5.

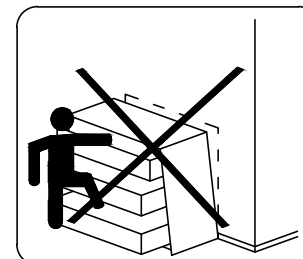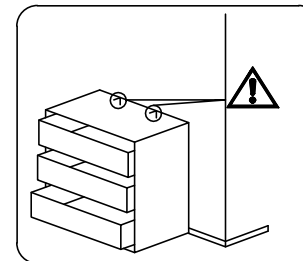

## ⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tip-over:

- Install tip over restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy object on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.  
(OR)
- Do not defeat or remove the drawer interlock system.

Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.

*This is a permanent label. Do not remove.*