
ELSA



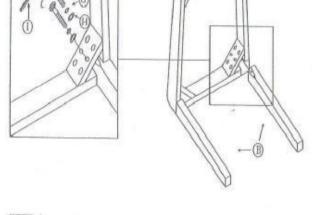

STEP 1

PRODUCT DESCRIPTION

Read instruction carefully. Remove all wrapping material. Staples and straps from the carton. See Hardware and Furniture Part List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture part a clean and flat soft surface, such as carpet or rug to prevent form being scratched.

CAUTION:

CODE

A

В

C

E

F

G

H

KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN

> PART LIST DESCRIPTION

BACK REST

FRONT LEG

SEAT FRAME

JCBC BOLT M6X70MM

JCBC BOLT M6X60MM

JCBC BOLT M6X45MM SPRING WASHER

FLAT WASHER

ALLEN KEY

QTY 1 PC

2 PCS

1 PC

4 PCS

4 PCS

2 PCS


10 PCS

10 PCS

1 PC



www.hinlim.com

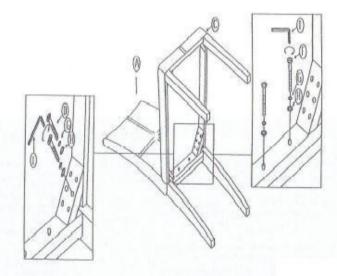

STI	





