

ASSEMBLY INSTRUCTION

MODEL : 3015C

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list
For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION :



1. Do not FULLY - TIGHTEN the nut or screw untill all is ready to assemble.
2. Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.

NO	PART LIST	QTY
A	BACK REST	1 PC
B	FRONT LEG	1 PC
C	SIDE RAIL	2 PCS
D	CUSHION SEAT	1 PC

NO	DESCRIPTION	QTY
1	JCBC SCREW M6 X 50MM	6 PCS
2	WOOD DOWEL Ø8 x 30MM	4 PCS
3	CSK SCREW M4 x 30MM	3 PCS
4	SPRNG WASHER M6	6 PCS
5	M4 ALLEN KEY	1 PC



STEP 1

Attached C to B according to the hole and tighten it using hardware number 1, 2, 4, and 5.

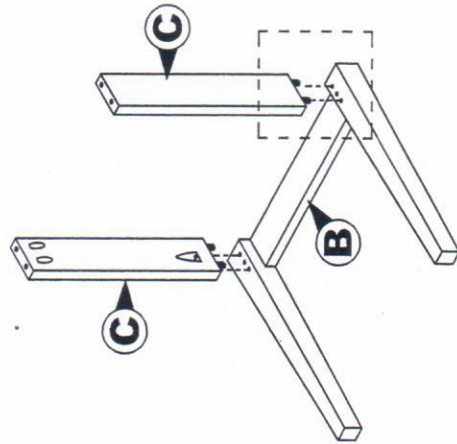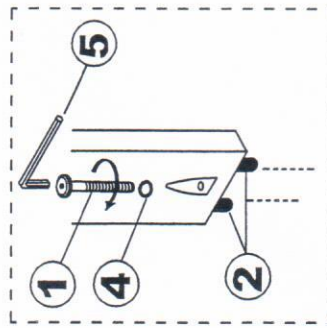


STEP 2

Align the whole part from STEP 1 to A. Tighten the part of C and A using hardware number 1, 4 and 5.

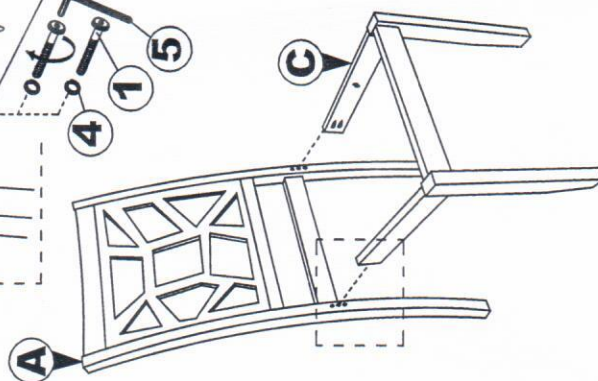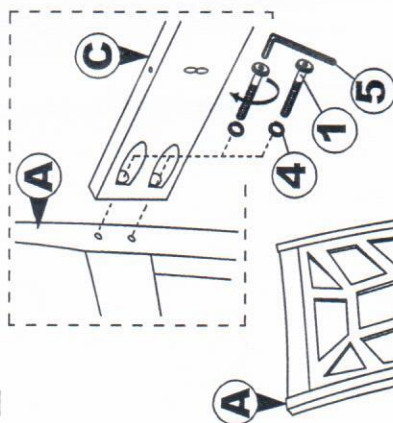


STEP 3

Stick D to the whole assemble part and fully-tighten it with hardware number 3.

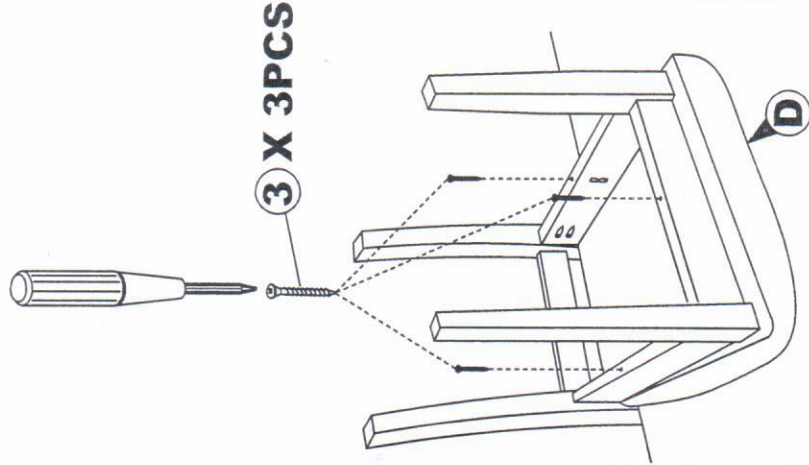

STEP 4

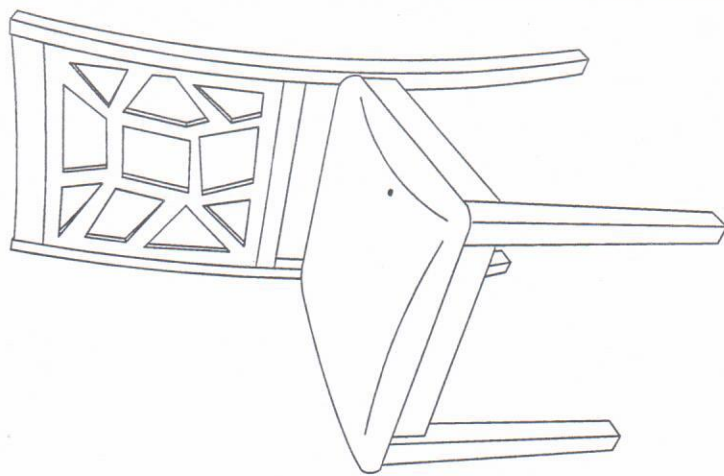

COMPELETE ASSEMBLE

ASSEMBLY INSTRUCTION

MODEL : PCH 305 SQ (S3)


Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

PART LIST

A	TABLE TOP	1 PC
B	TABLE LEGS	4PCS

HARDWARE LIST

C	JCBC BOLT	8 PCS
D	FLAT WASHER	8 PCS
E	ALLEN KEY	1 PC
F	SPRING WASHER	8 PCS

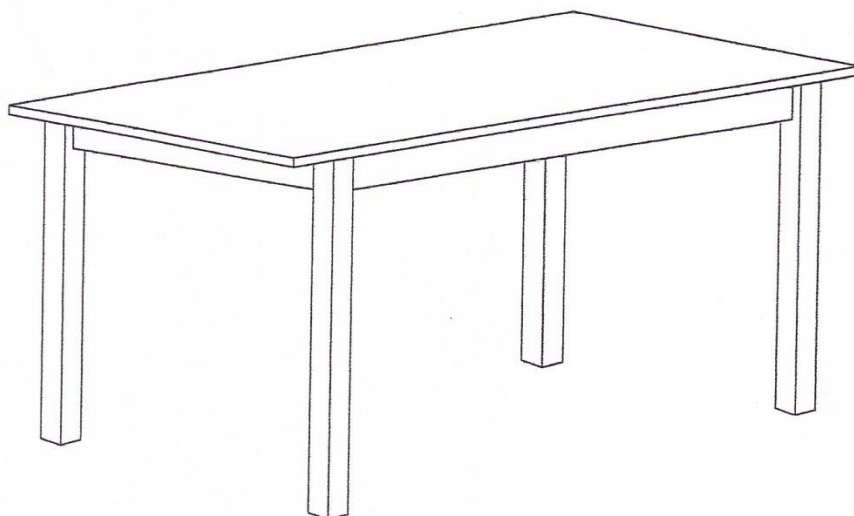

IMPORTANT NOTE : PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH HEX SCREW (C) SPRING WASHER (F). AND FLAT WASHER (D). THEN TIGHTEN THE HEX SCREW(C) BY USING THE HEX WRENCH(E).

