## **ASSEMBLY INSTRUCTION**

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list


For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

## Caution:

- 1.Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2.Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

NO	PART LIST	QTY
Α	BACK REST	1
В	FRONT LEG	1
С	SIDE RAIL	2
D	CUSHION SEAT	1

NO	DESCRIPTION		QTY
1	JCBC SCREW M6 X 50MM	9	6
2	WOOD DOWEL		4
3	CSK SCREW M4 x 30mm	t	3
4	SPRING WASHER		6
5	M4 ALLEN KEY	_	1

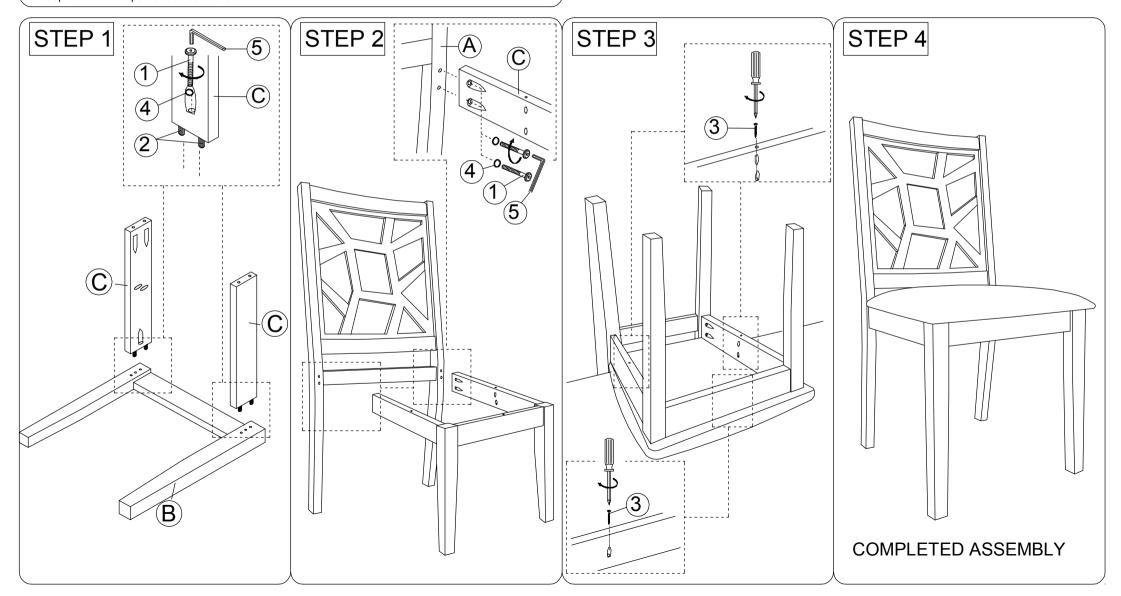

## **ASSEMBLY INSTRUCTIONS**

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

## Caution:

- 1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

PART LIST				
No.	DESCRIPTION	QTY		
Α	TABLE TOP	1		
В	TABLE LEG	4		

$\overline{}$			$\overline{}$		
	HARDWARE LIST				
No.	DESCRIPTION		QTY		
1	FLAT WASHER 6/19"	0	8		
2	SPRING WASHER 6/13"		8		
3	JCBC SCREW M6 X 70MM		8		
4	M4 ALLEN KEY		1		

