ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

		PART LIST		
۱؛	ITEM	DESCRIPTION	QTY	
	A	FRONT LEG	3 PCS	
	В	BACK LEG	3 PCS	
	C	BENCH	1 PC	
	D	CENTER SUPPORT	4 PCS	
	E	CENTER RAIL	3 PCS	

HARDWARE LIST				
ITEM	DESCRIPTION	QTY		
1	JCBC BOLT M6 x 50mm	12 PCS		
2	M6 FLAT WASHER	12 PCS		
3	M6 SPRING WASHER	12 PCS		
4	WOOD SCREW M4 x 45mm	14 PCS		
5	M4 ALLEN KEY (BALL SHAPE)	1 PC		

- CAUTIONS: 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.
 - 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
 - 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver (not provider).





