ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

- CAUTIONS: 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.
 - 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
 - 3. Keep all hardware parts out of reach of children.
 - Strictly no power drill to assemble. Use only the screwdrivers for installation to protect the wood frame.

	PART LIST		
ITEM	DESCRIPTION	QTY	
Α	ARM (L/R)	2 PCS	
В	FRONT RAIL	1 PC	
С	BACK RAIL	1 PC	
D	BACK SUPPORT RAIL	1 PC	
Е	CUSHION BACK	1 PC	
F	CUSHION SEAT	1 PC	

١	HARDWARE LIST				
┪	ITEM	DESCRIPTION	QTY		
┪	1	WOOD DOWEL M10 x 30mm	9 PCS		
┥	2	WOOD BUTTON DIA 13.5 x 9mm	2 PCS		
4	3	JCBB BOLT M8 x 50mm	9 PCS		
┙	4	M8 FLAT WASHER	3 PCS		
╛	5	M8 SPRING WASHER	9 PCS		
	6	WOOD SCREW M4 x 38mm	6 PCS		
٦	7	M5 ALLEN KEY (BALL SHAPE)	1 PC		
_					

NOTE: 1. THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY





