ASSEMBLY INSTRUCTION

MODEL : 310P


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION :

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	PART LIST	QTY	NO	DESRIPTION		QTY
А	BACK REST	1 PC	1	JCBC SCREW M6 X 50MM	0	6 PCS
В	FRONT LEG	1 PC	2	CSK SCREW M4 x 38MM	O.man	4 PCS
С	SIDE RAIL	2 PCS	3	CSK SCREW M4 x 30MM	arman a	3 PCS
D	CUSHION SEAT	1 PC	4	WOOD DOWEL Ø8 x 30MM	M	4 PCS
E	SRETCHER	2 PCS	5	SPRNG WASHER M6	0	6 PCS
			6	M4 ALLEN KEY		1 PC

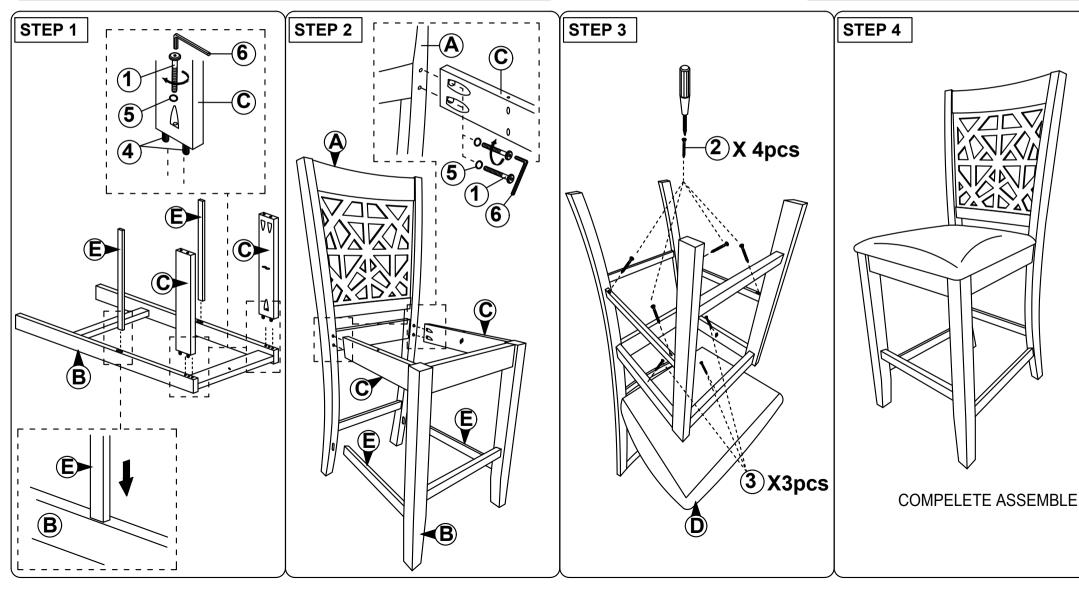

ASSEMBLY INSTRUCTION 900 x 900MM

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION :

- 1. Do not FULLY TIGHTEN the nut or screw until all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damage to the thread.
- 3. Keep all hardware part out of reach of children at all times.

NO	PART LIST	QTY
А	TABLE TOP	1 PC
В	TABLE LEG	4 PCS

NO	DESRIPTION		QTY
1	HEX.COM SCREW 5 / 16" X 80MM	(Janaanaanaanaanaanaanaanaanaanaanaanaana	8 PCS
2	FLAT WASHER 5 / 16"	0	8 PCS
3	SPRING WASHER 5 / 16"	Ø	8 PCS
4	SPANNER 12.8	S	1 PC

