



Assembly Instructions

Model: TV 8010


Part List	QTY
1 Top Panel	1
2 Left Side Panel	1
3 Right Side Panel	1
4 Middle Panel(R)	1
5 Middle Panel(L)	1
6 Middle Support Panel	1
7 Door Panel	2
8 Bottom Panel	1
9 Back Panel	2
10 Plastic Legs	6

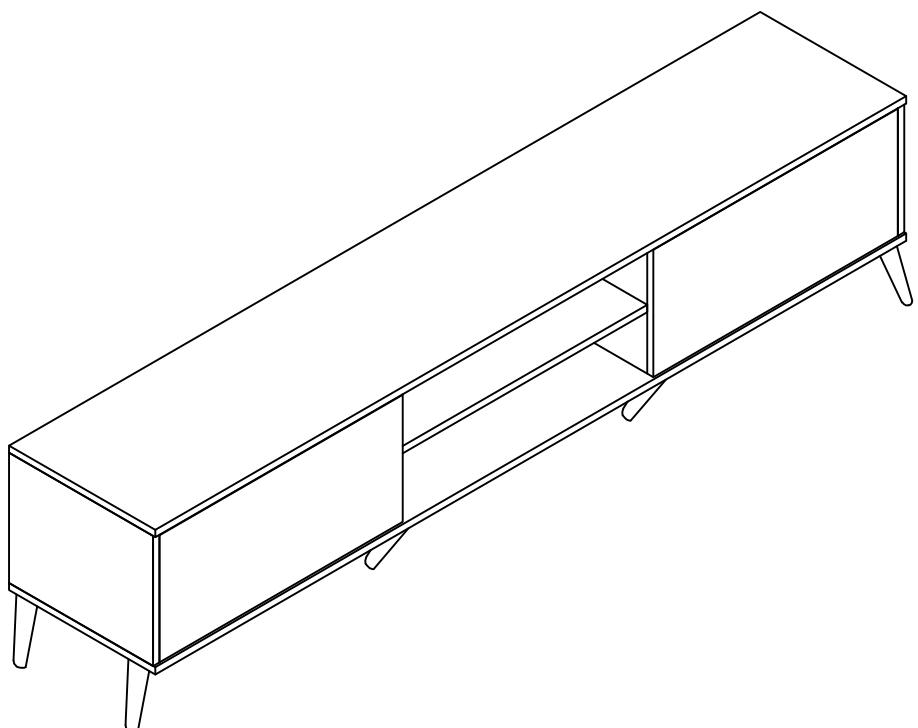


Hardware	QTY
A Allen Key M4	1
B Wood Dowel	28
C JCBC W Screw M6x40	12
D Mini Fix Bolt	12
E Mini Fix Housing	12
F Mini Fix Cap	12
G CSK Screw M3.5x16mm	24
H CSK Screw M3.5x12mm	2
I Magnet Plate	2
J Magnet	2
K Door Support	4

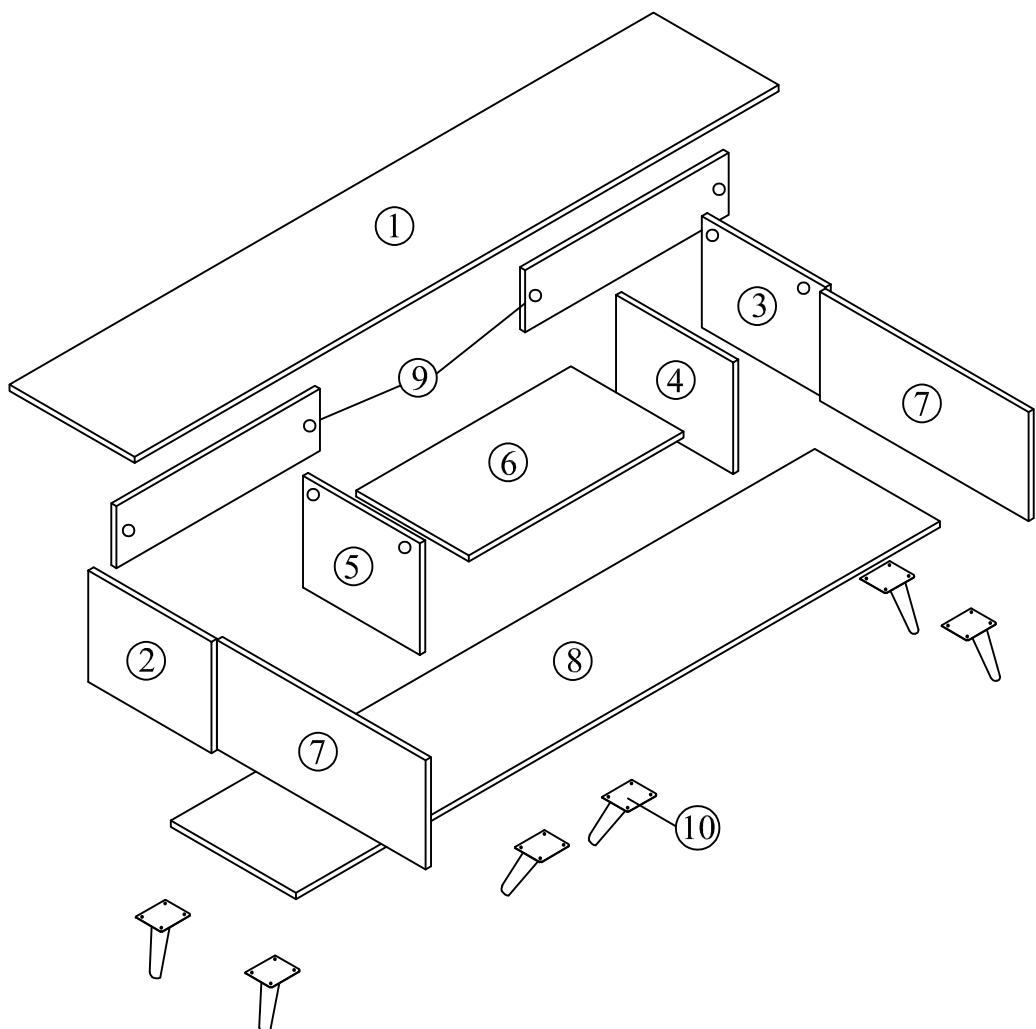


Step 1

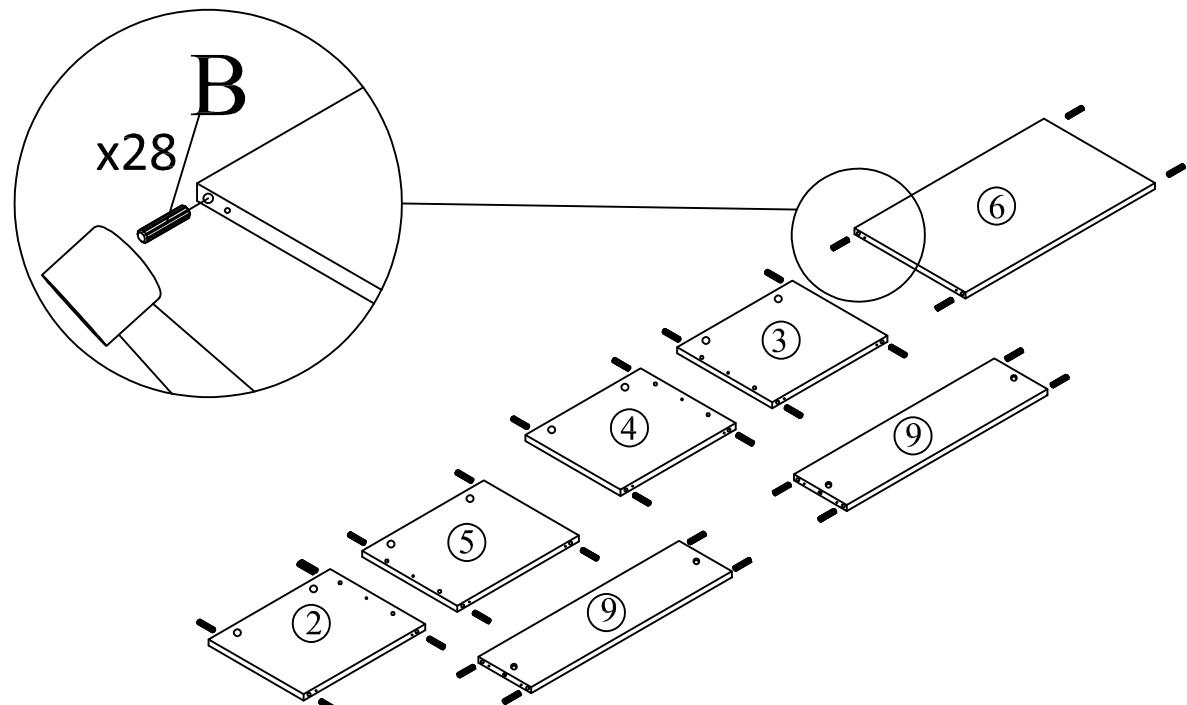


Step 2

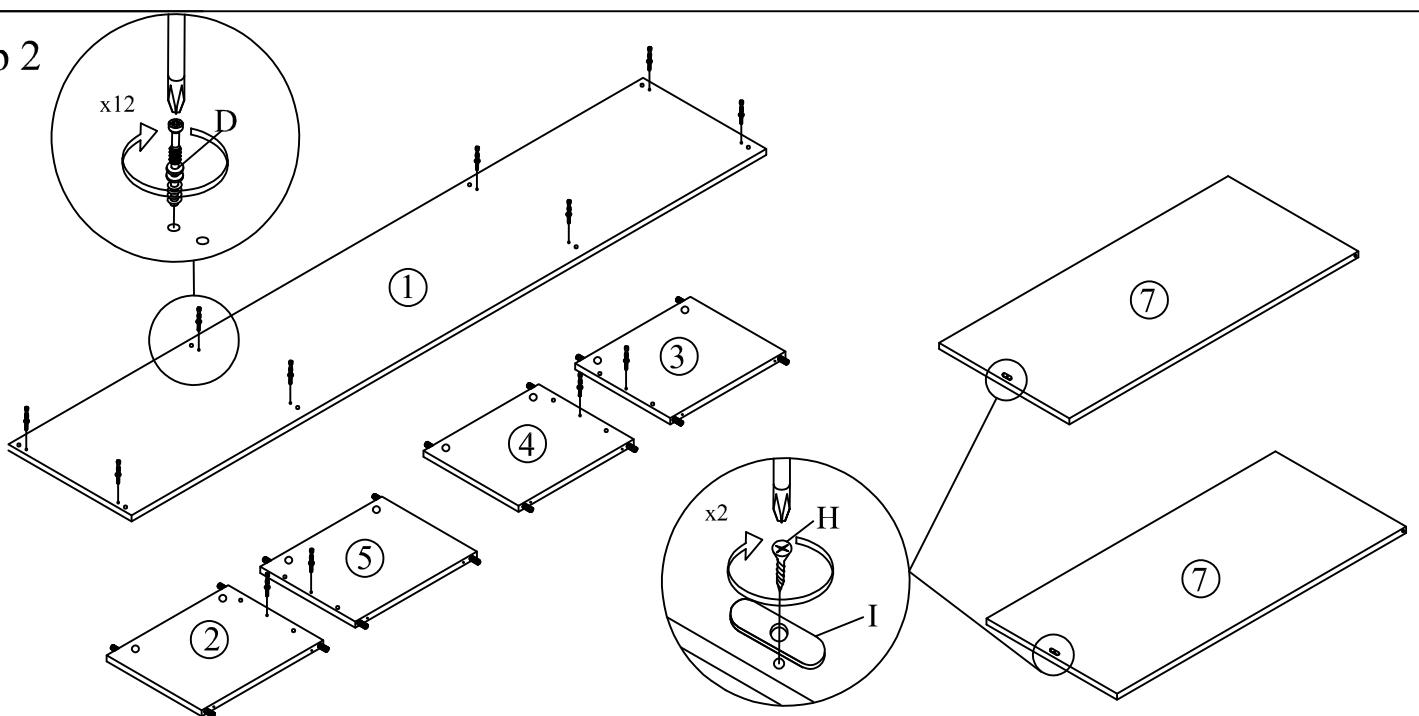


Step 3

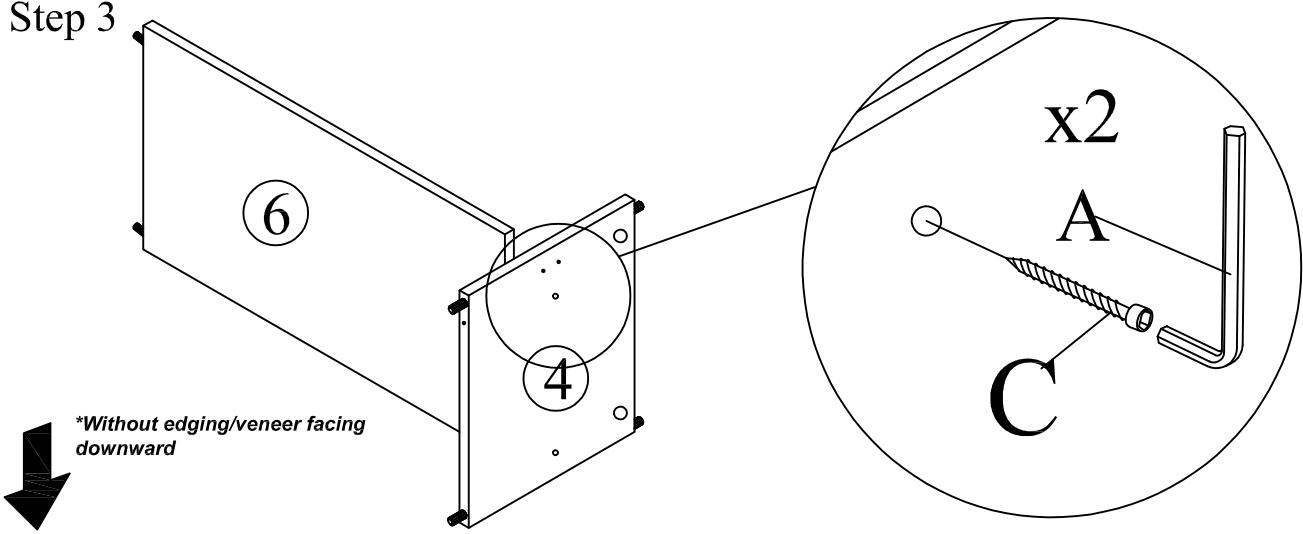


Step 4

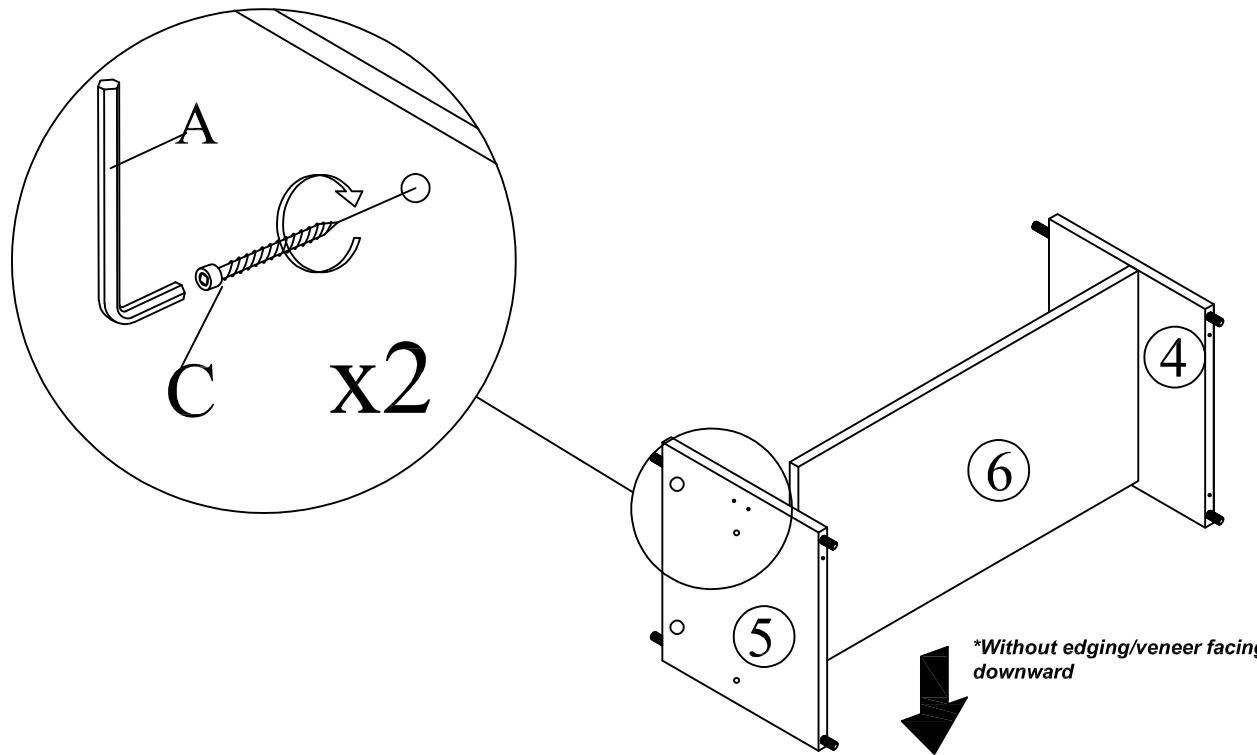

Step 5

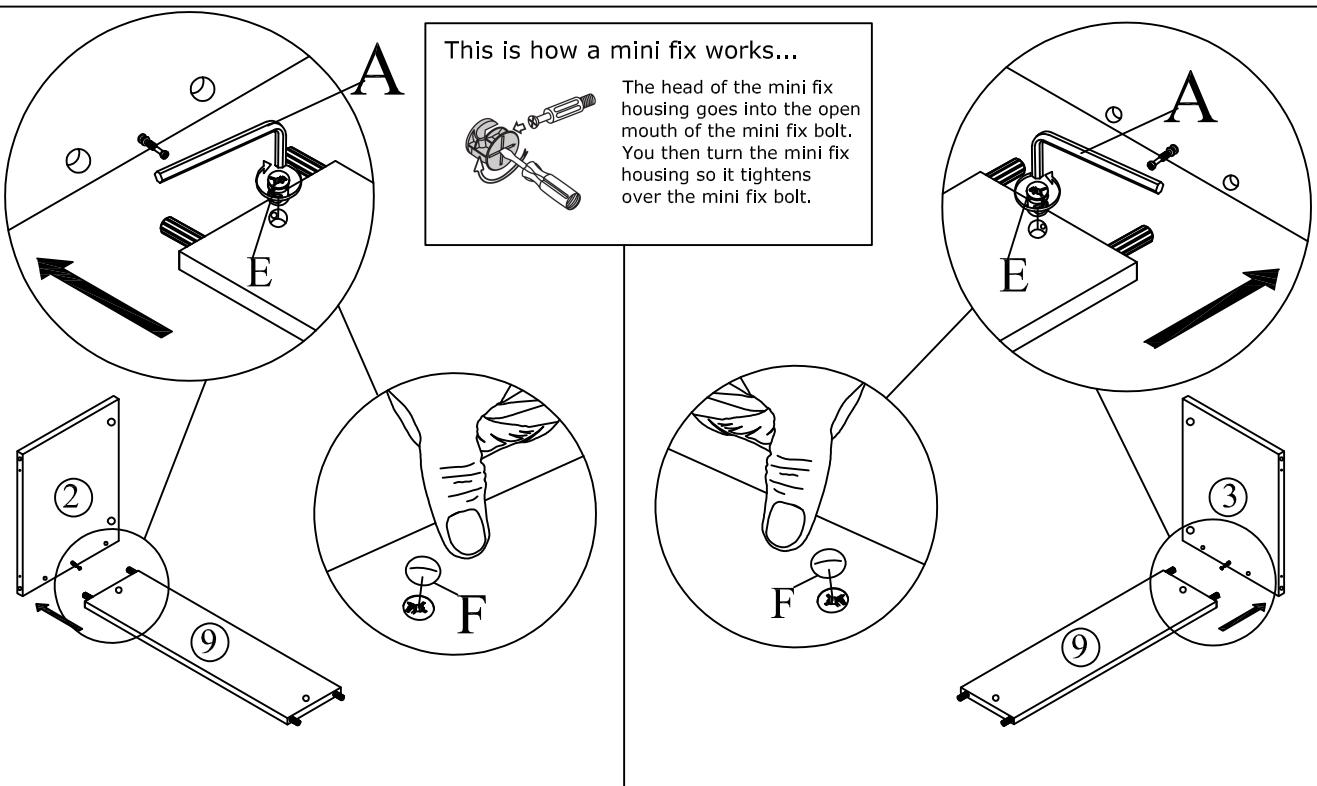

Step 6

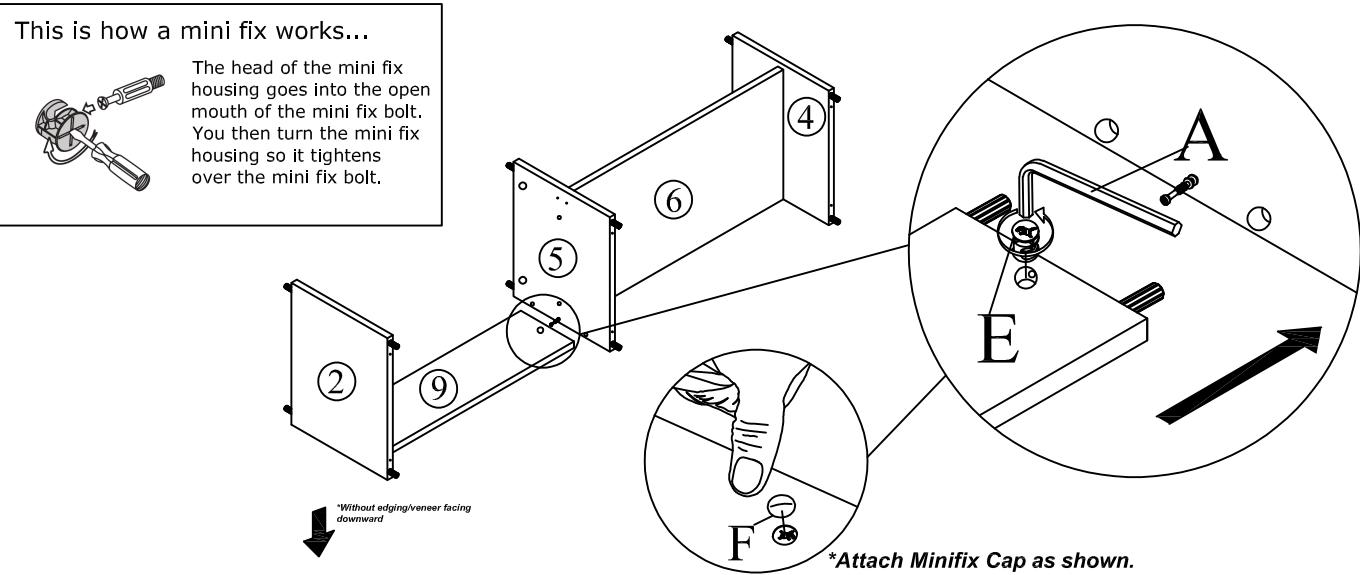


Step 7

This is how a mini fix works...




The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

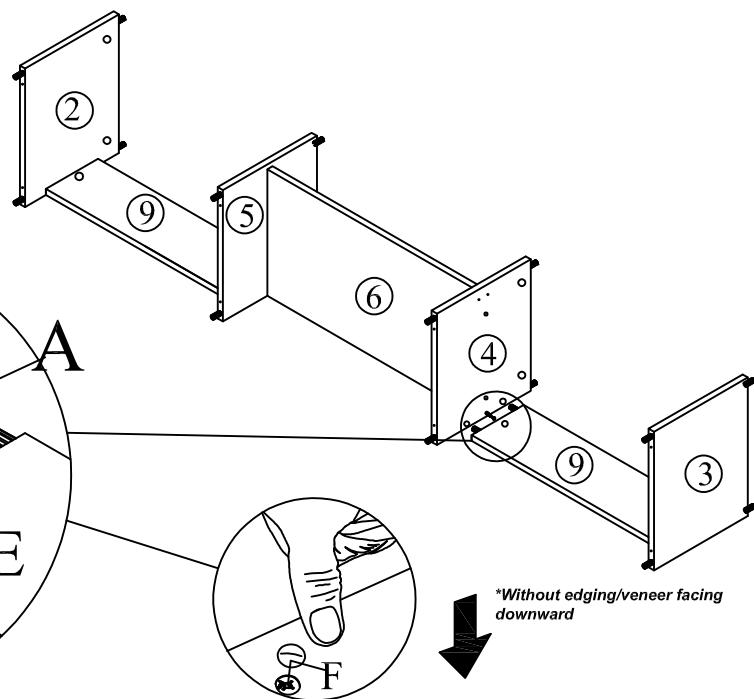


Step 8

This is how a mini fix works...


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

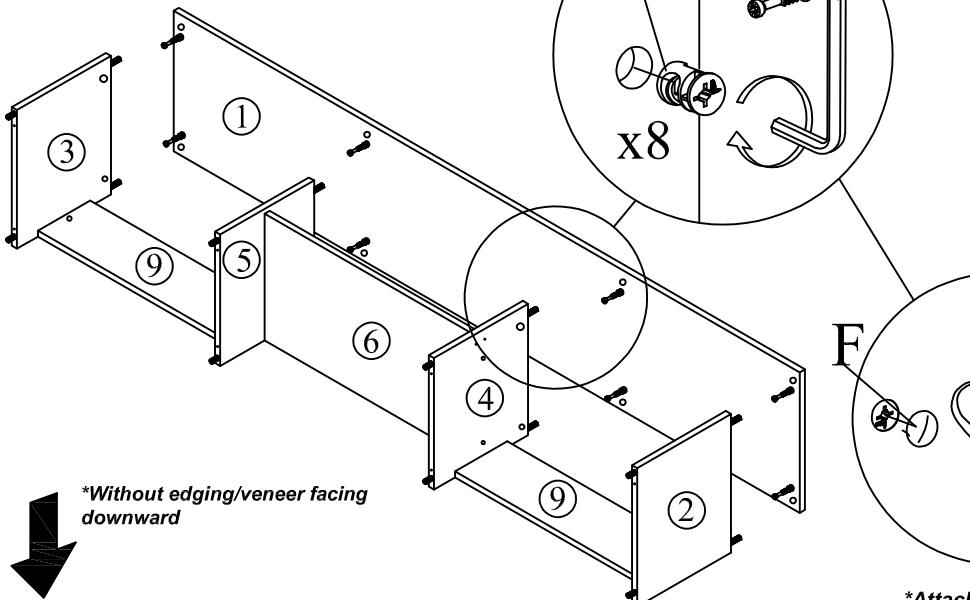

Step 9

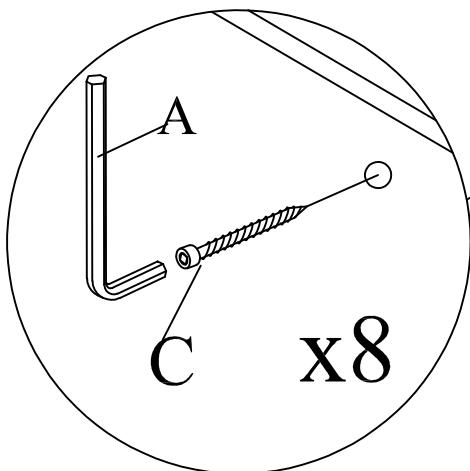


Step 10

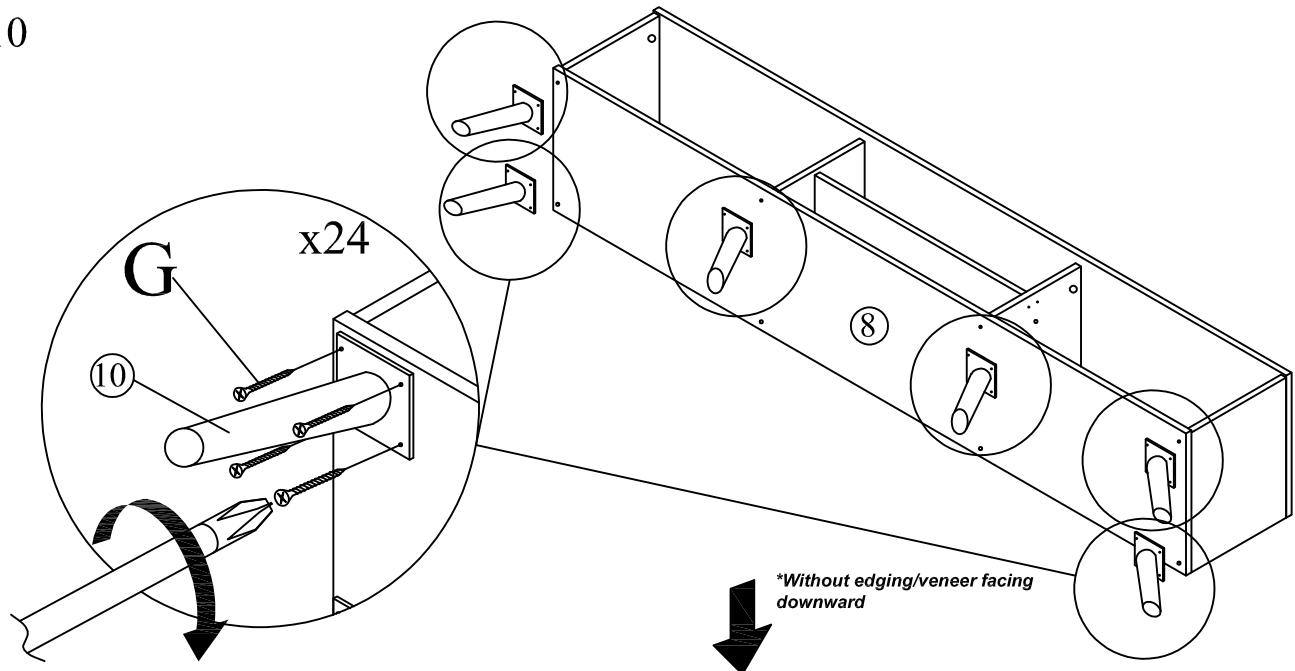


**Without edging/veneer facing downward*

Step 11

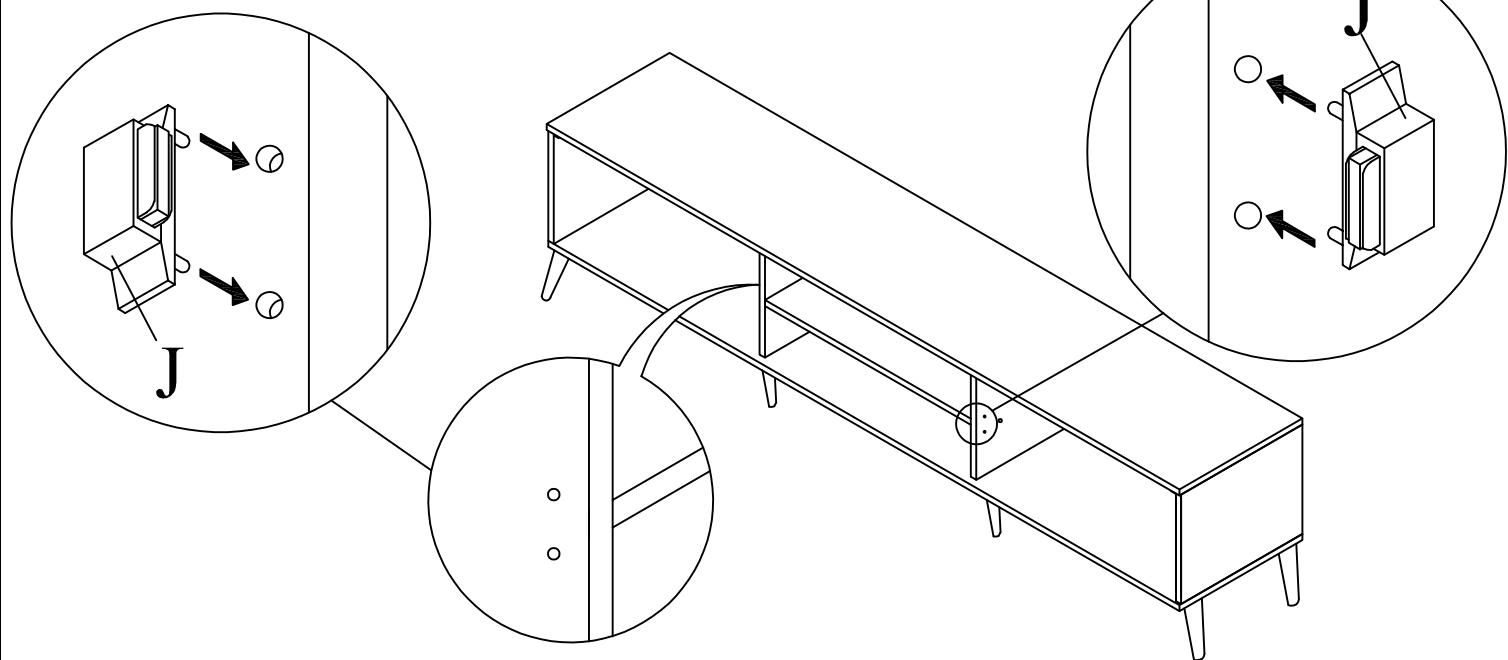

Step 12

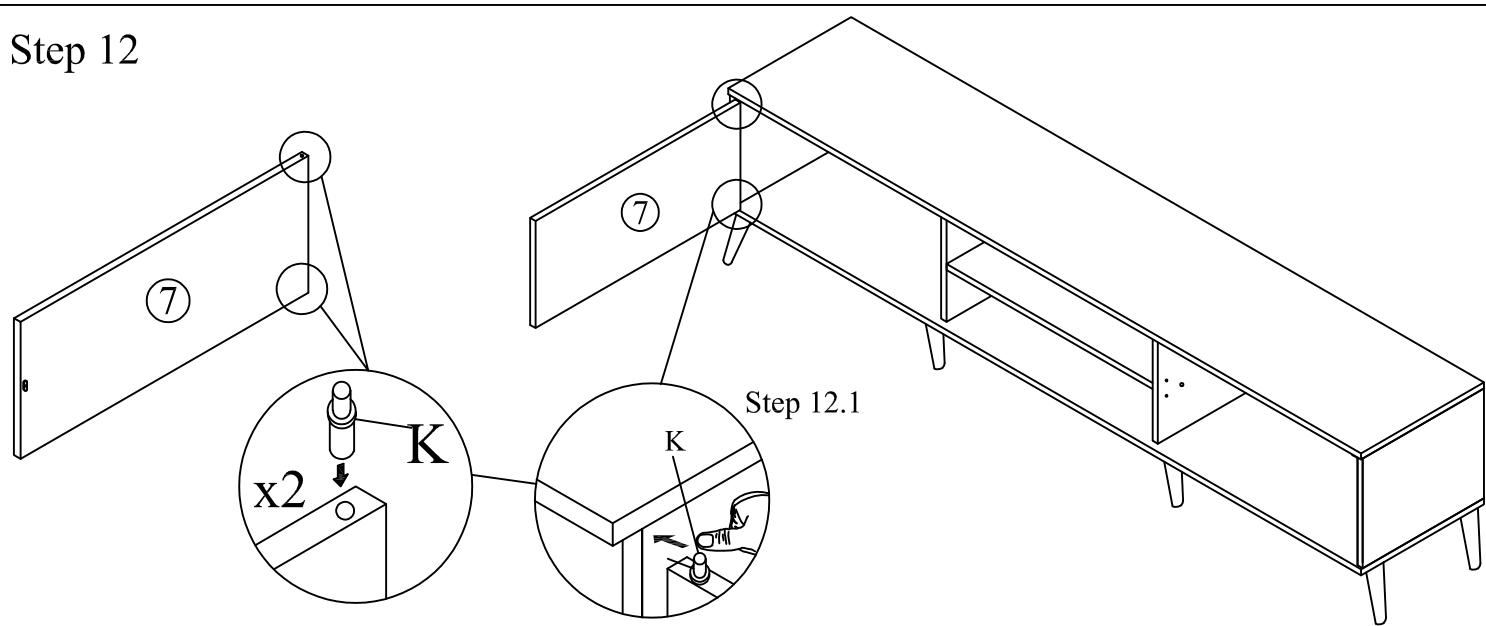

Step 13

