






 
 
 




# ITEM NO:C8740 SWIVEL PUB CHAIR

NO.	QTY	DRAWING	DESCRIPTION
A	1		BACK
B	1		UP LEG
C	1		LOW LEG
D	1		ROUND STRETCHER
E	1		CUSHIOM
F	1		SWIVEL
G	8		1/4X16mm
H	4		1/4X30mm
I	4		4x30mm
J	1		4mm/ALLENKEY
K	12		SPRING WASHER
L	12		FLAT WASHE

Note:Pls do not tighten all bolts until the chair is assembled completely.Once assembled,tighten all bolts before attaching the chair.

Note: Pls ne pas serrer tous les boulons jusqu'à ce que les selles est completely.Once assemblé assemblé, serrer tous boulons avant de fixer les selles.

Step1                      Step2                      Step3                      Step4                      Step5                      Step6

