## ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.


3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.


Tool needed: Screwdriver & Rubber Mallet (not provider).


PART LIST		
ITEM	DESCRIPTION	QTY
Α	CUSHION BACK	1 PC
В	CUSHION SEAT	1 PC
С	LEG SUPPORT FRONT	1 PC
D	LEG SUPPORT BACK	1 PC
E	LEG LEFT	1 PC
F	LEG RIGHT	1 PC

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBC Bolt M6 x 50mm	<b>€</b>	4pcs
2	JCBB Bolt M8 x 45mm	<b>ammamm</b> □	6pcs
3	M8 FLAT WASHER	0	6pcs
4	M6 SPRING WASHER		4pcs
5	M8 SPRING WASHER		6pcs
6	WOOD SCREW M4 x 38mm	<b>~~~~~⊕</b>	10PCS
7	M4 ALLEN KEY (BALL SHAPE)		1PC
8	M5 ALLEN KEY (BALL SHAPE)		1PC
9	WOOD DOWEL M8 x 30mm		8PCS

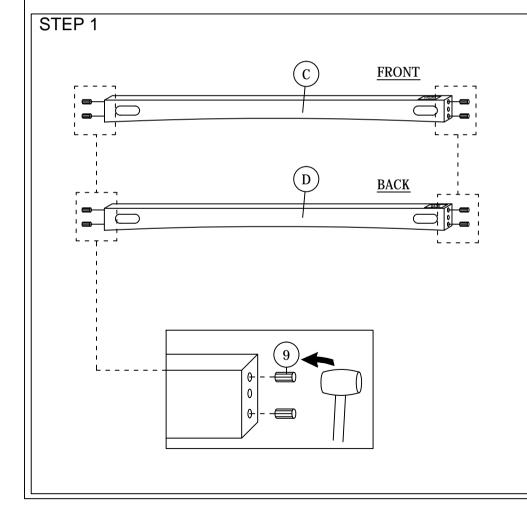

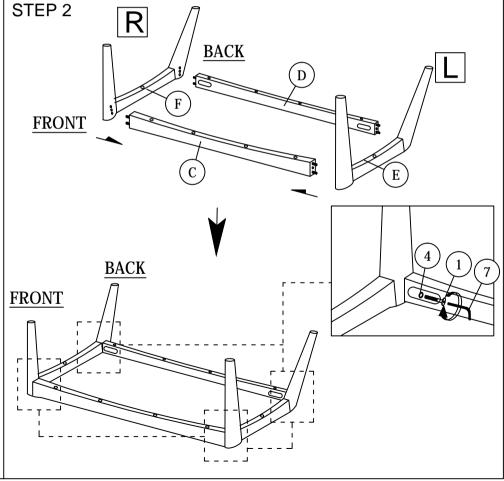

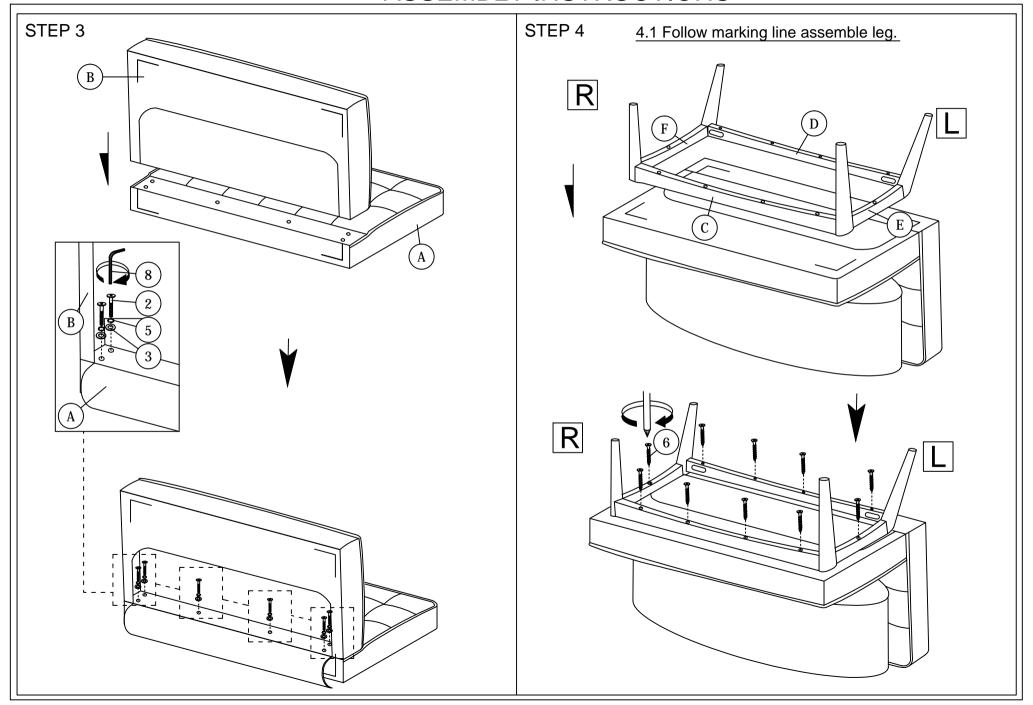

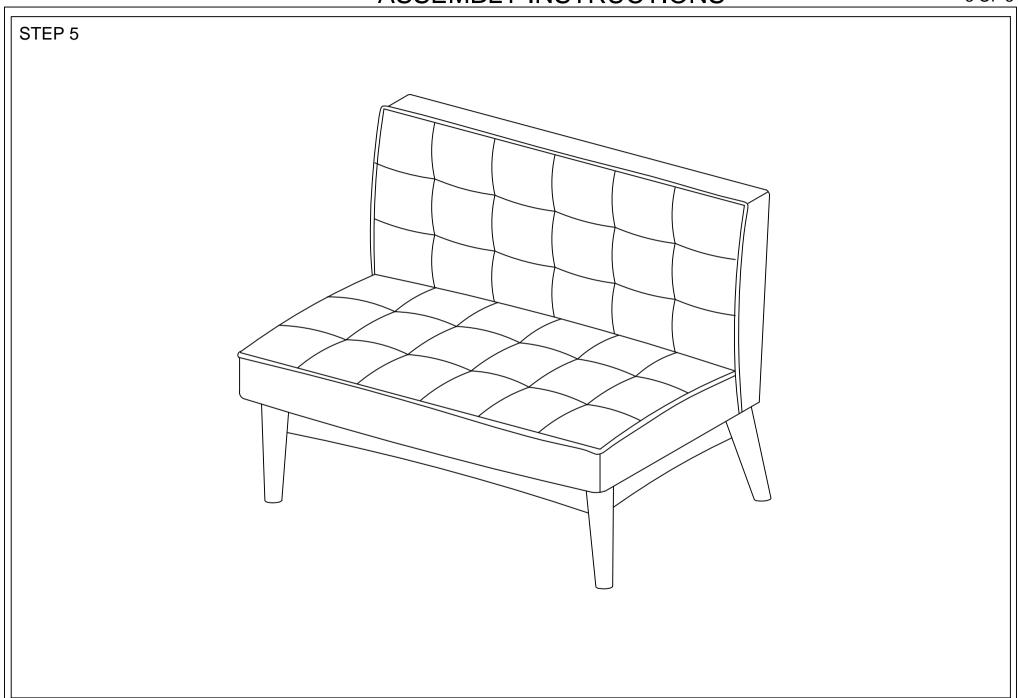

## ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.


3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.


Tool needed: Screwdriver & Rubber Mallet (not provider).


PART LIST		
ITEM	DESCRIPTION	QTY
Α	CUSHION BACK	1 PC
В	CUSHION SEAT	1 PC
C	LEG SUPPORT FRONT	1 PC
D	LEG SUPPORT BACK	1 PC
E	LEG LEFT	1 PC
F	LEG RIGHT	1 PC
G	ARM	1 PC

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBC Bolt M6 x 50mm		4pcs
2	JCBB Bolt M8 x 45mm	<b>ammama</b> □	8pcs
3	M8 FLAT WASHER	0	8pcs
4	M6 SPRING WASHER		4pcs
5	M8 SPRING WASHER		8pcs
6	WOOD SCREW M4 x 38mm	<b></b>	10PCS
7	M4 ALLEN KEY (BALL SHAPE)		1PC
8	M5 ALLEN KEY (BALL SHAPE)		1PC
9	WOOD DOWEL M8 x 30mm		8PCS

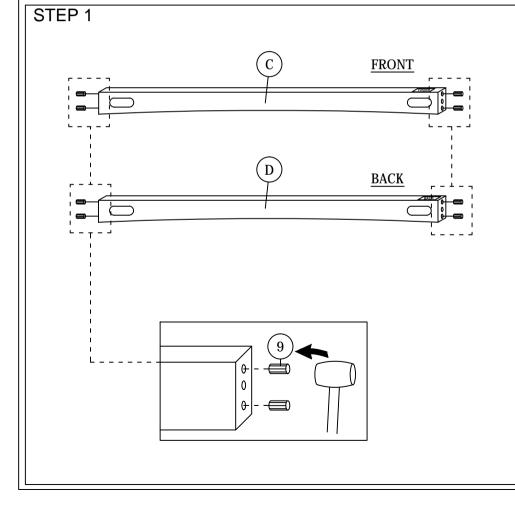

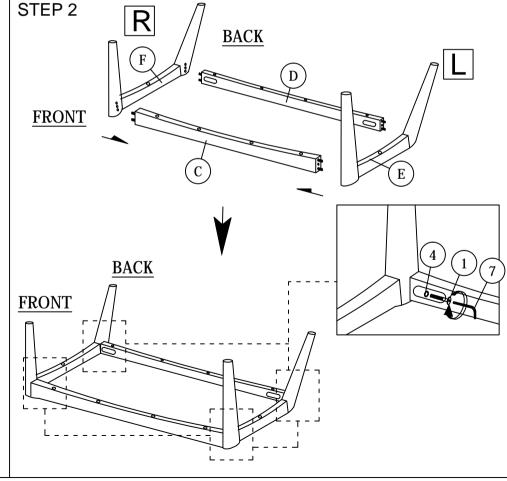

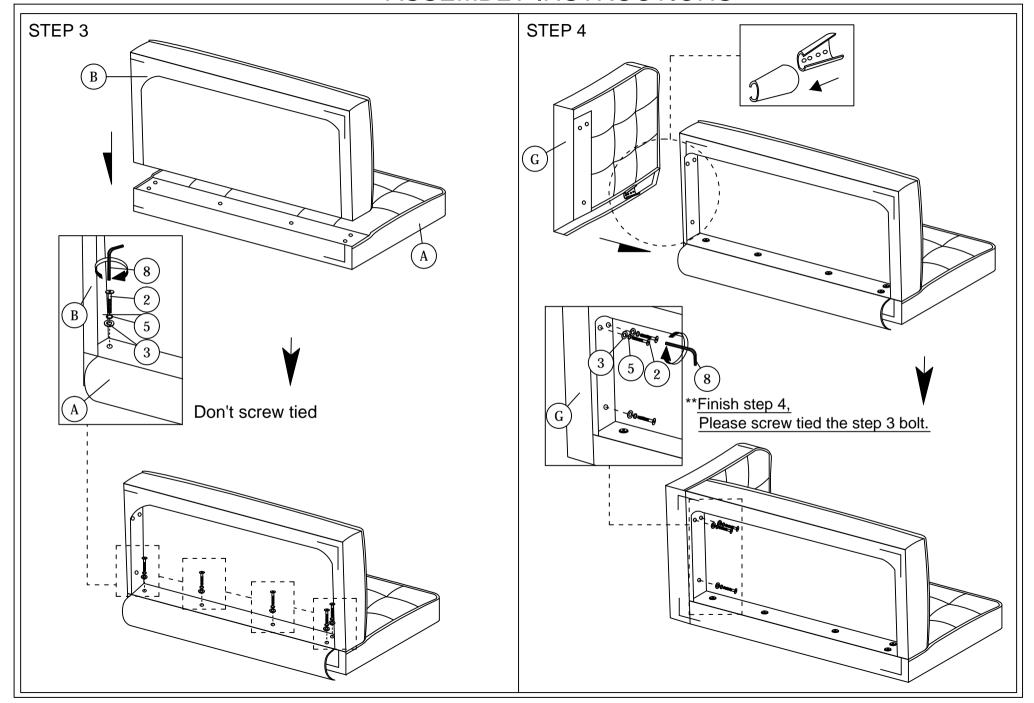

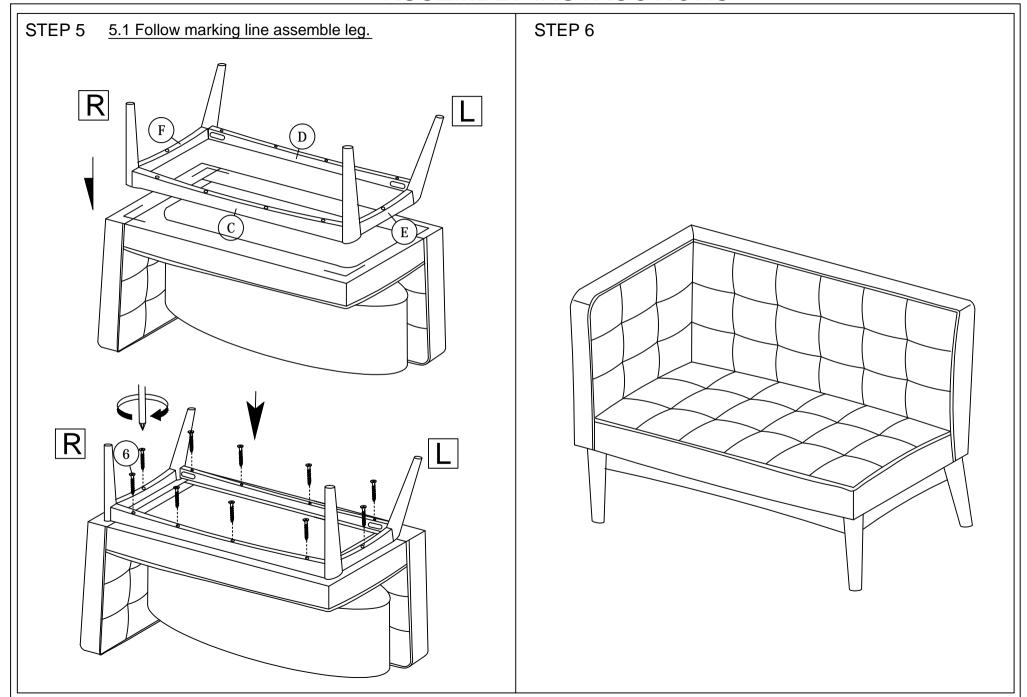

## **ASSEMBLY INSTRUCTIONS**

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

	PART LIST		
ITEM	DESCRIPTION	QTY	
Α	TABLE TOP	1 PC	
В	LEGS	4 PCS	

	PART LIST		
ITEM	DESCRIPTION		QTY
1	JCBC BOLT M6 x 60mm	<b></b>	8 PCS
2	M6 FLAT WASHER	0	8 PCS
3	M6 SPRING WASHER		8 PCS
4	M4 ALLEN KEY	<u> </u>	1 PC

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

