Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.


2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. 3. Keep all hardware parts out of reach of children.


PART LIST			
ITEM	DESCRIPTION	QTY	
Α	CHAIR	1 PC	
В	LEG (L)	1 PC	
С	LEG (R)	1 PC	
D	SUPPORT RAIL (LONG)	1 PC	
Е	SUPPORT RAIL (SHORT)	1 PC	

HARDWARE LIST						
ITEM	DESCRIPTION		QTY			
1	JCBC Bolt M6 x 50mm		4 PCS			
2	WOOD SCREW M4 x 38mm		4 PCS			
3	WOOD DOWEL M10 x 40mm		8 PCS			
4	M4 ALLEN KEY (BALL SHAPE)	\	1 PC			

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY. Tool needed: Screwdriver & Hammer (not provided).

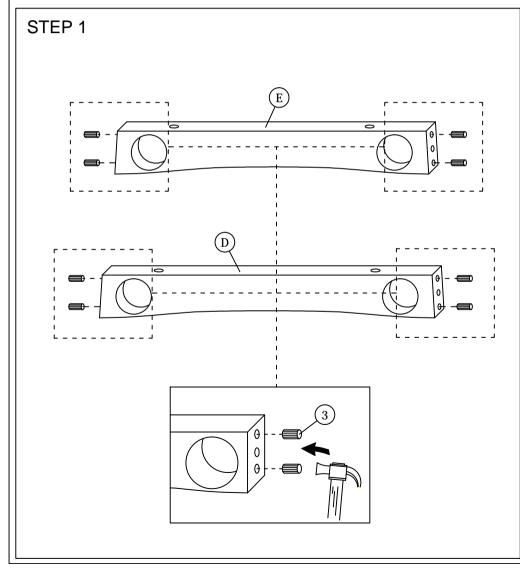

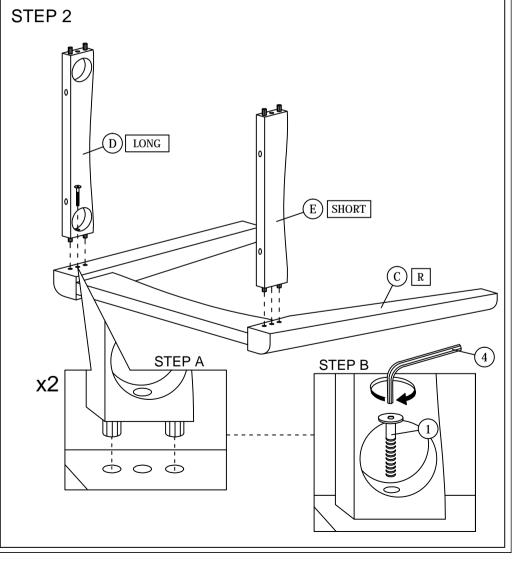

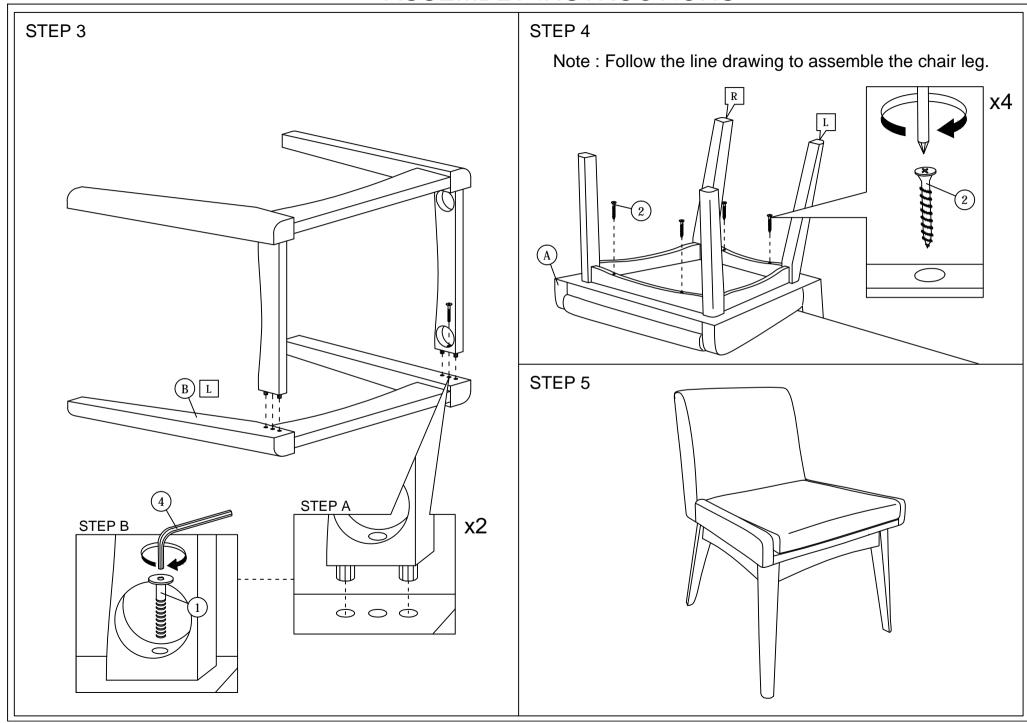

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

	PART LIST					
ITEM	DESCRIPTION	QTY				
Α	TABLE TOP	1 PC				
В	LEGS	4 PCS				

	PART LIST		
ITEM	DESCRIPTION		QTY
1	JCBC BOLT M6 x 60mm	«****** €	8 PCS
2	M6 FLAT WASHER	0	8 PCS
3	M6 SPRING WASHER		8 PCS
4	M4 ALLEN KEY	<u> </u>	1 PC

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

