ASSEMBLY INSTRUCTION


MODEL : 2083C

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched.Follow the figure to start assembling. CAUTION :

Do not FULLY - TIGHTEN the nut or screw untill all is ready to assemble.
Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.

3. Keep all hardware part out reach of children.

NO PART LIST QTY NO DESCRIPTION QTY BACK REST 1 PC JCBC SCREW M6 X 50MM А 1 0 6 PCS 1 PC WOOD DOWEL Ø8 x 30MM В FRONT LEG 2 4 PCS SIDE RAIL 2 PCS ALTERNO. C CSK SCREW M4 x 30MM 3 3 PCS CUSHION SEAT 1 PC D SPRNG WASHER M6 4 0 6 PCS M4 ALLEN KEY 5 1 PC

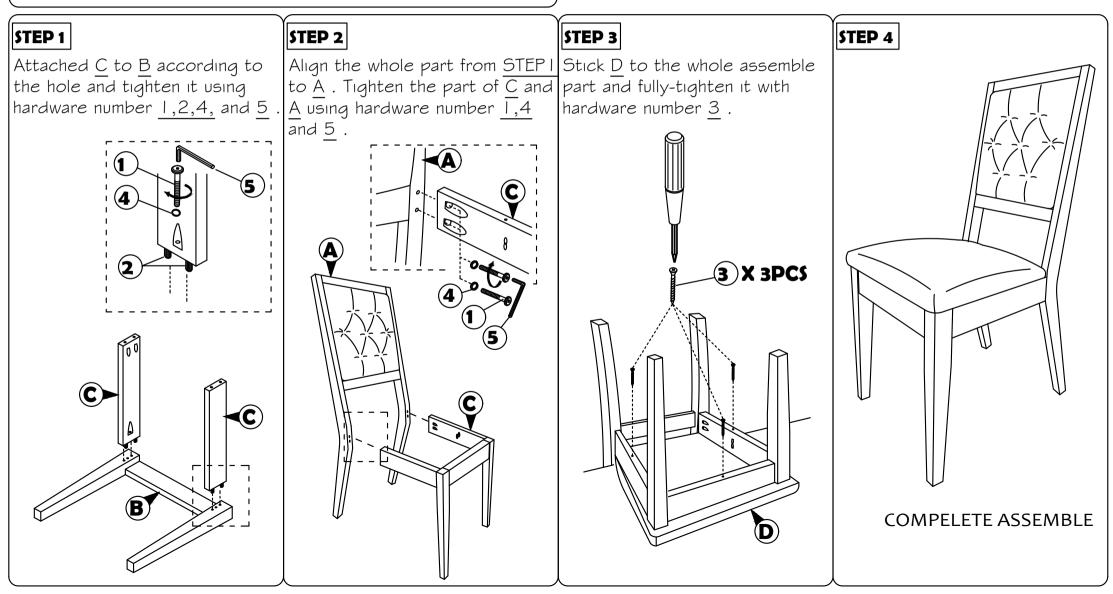

ASSEMBLY INSTRUCTIONS

MODEL: 7008T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

- 1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

PART LIST			HARDWARE LIST			
No.	DESCRIPTION	QTY	No.	DESCRIPTION		QTY
A	TABLE TOP	1	1	FLAT WASHER 6/19"	0	8
B	TABLE LEG	4	2	SPRING WASHER 6/13"	Ø	8
D			3	JCBC SCREW M6 X 70MM	9	8
			4	M4 ALLEN KEY	<u> </u>	1

