




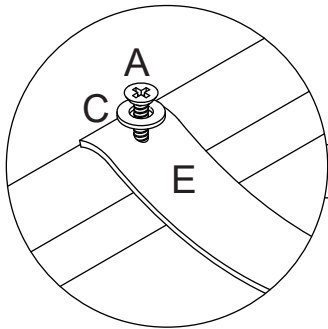
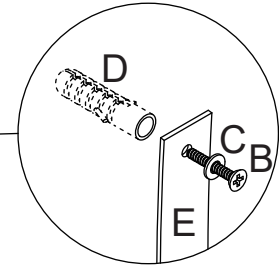


Assembly Instructions


Ax1 	Bx1 	Cx2 	Dx1 	Ex1 
--	--	--	--	--



Attach wall strap(E) to the product by securing with screw (A) and washer (C).



Drill hole on the wall.
Hammer (D) into the hole on the wall.
Attach wall strap (E) to (D) by securing with screw (B) and washer (C) .

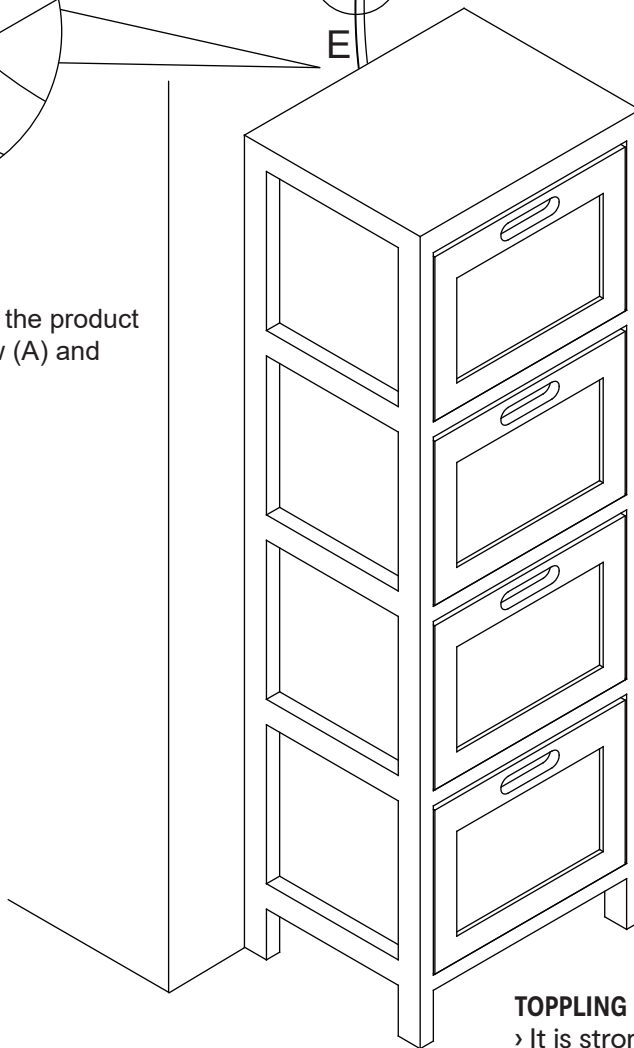

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
- › Please seek professional advice if you are in doubt of what fixing device to use.
- › Regularly check that anchors are securely maintained.
- › Stability of tall items may be affected by thick pile carpet or uneven floors.
- › Do not place unanchored televisions on furniture.

Caution! When attaching the anchor fixings, check for any electrical wires or plumbing behind the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson).