Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.


2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.


3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

PART LIST							
ITEM	DESCRIPTION	BOX	QTY				
Α	BACK	1	1PC				
В	SEAT	1	1PC				
С	ARM	1	2PCS				
D	FRONT RAIL	1	1PC				

PART LIST (BOX : 1)						
ITEM	DESCRIPTION		QTY			
1	JCBB Bolt M8 x 60mm	~~~~ ⊕	7PCS			
2	JCBB Bolt M8 x 80mm	 ⊕	2PCS			
3	M8 Flat Washer	0	3PCS			
4	M8 Spring Washer	0	3PCS			
5	Wood Dowel M10 x 40mm		2PCS			
6	M8 Bran Nut	8	2PCS			
7	Wood Button Dia 18.5mm	0	6PCS			
8	M5 Allen Key (Ball Shape)		1PC			
9	Wood Screw M4 x 50mm		2PCS			

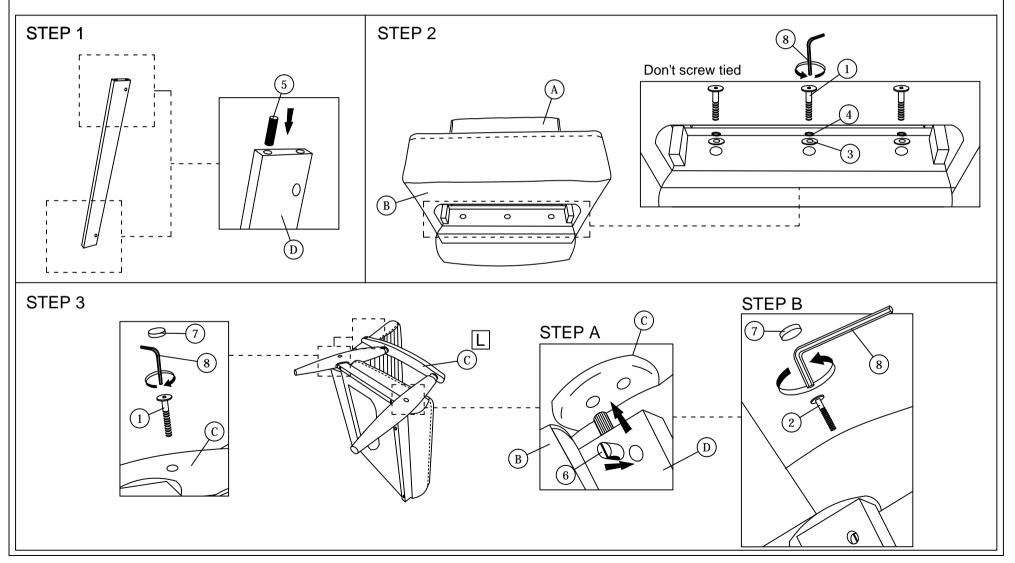

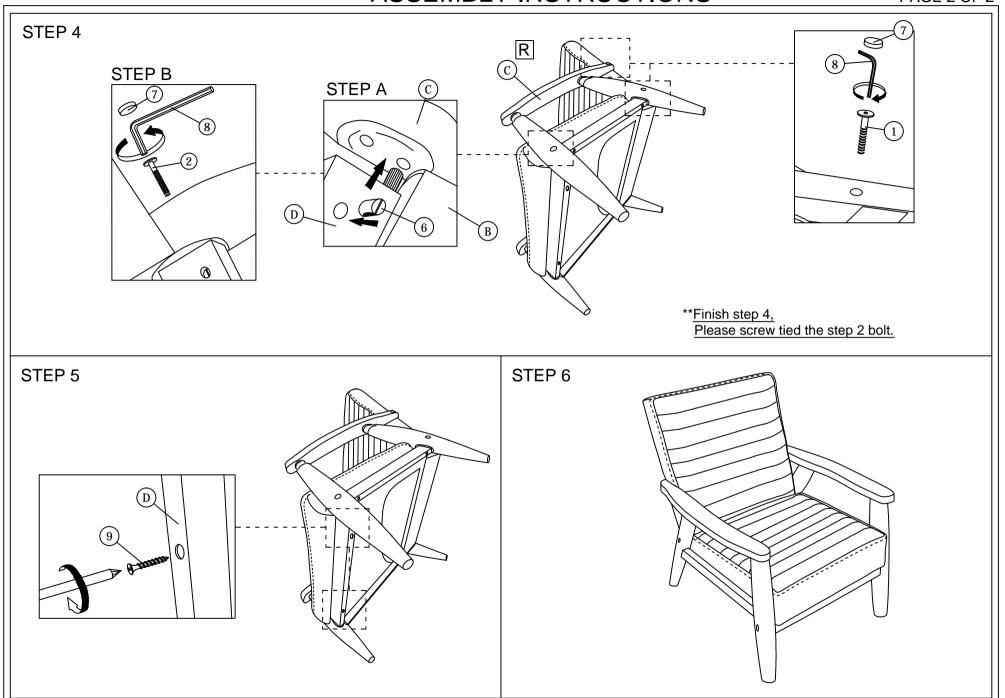

ASSEMBLY INSTRUCTIONS


Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

PART LIST					PART LIST (BOX : 1)		
ITEM	DESCRIPTION	BOX	QTY	ITEM	DESCRIPTION		QTY
Α	BACK	1	1PC	1	JCBB Bolt M8 x 60mm	8	8pcs
В	SEAT	1	1PC	2	JCBB Bolt M8 x 80mm	#	2pcs
С	ARM	1	2PCS	3	M8 Flat Washer	ଁ	4pcs
D	FRONT RAIL	1	1PC	4	M8 Spring Washer	W	4pcs
				5	Wood Dowel M10 x 40mm		2pcs
				6	M8 Bran Nut		2pcs
				7	Wood Button Dia 18.5mm		6pcs
				8	M5 Allen Key (Ball Shape)	_	1pc
				9	Wood Screw M4 x 50mm	*****	2pcs

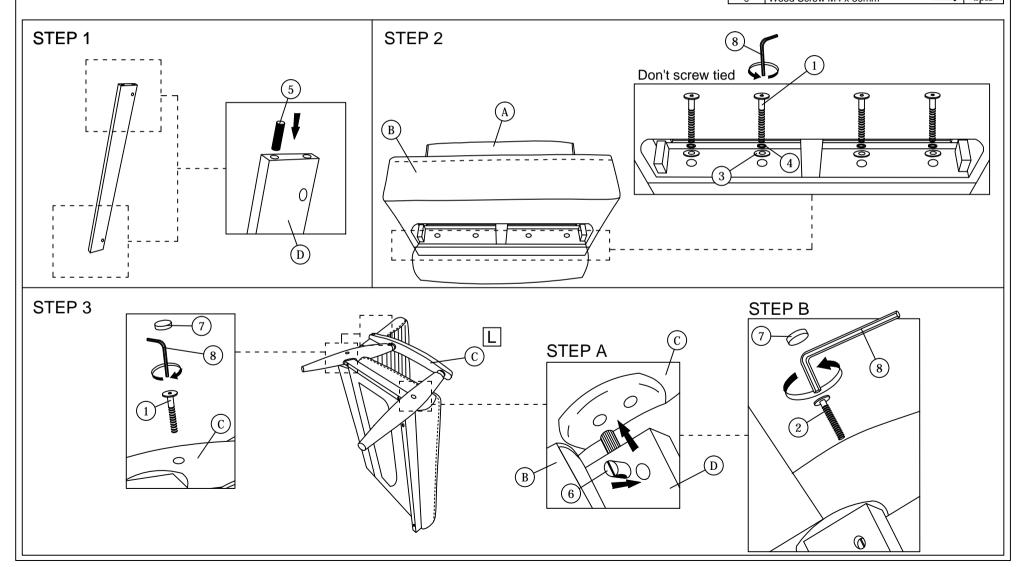

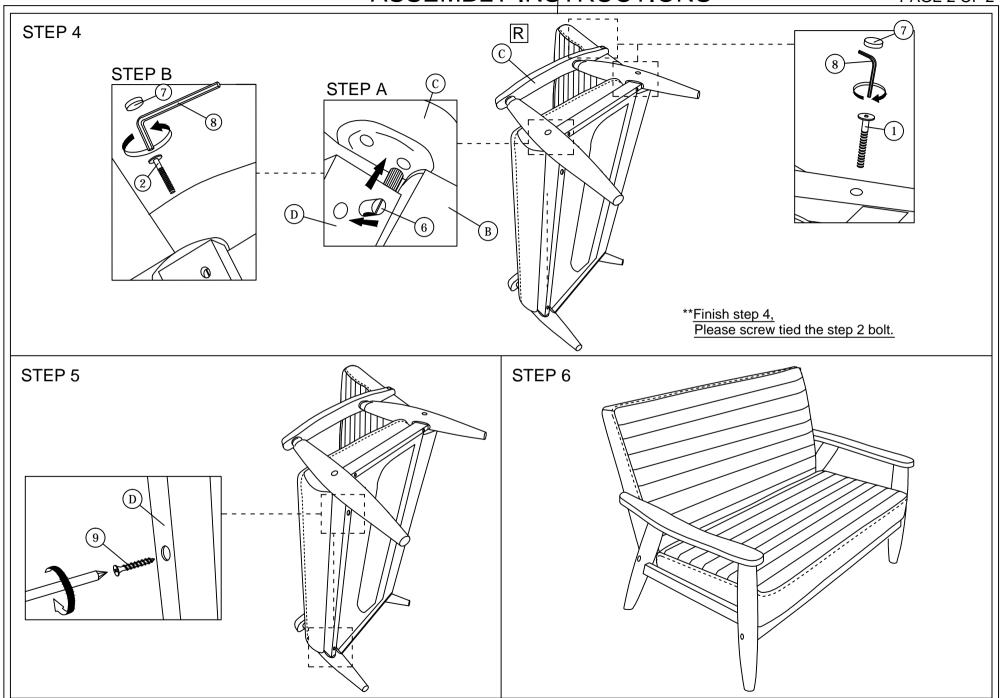

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

	PART LIST				PART LIST (BOX : 1)	
ITEM	DESCRIPTION	BOX	QTY	ITEM	DESCRIPTION	QTY
Α	BACK	1	1PC	1	JCBB Bolt M8 x 60mm	9pcs
В	SEAT	1	1PC	2	JCBB Bolt M8 x 80mm	2pcs
С	ARM	1	2PCS	3	M8 Flat Washer	5pcs
D	FRONT RAIL	1	1PC	4	M8 Spring Washer	5pcs
				5	Wood Dowel M10 x 40mm	2pcs
				6	M8 Bran Nut	2pcs
				7	Wood Button Dia 18.5mm	6pcs
				8	M5 Allen Key (Ball Shape)	1pc
				9	Wood Screw M4 x 50mm	3pcs

