ASSEMBLY INSTRUCTION

MODEL: 5992C

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See

hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from

STEP 2

6

B

 \bigcirc

5

being scratched. Follow the figure to start assembling.

Caution:

STEP 1

 (\mathbf{B})

1.Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.

2.Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.

6

~ •

3.Keep all hardware part out of reach of children.

B

				WODEL. 59	520	
NO	PART LIST	QTY	NO	DESCRIPTION		QTY
А	BACK REST	1	1	JCBC SCREW M6 X 45MM	~	2
В	FRONT LEG	2	2	JCBC SCREW M6 X 50MM		4
С	BOX SEAT	1	3	JCBC SCREW M6 X 80MM	-	4
			4	SPRING WASHER	Ø	10
			5	FLAT WASHER	٢	10
			6	M4 ALLEN KEY		1

COMPLETED ASSEMBLY

ASSEMBLY INSTRUCTIONS

MODEL : 7048T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

- 1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

