ASSEMBLY INSTRUCTION


MODEL: 386P


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling. CAUTION:


- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.


NO	PART LIST	QTY
Α	BACK REST	1 PC
В	FRONT LEG	1 PC
C	SIDE RAIL	2 PCS
D	CUSHION SEAT	1 PC
E	SRETCHER	2 PCS

DESCRIPTION		QTY	
JCBC SCREW M6 X 50MM	9	6 PCS	
CSK SCREW M4 x 38MM	OTTOMOR .	4 PCS	
CSK SCREW M4 x 30MM	O TOTAL DE LA CONTRE	3 PCS	
WOOD DOWEL Ø8 x 30MM		4 PCS	
SPRNG WASHER M6	0	6 PCS	
M4 ALLEN KEY		1 PC	
	JCBC SCREW M6 X 50MM CSK SCREW M4 x 38MM CSK SCREW M4 x 30MM WOOD DOWEL Ø8 x 30MM SPRNG WASHER M6	JCBC SCREW M6 X 50MM CSK SCREW M4 x 38MM CSK SCREW M4 x 30MM WOOD DOWEL Ø8 x 30MM SPRNG WASHER M6	

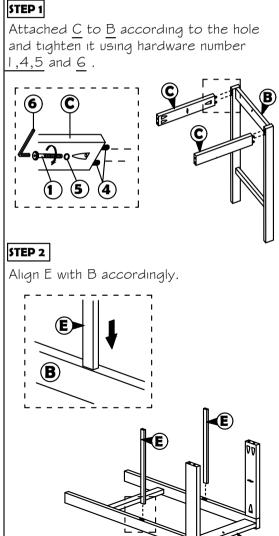


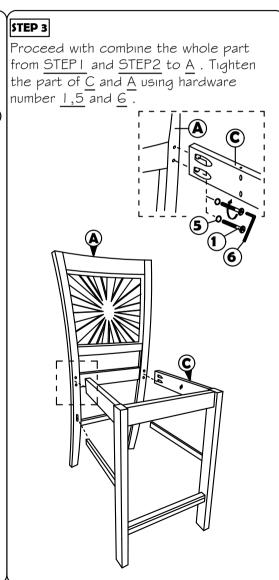

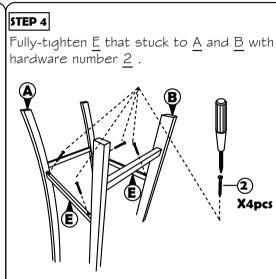

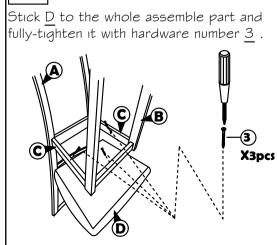

STEP 5

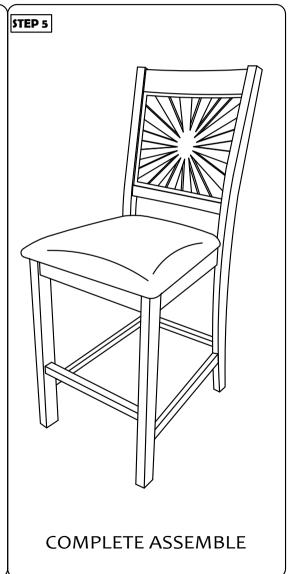

ASSEMBLY INSTRUCTION

900 x 900MM

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION:

- 1. Do not FULLY TIGHTEN the nut or screw until all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damage to the thread.
- 3. Keep all hardware part out of reach of children at all times.

1	NO	PART LIST	QTY
	Α	TABLE TOP	1 PC
	В	TABLE LEG	4 PCS

NO	DESRIPTION		QTY
1	HEX.COM SCREW 5 / 16" X 80MM	COMPANIE	8 PCS
2	FLAT WASHER 5 / 16"	0	8 PCS
3	SPRING WASHER 5 / 16"	0	8 PCS
4	SPANNER 12.8	£	1 PC

