








ASSEMBLY INSTRUCTIONS

MODEL : CS001C DINING CHAIR


Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete, before you assemble. Place all wooden furniture part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS :

1. Do not FULLY-TIGHTEN the screws until all is assembled.
2. Do not OVER-TIGHTEN the screws to avoid causing damages to the thread.
3. Keep all hardware part out of reach of children.

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 45MM 	8 PCS
2	SPRING WASHER 1/4" 	12 PCS
3	NYLON WASHER - 15 x 17.5 x 6MM 	8 PCS
4	ALLEN KEY M4 (LONG) 	1 PC
5	CSK SCREW M4 x 32MM 	5 PCS
6	JCBC SCREW M6 x 30MM 	4 PCS
7	WOOD BUTTON Ø14.5 x 9MM 	4 PCS

PART LIST		
ITEM	DESCRIPTION	QTY
A	SIDE LEG FRAME - L & R	2 PCS
B	CAP	1 PC
C	CUSHION SEAT	1 PC
D	FRONT APRON	1 PC
E	CENTER APRON	1 PC

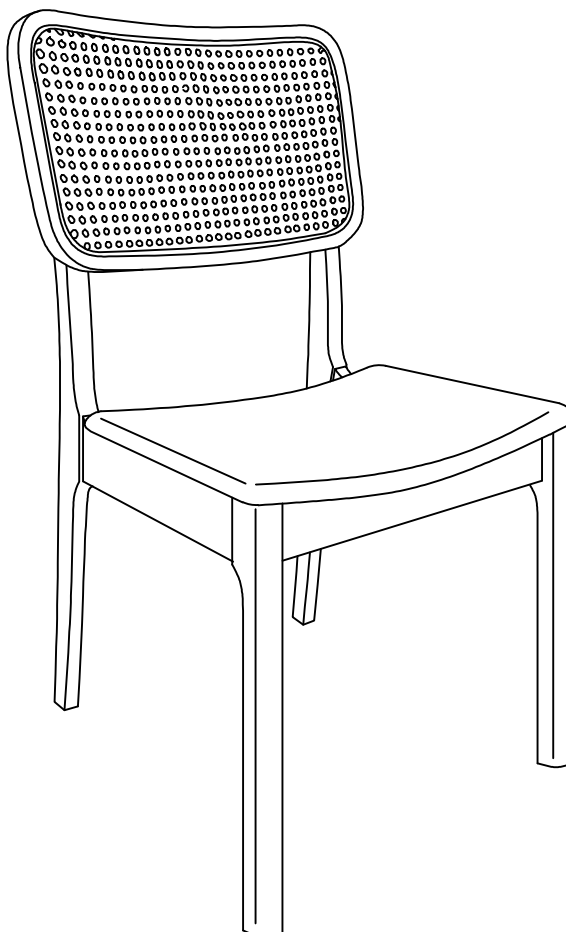

ASSEMBLY INSTRUCTION

ITEM NO : Flora Dining Table

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.


CAUTION : 1) DO NOT FULLY TIGHTEN THE NUTS OR SCREWS INITIALLY UNTILL ALL THE NUTS AND
2) SCREWS ARE ASSEMBLED. TO AVOID CAUSING DAMAGE TO THE TREAD, DO NOT OVER-TIGHTEN
THE NUTS OR SCREWS.
KEEP ALL HARDWARE PARTS OUT OF RECH OF CHILDREN.

PARTS LIST



NO	DESCRIPTION	QTY
A	TABLE TOP	1
B	TABLE LEG	4

HARDWARE LIST



NO	DESCRIPTION	QTY
1	JCBB BOLT M8 x 80mm 	8
2	SPRING WASHER M8 	8
3	FLAT WASHER M8 x 22mm 	8
4	ALLEN KEY M5 x 60mm 	1

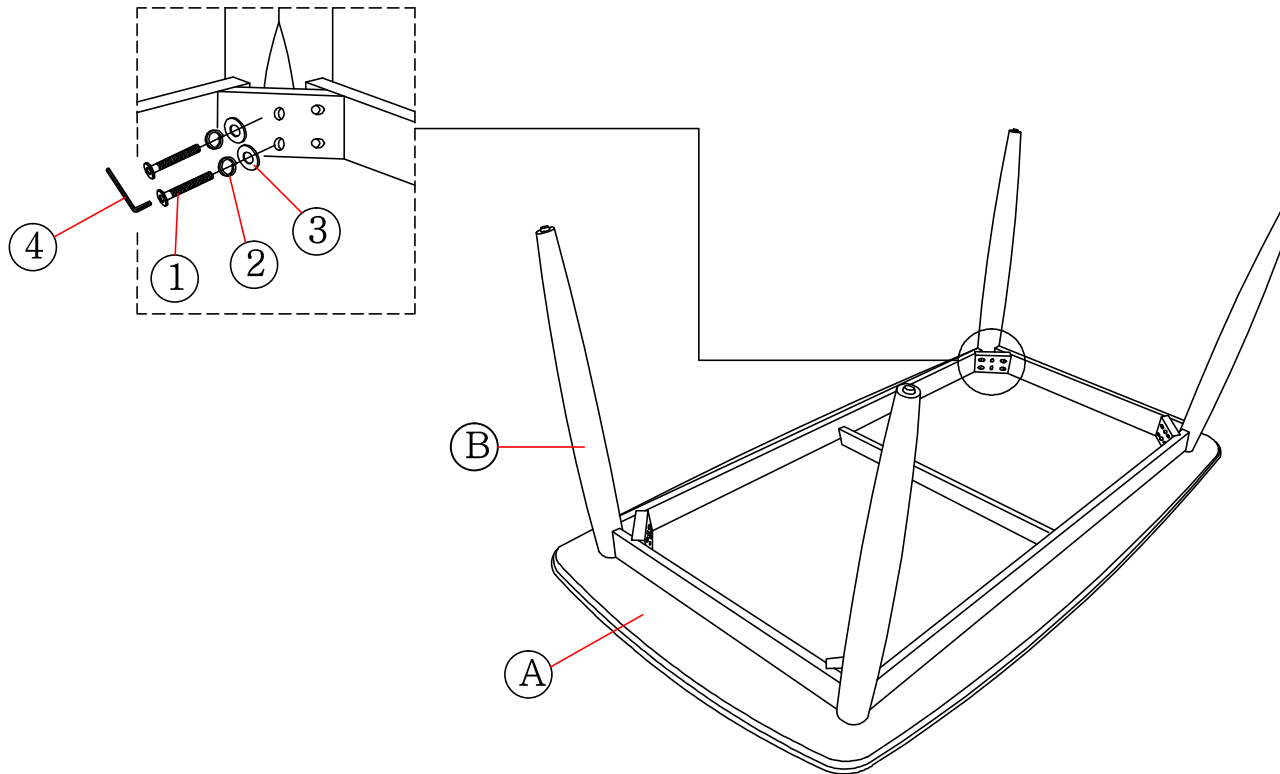


STEP 1

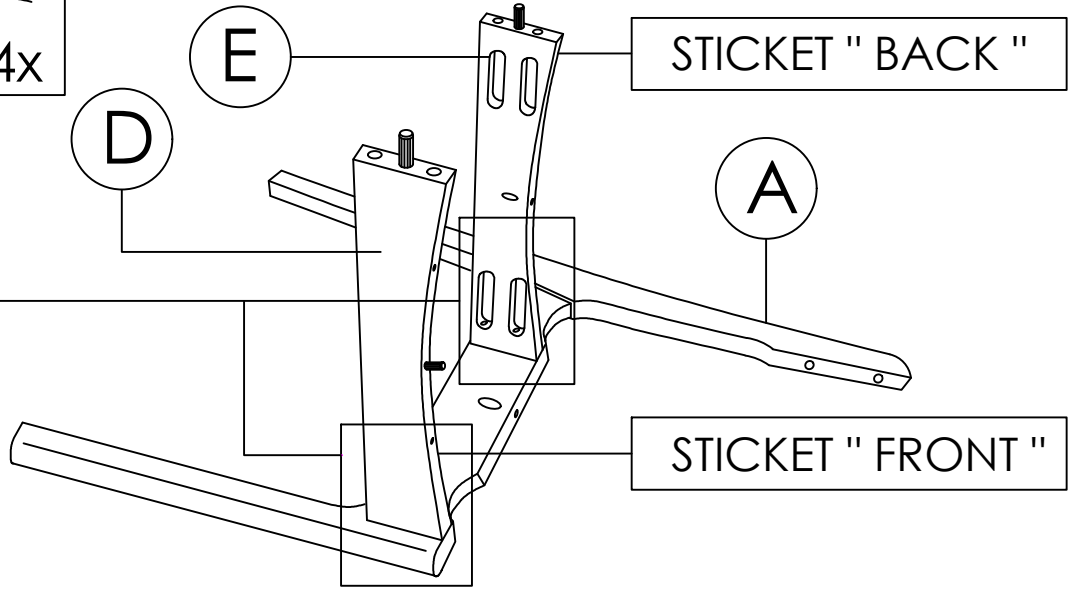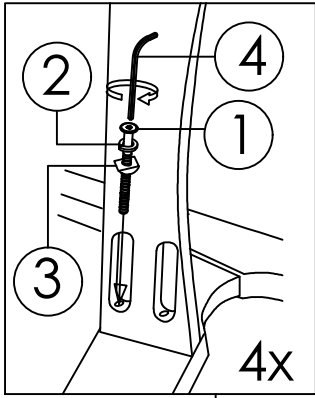


STEP 2

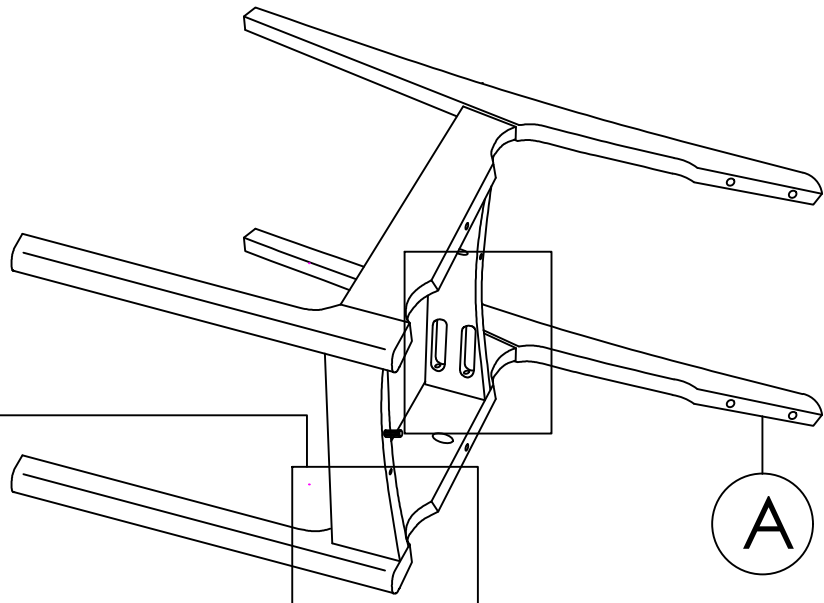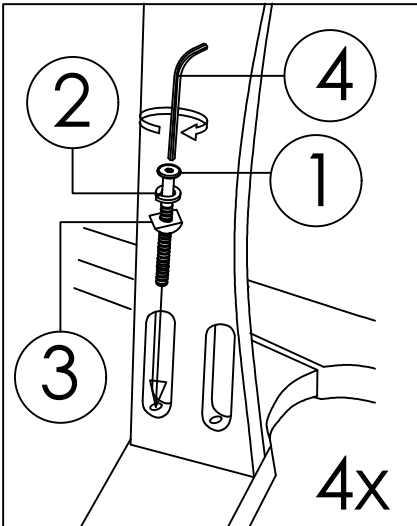


STEP 3

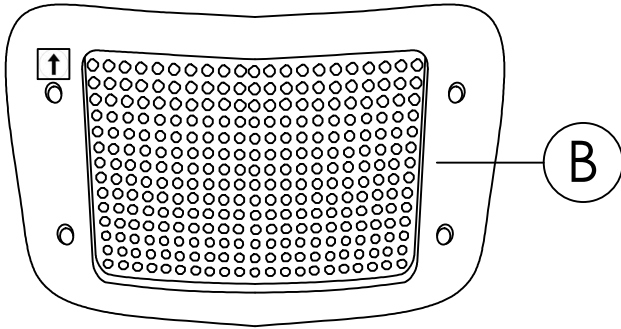

STEP 4

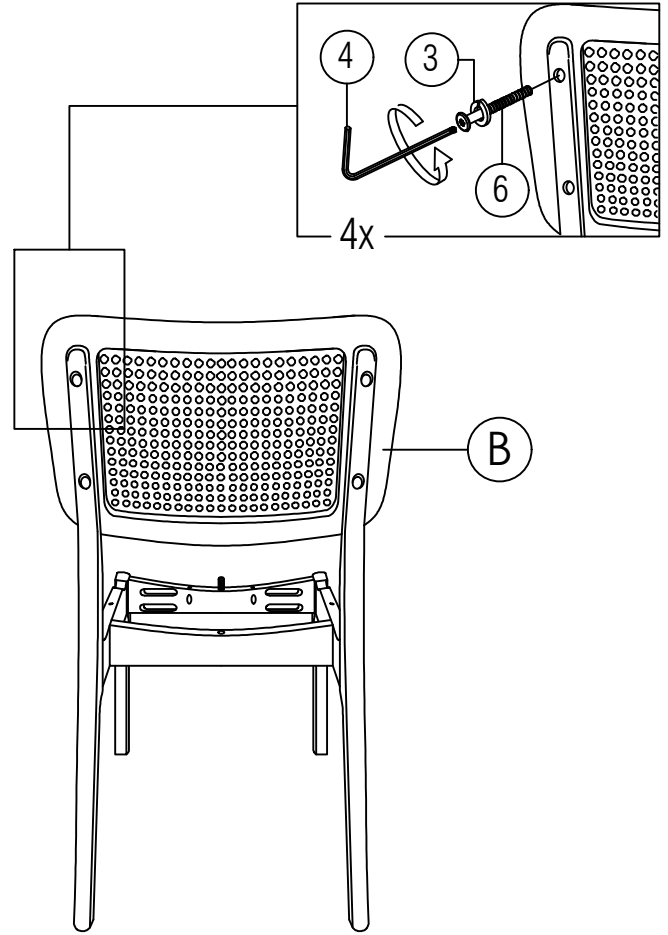

STEP 5

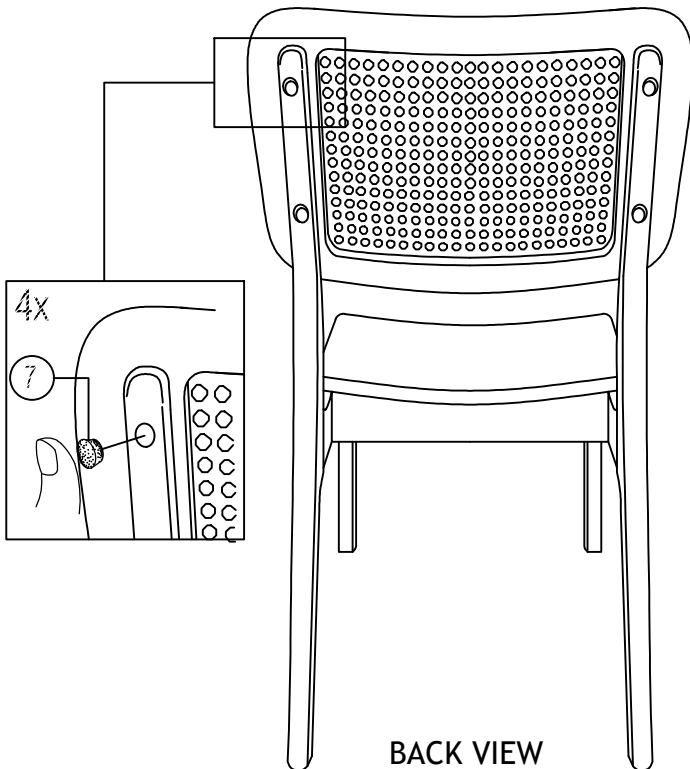

STEP 6

