### **ASSEMBLY INSTRUCTIONS**

LV44 COD 44231WI-CLB


Thank you for you purchase.

Before assembly, please read these instructions.

Please read all warnings.

Store this instruction manual for future reference.

Product Size	Approximately 398 Width x 1306 Length x 840 Height (MM)		
Main Materials	MDF (Medium Density Fiberboard)		
Weight Capacity	Top insert: About 30KG, Shelf insert: About 10KG, X These are measured figures, not guaranteed figures.		
Time To Assembly	About 60 Minutes	Update Date	14/2/2023

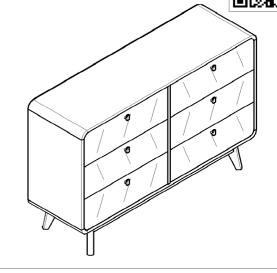


### **Assembly Warning**

- Assembling with 2 or more people is recommended.
- Please assemble at a spacious and flat place
- Please place blankets or cardboard so floor or walls will not be scratched
- Please ventilate the area if there is a strong glue odor after opening the product
- Please follow assembly instructions
- Please have the below tools ready before assembling
  - Screwdriver, Scissors or Blade Box cutter, Rubber hammer, Drill

### **Hardware**


Before assembly, inspect unit for missing parts. Be sure that children do not accidentally swallow these parts. \*\*Same sized parts are in a bag. Please check the size of the screws.

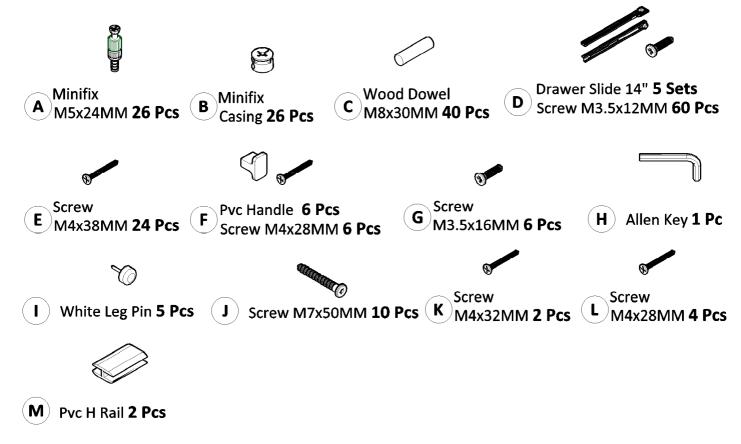




### **Assembly Information**



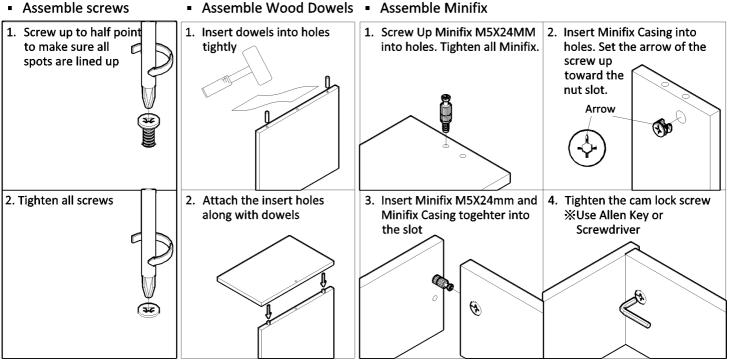

02

### **Parts**

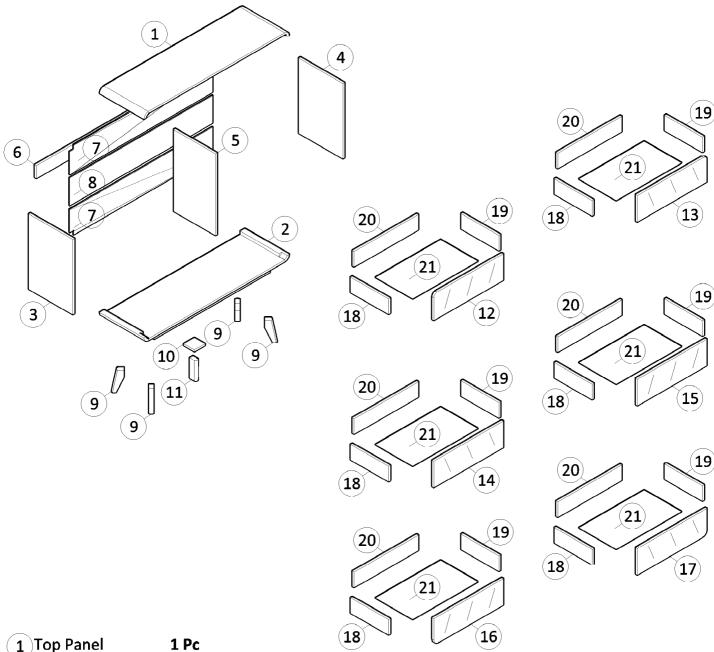

- 2 Bottom Panel 1 Pc 3 Side Panel (L) 1 Pc 4 Side Panel (R) 1 Pc 5 )Center Panel 1 Pc 6 Back Support Panel 1 Pc 7 Back Mdf Board (A) 2 Pcs 8 Back Mdf Board (B) 1 Pc 9 Leg Panel 4 Pcs 10 Center Leg Support **Panel** 1 Pc
- 13 1st Drawer Face Panel (R) 1 Pc 14 2nd Drawer Face Panel (L) 1 Pc (15)2nd Drawer Face Panel (R) 1 Pc 16 3rd Drawer Face Panel (L) 1 Pc 17 3rd Drawer Face Panel (R) 1 Pc

1 Pc

12 1st Drawer Face

Panel (L)


18 Drawer Side Panel (L) 6 Pcs (19) Drawer Side Panel (R) 6 Pcs 20 Drawer Back Panel 6 Pcs 21 Drawer Mdf Board 6 Pcs


(11)Leg Panel Center


1 Pc


### **Assembly Step**


Failure to follow these directions could cause poor strength or stability. Insert screws loose to line up with slots then tighten up each screw.

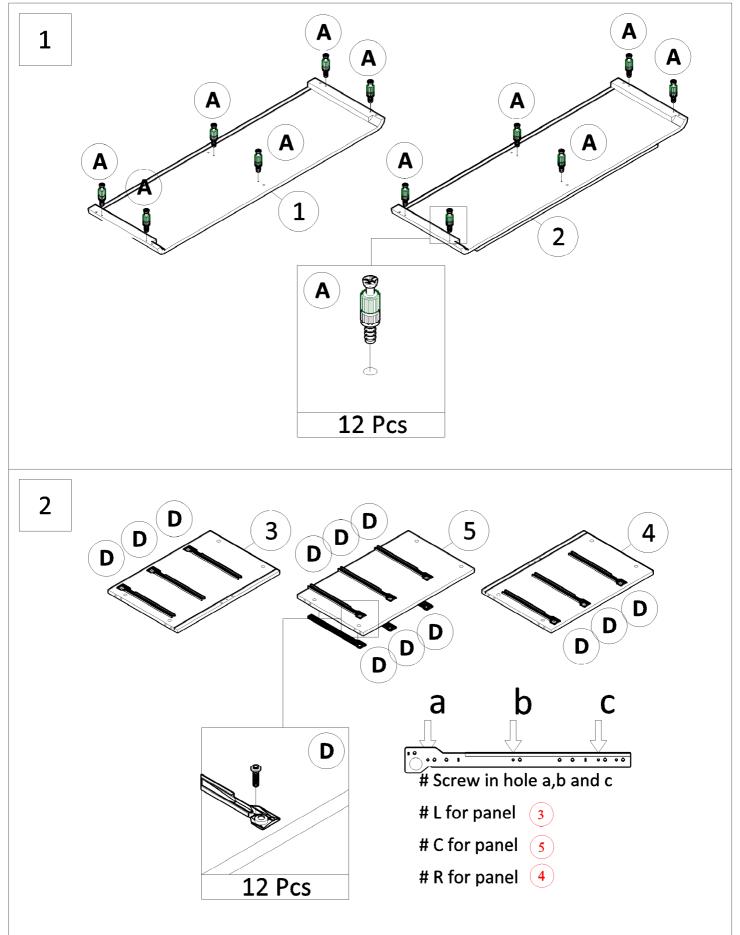


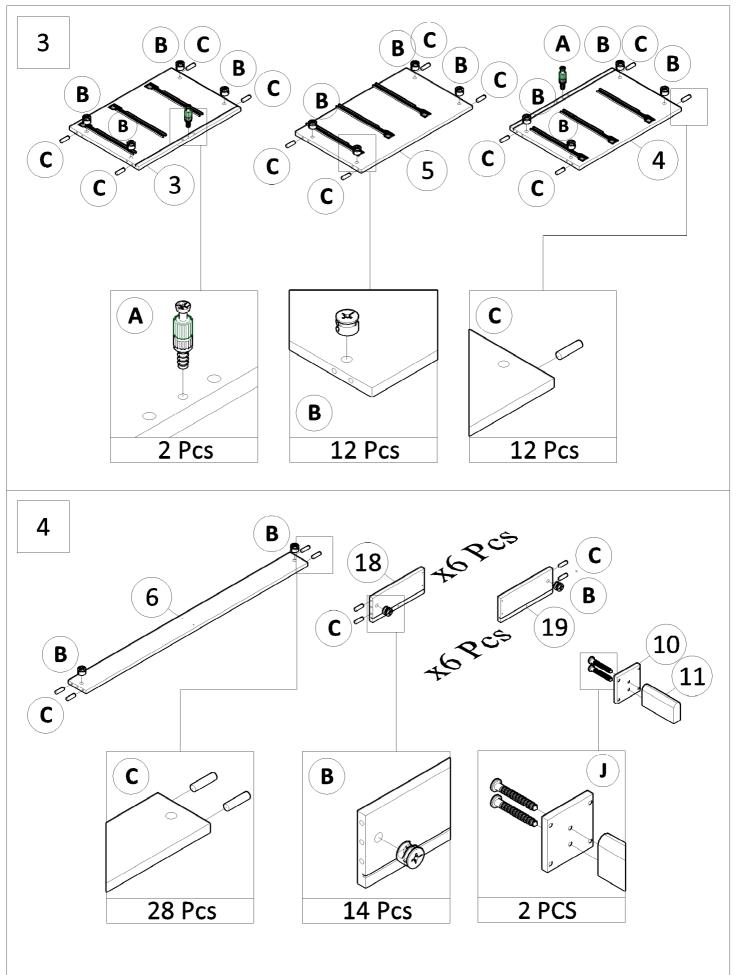


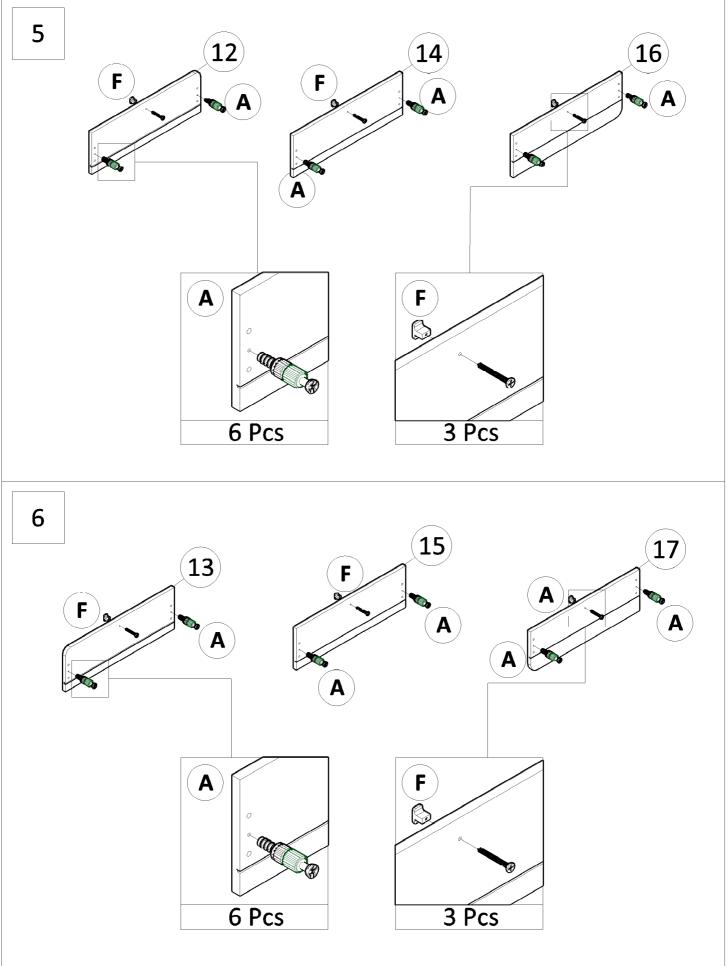


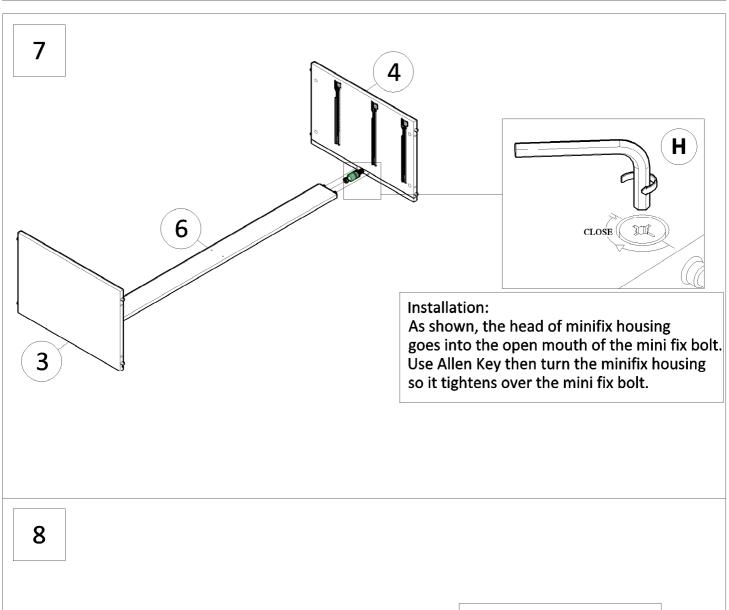


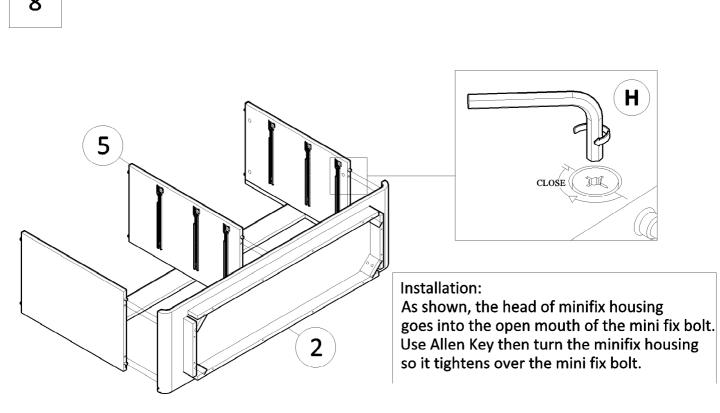

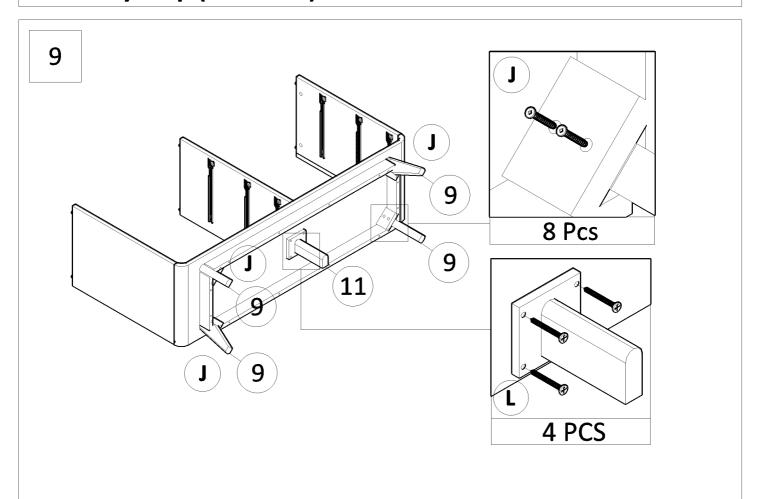


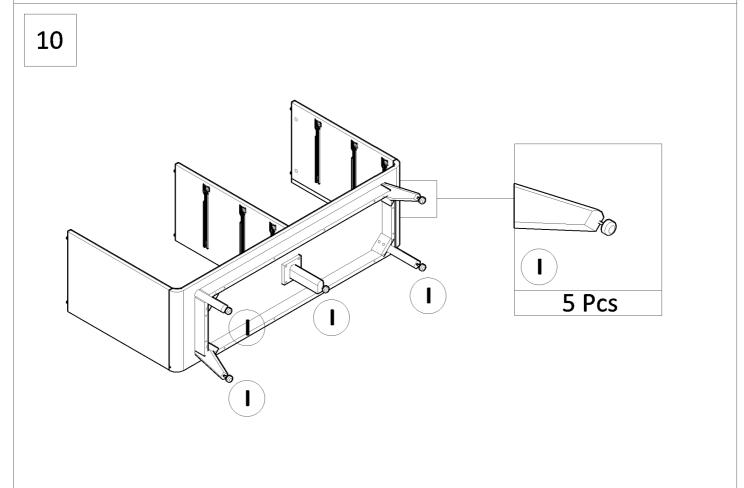


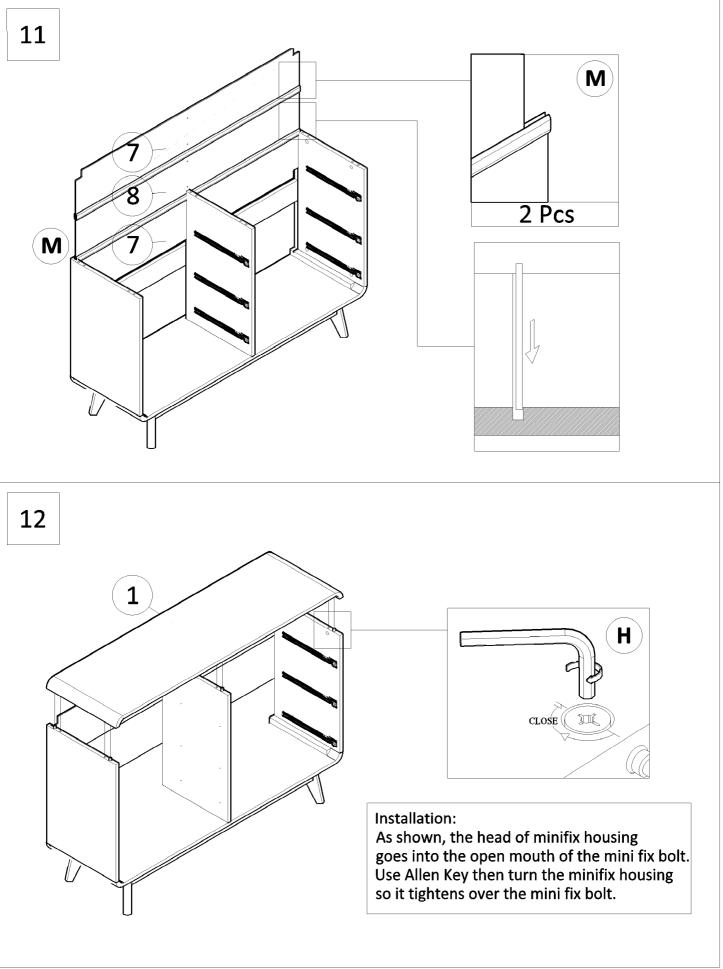

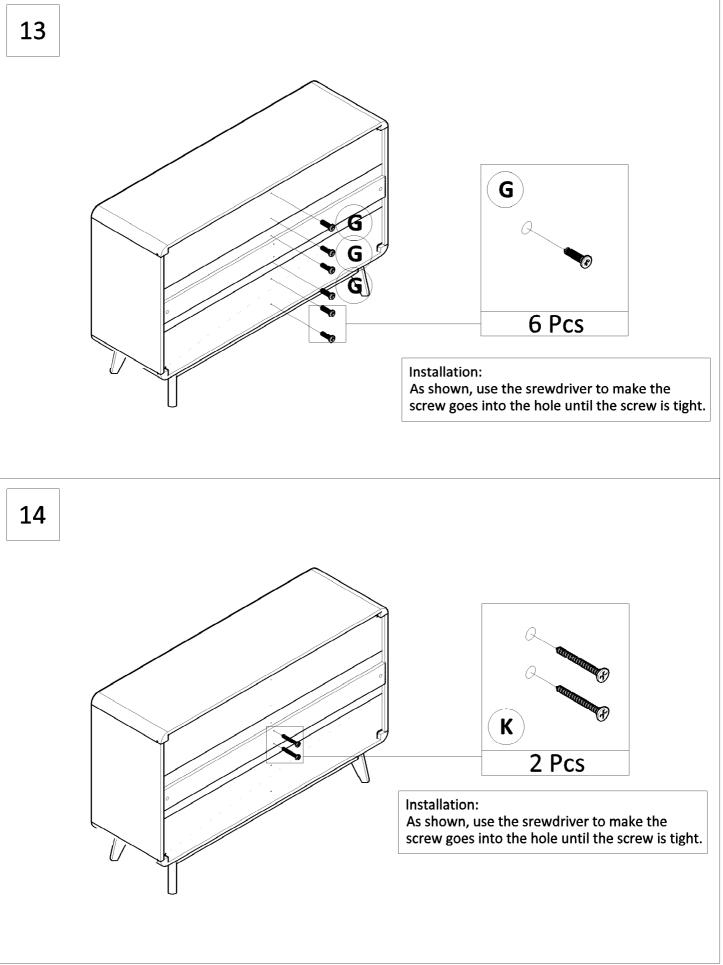

15

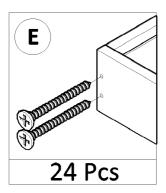


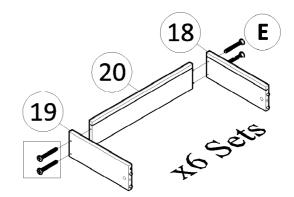


Installation:


As shown, use the srewdriver to make the screw goes into the hole until the screw is tight.

16

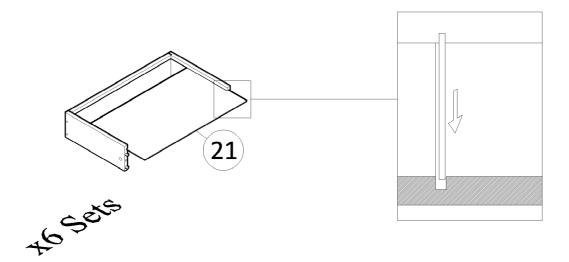

17

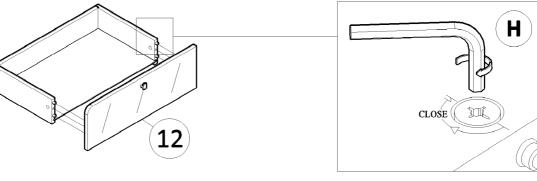


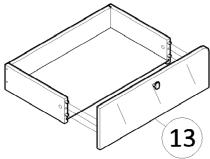

### Installation:


As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.


18

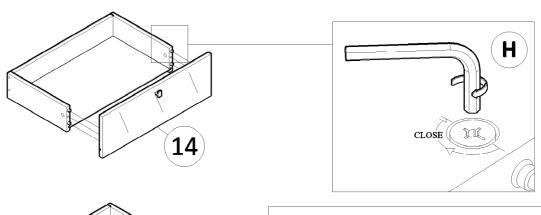

### Installation:


As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

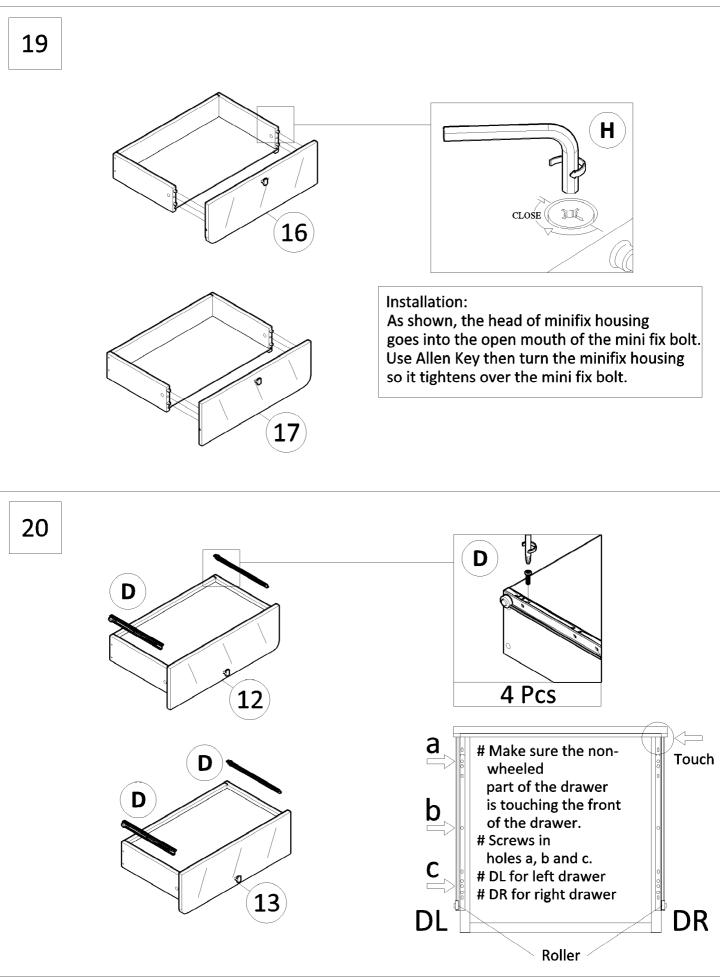

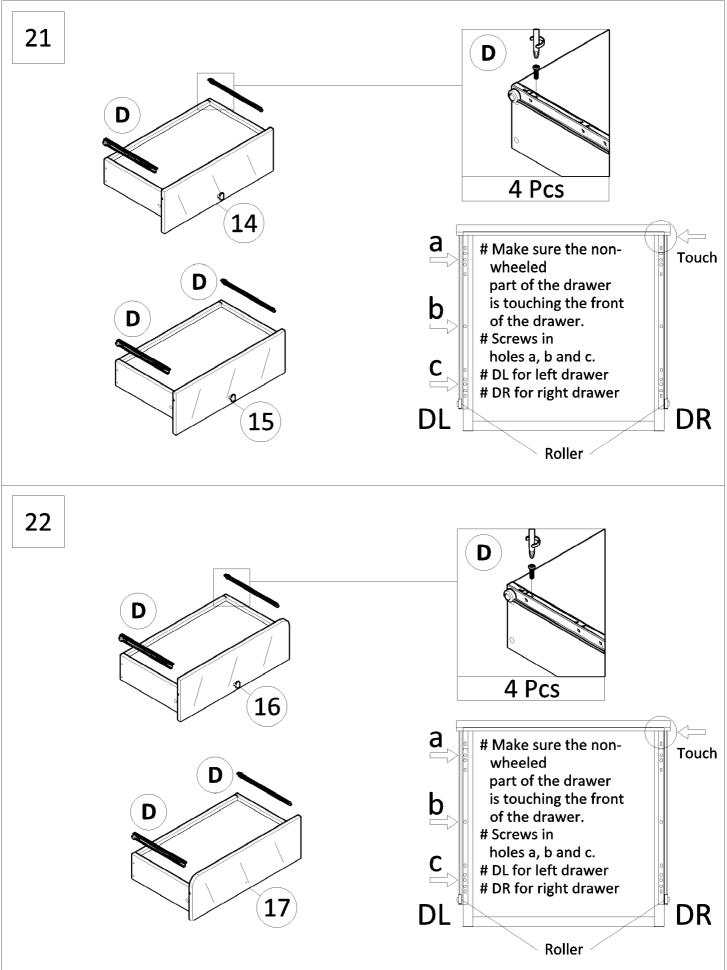


23


### COMPLETED DRAWER

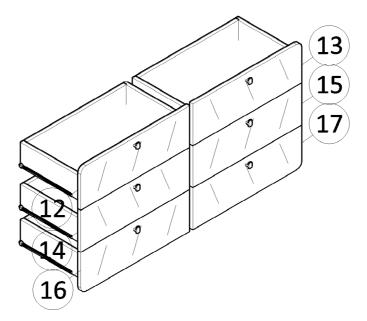

24

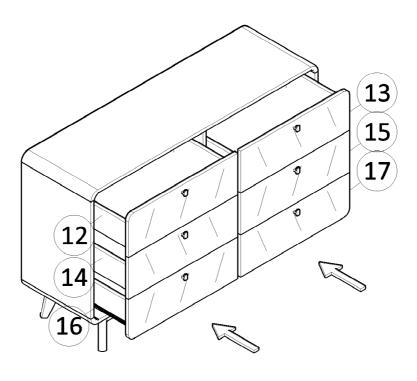

25 COMPLETED

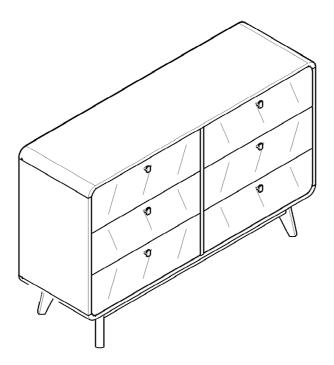

### Safety

Please read the below warnings before use.

Failure to follow these warnings could result in serious injury.



### **CAUTION!!!**

### **Purpose**

- Do not use this unit except for original application
- This unit is for household use. Do not use it for wholesale.
- This unit is for indoor use. Do not use it outside.

### **Assembly**

- Assembling with 2 or more people is recommended
- Please assemble at a spacious and flat place
- Please place blankets or cardboard so floor or walls will not be scratched
- Please ventilate the area if there is strong glue odor after opening the product
- Please follow assembly instructions

### **Placing The Unit**

- Store the unit on a flat surface.
- Place a mat under the unit if you place it on wood floors for floor protection
- Do not place the unit in areas where conditions are extreme, such as direct sun or a humid place
- Do not place the unit in a hot or humid area, such as near the heater or fireplace

### Usage

- Please check your surroundings when you use this unit
- Do not place any hot or wet objects on the unit
- Remove all objects on the unit when you move it
- Do not leave water or wet objects on the surface.
- Do not use it for toys
- Do not stand on it or use it for a step stool.
- Do not overload only the top drawers. Load the same amount to help prevent tipping of the unit.
- Do not leave drawers open or put pressure on opened drawers to help prevent falling or wrecking.
- Do not stand or put pressure on opened drawers.
- Colors could fade
- Please open drawers slowly
- Make sure you do not catch your finger when you use the drawer.
- Weight Capacity Top insert: About 30KG,
   Shelf insert: About 10KG,
   These are measured figures, not guaranteed figures

### **Cleaning**

- Please check all assembled parts are tight regularly. (About once a month)
- Use dry soft cloths for dust and spots
- For heavy spots, use clothes with neutral detergent then dry in a well ventilated area.
- Do not use if any parts are broken.
- Please recycle the unit or its package depending on your city rules.



# Installation Instruction:

A tip restraint must be attached to a wall stud using the 2" screw enclosed

the 5/8" screw provided. back top edge of the furniture using Attach a strap to the back top rail or

<u>. -</u>

Ņ

- the smaller hole. of your unit. Attach to the wall stud mounting strap secured to the back wall stud and 2 inches below the Locate the strap on the wall over a using the 2" screw provided, through
- Place the furniture into position so both mounting strap are vertically in


ယ


4.


- through until all slack is removed. mounting strap. Bring both ends through the larger hole in Lace the end of the restraint strap through the locking end and draw it together and slide the flat end each
- Confirm that the strap is securely laced and locked.


Ģ



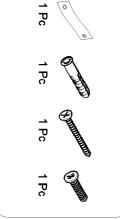

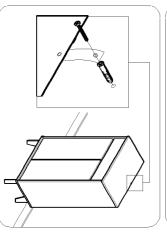

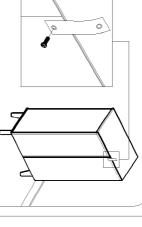

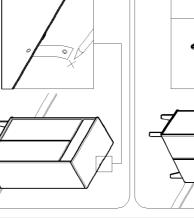

- See installation instruction for details.
- anti-tip bracket it the legs are removed Never remove the dresser/chest of drawer legs. The range will not be secured to the
- Do not rest large heavy items on the open drawer. The range could tip forward and cause
- Re-engage the anti-tip device after pulling the range out for moving or any other reason
- Failure to follow these instructions can result in serious injury or death to children or adults

Manufactured by : S&E Enterprise Sdn Bhd Address : PLO 65, No;K16, Kawasan Perindustrian Tanjung Agas, 84000 Muar, Johor, West Malaysia. 03/2018

# ANTI-TIP DEVICE INSTALLATION INSTRUCTION

damage. This guide does not cover all possible conditions that may occur. Always contact your IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions when using the range to prevent the risk of personal injury or service agent or manufacturer about problems that you do not understand.



result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word WARNING or CAUTION. These words means: This is the safety alert symbol. This symbol alerts you to potential hazards that can



death or serious injury. WARNING - Indicates a hazardous situation which, if not avoided, could result in



or moderate injury CAUTION - Indicates a hazardous situation which, if not avoided, could result in minor

### **ANTI-TIP DEVICE**



# /! WARNING

EDGE OF THE RANGE BACK GROUND AND CAREFULLY ATTEMPTED TO TILT IT PROPERLY, VERIFY THAT ANTI DEVICE IS ENGAGED, OR GRASP THE TOP REAR PROPERLY INSTALLED ANTI-TIP DEVICE, TO CHECK IF THE DEVICE IS INSTALLED TO REDUCE THE RISK OF TIPPING, THE APPLIANCE MUST BE SECURED BY A FORWARD. Refer to the installation section for instructions

A child or adult can tip the range and be killed.

Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged following the instructions on the anti-tip bracket template.

Engage the range to the anti-tip device following the instructions on the anti-tip bracket the instruction on the anti-tip bracket template. template. Ensure the anti-tip device is re-engaged when the range is moved by following

anti-tip device in place and engaged Re-engage the anti-tip device if the range is moved. Do not operate the range without the

Failure to do so can results in death or serious injury to children or adults

Do not step or sit on drawers. The range could be tipped and injury might result.