ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list


For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling. CAUTION:


- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.


NO	PART LIST	QTY
Α	BACK REST	1 PC
В	FRONT LEG	1 PC
С	SIDE RAIL	2 PCS
D	CUSHION SEAT	1 PC


NO	DESRIPTION		QTY		
1	JCBC SCREW M6 X 50MM	0	6 PCS		
2	WOOD DOWEL Ø8 x 30MM		4 PCS		
3	CSK SCREW M4 x 30MM	O TOTAL DE LA CONTRACTION DE L	3 PCS		
4	SPRNG WASHER M6	0	6 PCS		
5	M4 ALLEN KEY	<u> </u>	1 PC		

MODEL: 310C

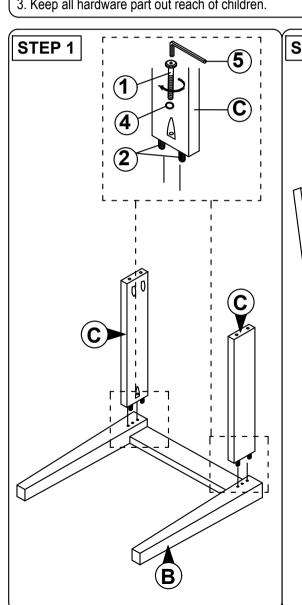

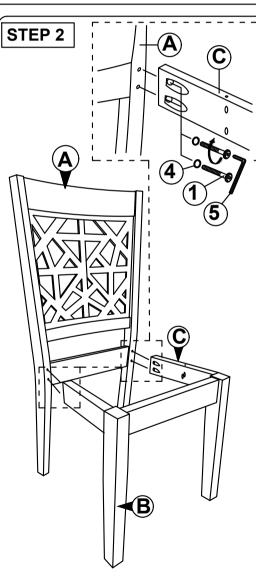

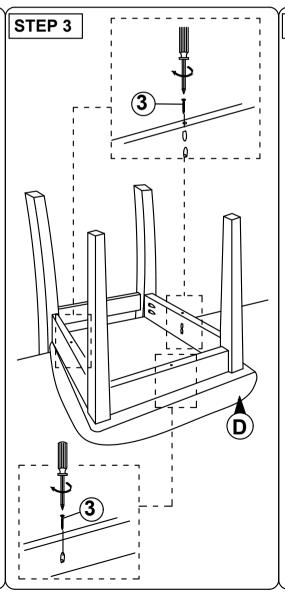

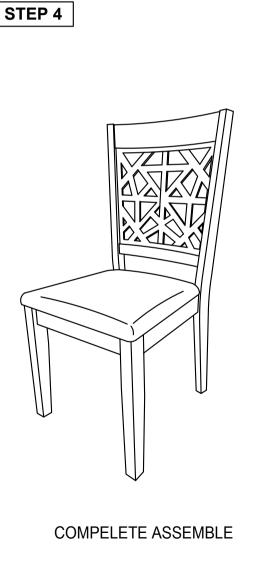

ASSEMBLY INSTRUCTIONS

MODEL: 7048T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

- 1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

PART LIST				
No.	DESCRIPTION	QTY		
Α	Table Top	1		
В	Table Leg	4		
С	Table Support	2		
D	Bottom Support	1		

HARDWARE LIST				
No.	DESCRIPTION		QTY	
1	JCBC Screw M6x90mm	ошинининишш 🕞	4	
2	JCBC Screw M6x50mm	<u> </u>	1	
3	JCBC Screw M6x25mm	Сишинин	8	
4	CSK Screw M4x30mm	$<$ mm \odot	12	
5	Spring Washer		13	
6	Adjuster	ette 🕦	4	
7	Allen Key		1	

