ASSEMBLY INSTRUCTION

MODEL: 146 C

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See

hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from

being scratched. Follow the figure to start assembling.


Caution:

1.Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.

2.Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.

3.Keep all hardware part out of reach of children.

NO	PART LIST	QTY	NO	DESCRIPTION		QTY
Α	BACK REST	1	1	JCBC SCREW M6 X 50MM	8	6
В	FRONT LEG	1	2	WOOD DOWEL		4
С	SIDE RAIL	2	3	CSK SCREW M4 x 30mm		3
D	CUSHION SEAT	1	4	SPRING WASHER	Ø	6
			5	M4 ALLEN KEY		1

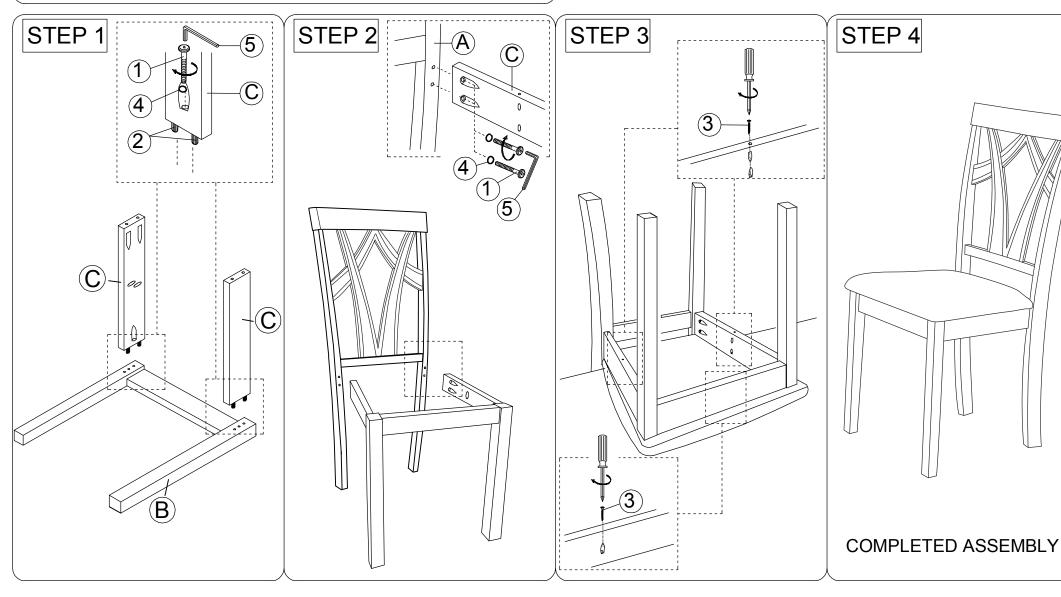

ASSEMBLY INSTRUCTIONS

MODEL : 7008T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.

2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.

3. Keep all hardware part out of reach of children.

PART LIST							
No.	DESCRIPTION	QTY					
А	TABLE TOP	1 PC					
В	TABLE LEG	4 PCS					

HARDWARE LIST								
No.	DESCRIPTION		QTY					
1	FLAT WASHER 6/19"	0	8 PCS					
2	SPRING WASHER 6/13"	Ø	8 PCS					
3	JCBC SCREW M6 X 70MM	0	8 PCS					
4	M4 ALLEN KEY		1 PC					

