

ASSEMBLY INSTRUCTION

TB907

Ax1		
Bx1		
Cx1		
Dx4		
Ex4		
Fx4		
Gx1		