 

 

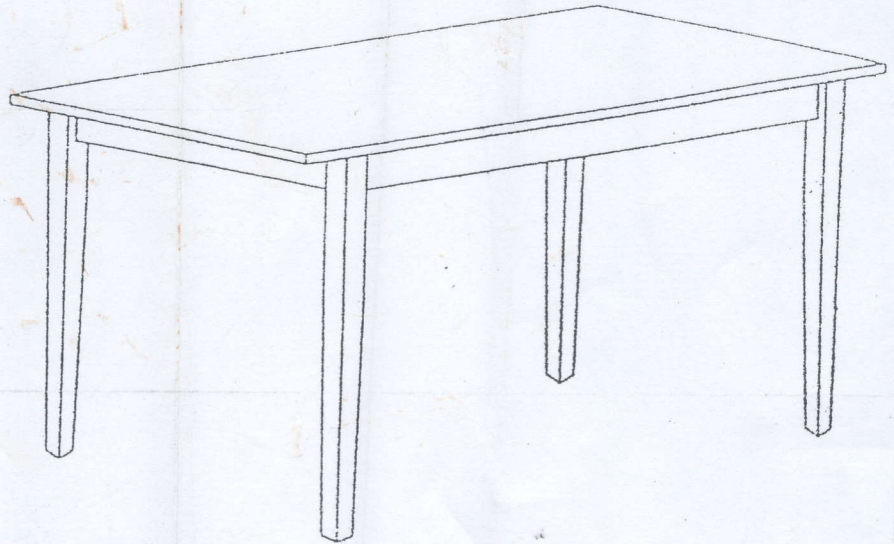


ASSEMBLY INSTRUCTION

MODEL : PCH 254SK / 305SK

Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

PART LIST		
A	TABLE TOP	1 PC
B	TABLE LEGS	4PCS
HARDWARE LIST		
C	 HEX SCREW	8 PCS
D	 FLAT WASHER	8 PCS
E	 HEX WRENCH	1 PC
F	 SPRING WASHER	8 PCS



IMPORTANT NOTE : PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH HEX SCREW (C) SPRING WASHER (F), AND FLAT WASHER (D). THEN TIGHTEN THE HEX SCREW(C) BY USING THE HEX WRENCH(E).

