ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

- CAUTIONS: 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.
 - 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
 - 3. Keep all hardware parts out of reach of children.
 - 4. Strictly no power drill to assemble. Use only the screwdrivers for installation to protect the wood frame.

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	ARM (L&R)	2 PCS	
В	BACK	1 PC	
C	CUSHION SEAT	1 PC	
D	SUPPORT RAIL	2 PCS	
Е	BOARD	1 PC	
F	CUSHION BACK	1 PC	

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBB BOLT M8 x 40mm	ommon —(-)	4 PCS
2	M8 SPRING WASHER	0	4 PCS
3	WOOD SCREW M4 x 32mm		8 PCS
4	WOOD DOWEL M10 x 30mm		8 PCS
5	WOOD BUTTON DIA 18.5mm	0	4 PCS
6	M5 ALLEN KEY (BALL SHAPE)	/	1 PC

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver & Rubber Mallet (not provider).





