ASSEMBLY INSTRUCTION

MODEL: 5991C


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling. CAUTION:

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	PART LIST	QTY
Α	BACK REST	1 PC
В	FRONT LEG	2 PCS
С	BOX SEAT	1 PC

_			=
ŃΟ	DESRIPTION		QTY
1	JCBC SCREW M6 X 80MM	0	4 PCS
2	JCBC SCREW M6 X 50MM	0	4 PCS
3	JCBC SCREW M6 X 45MM	9	2 PCS
4	SPRNG WASHER	0	10 PCS
5	FLAT WASHER	0	10 PCS
6	M4 ALLEN KEY		1 PC

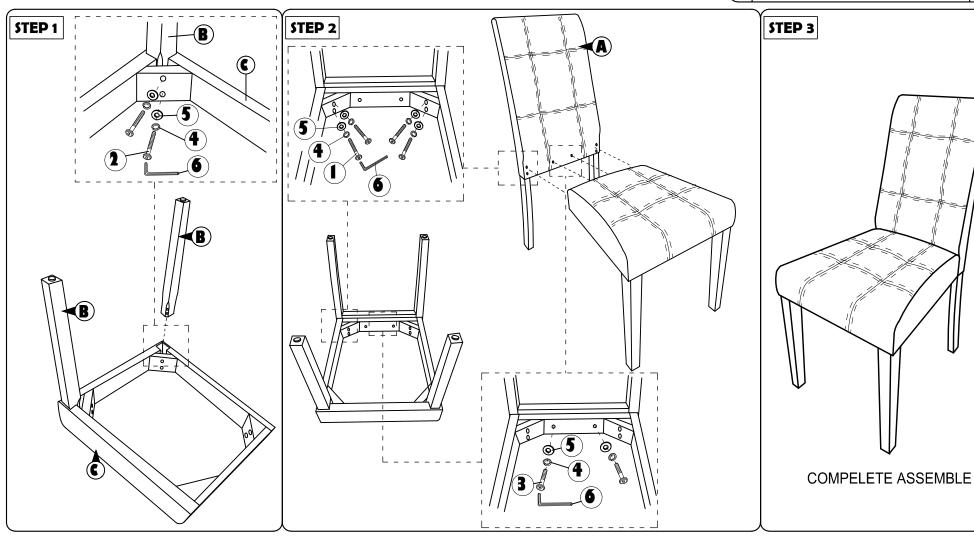

ASSEMBLY INSTRUCTIONS

MODEL: 7048T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

- 1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

	PART LIST	
No.	DESCRIPTION	QTY
Α	Table Top	1
В	Table Leg	4
С	C Table Support	
D	Bottom Support	1

HARDWARE LIST				
No.	DESCRIPTION		QTY	
1	JCBC Screw M6x90mm	<u> </u>	4	
2	JCBC Screw M6x50mm	diminimimi (6)	1	
3	JCBC Screw M6x25mm	СТИМИНИН	8	
4	CSK Screw M4x30mm	<i><11111111</i> €	12	
5	Spring Washer		13	
6	Adjuster	ette 🕦	4	
7	Allen Key		1	

