 
Assembly Instructions

WI-0724







Note: Do not assemble using power tools.

This can cause the bolts to be overtightened

WARNING




Anti Tipping Kit
Anti Tipping Kit **x 1**







Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.

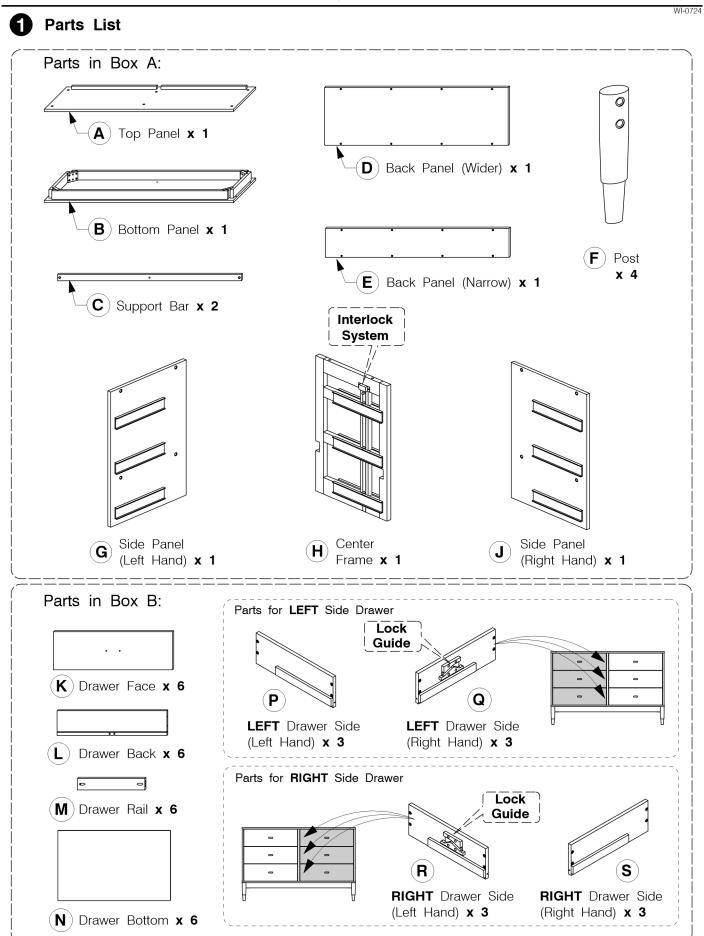

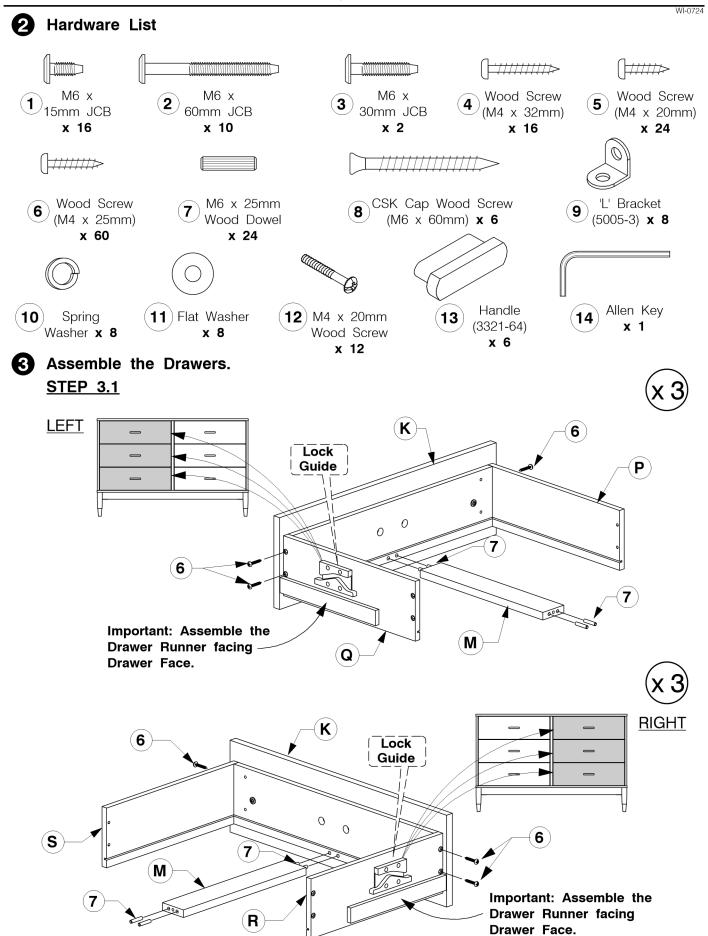


Assembly Instructions

 


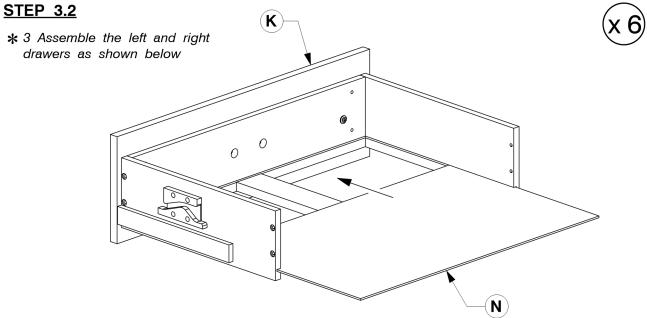

STEP 3.3

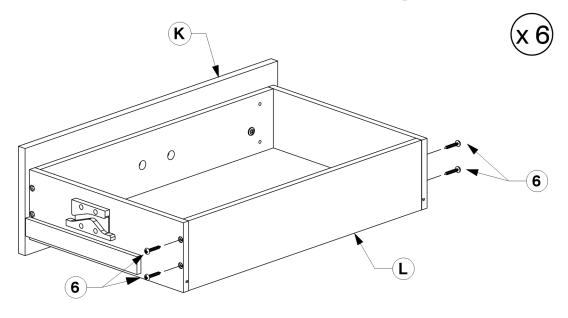


STEP 3.4

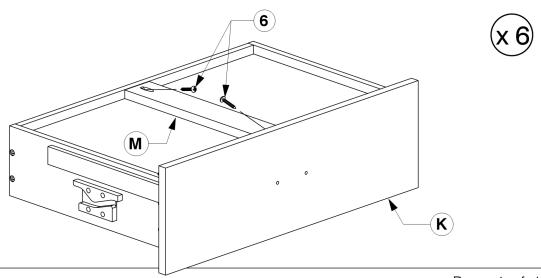


Page 4 of 11

WI-0724

Assembly Instructions

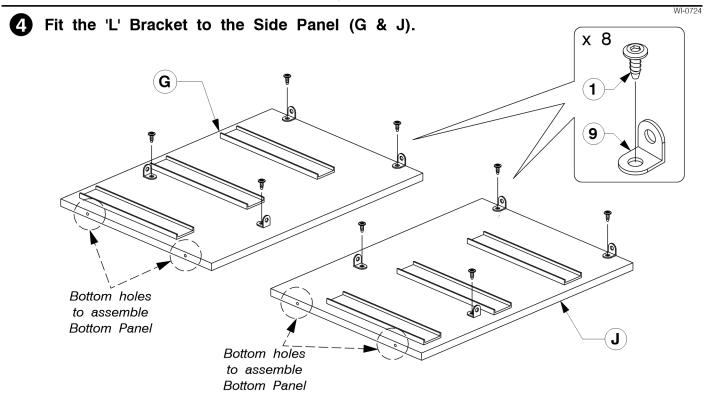


Fit the Side Panel- Right Hand (J) & Center Frame (H) to the Top Panel (A).

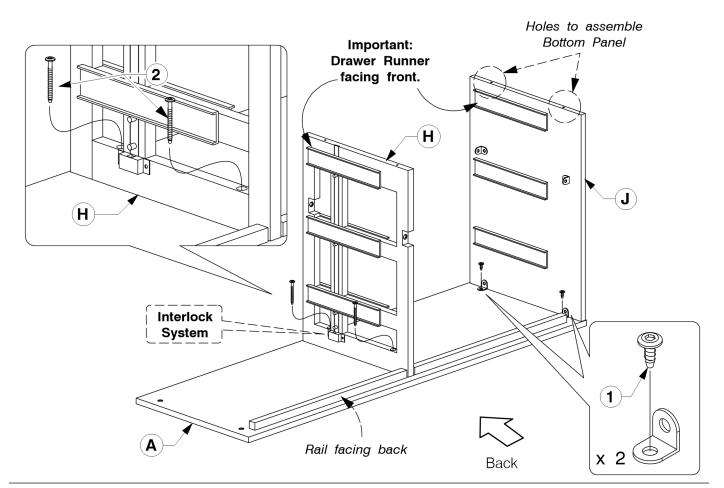


Assembly Instructions

6 Fit the Support Bar (C) to the Side Panel- Right Hand (J) & Center Frame (H) as shown.

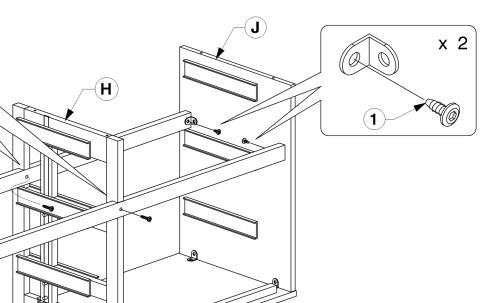


Back


Fit the other side of Side Panel- Left Hand (G) to the Top Panel (A) & Support Bar (C).

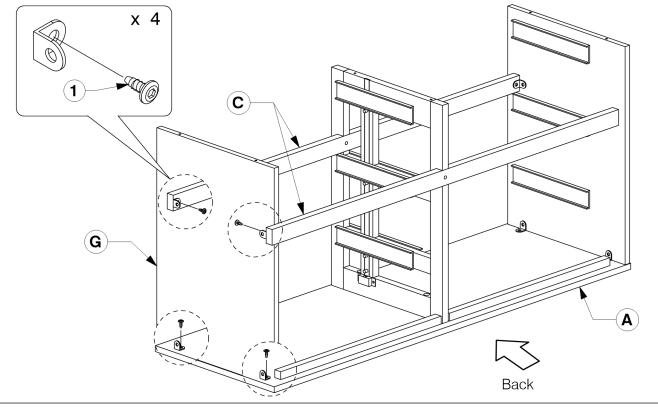


WI-0724

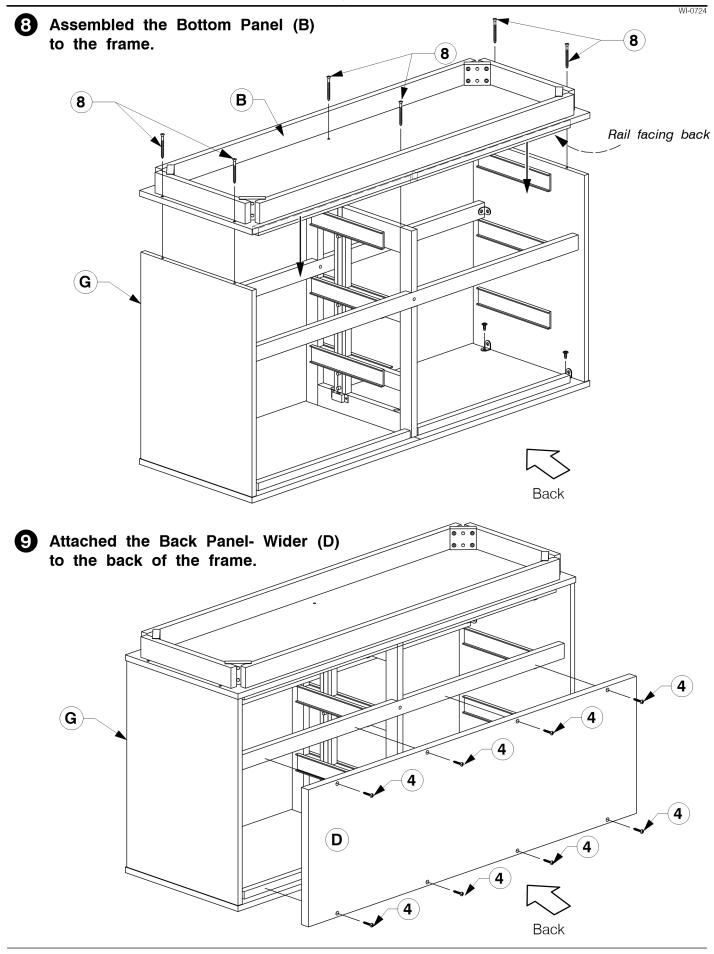


Assembly Instructions

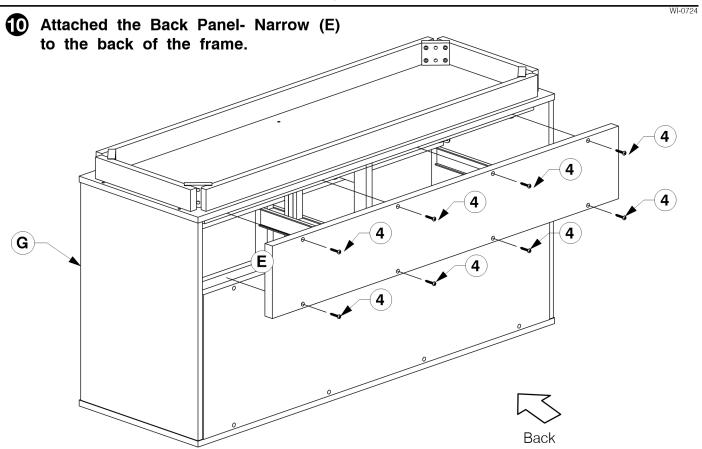

Fit the Post (F) to the Bottom Panel (B) as shown below.

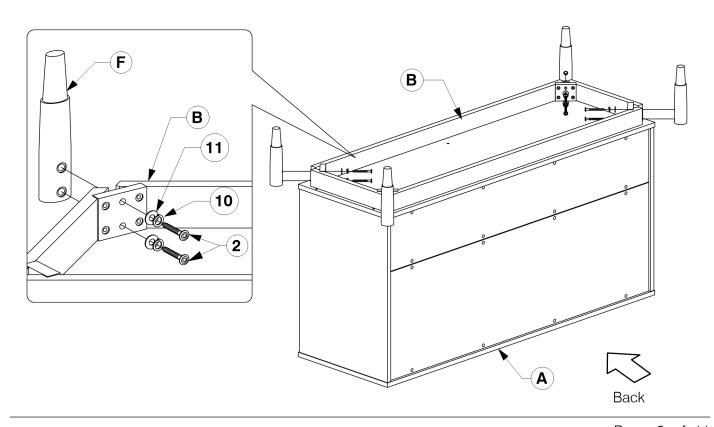


Page 8 of 11

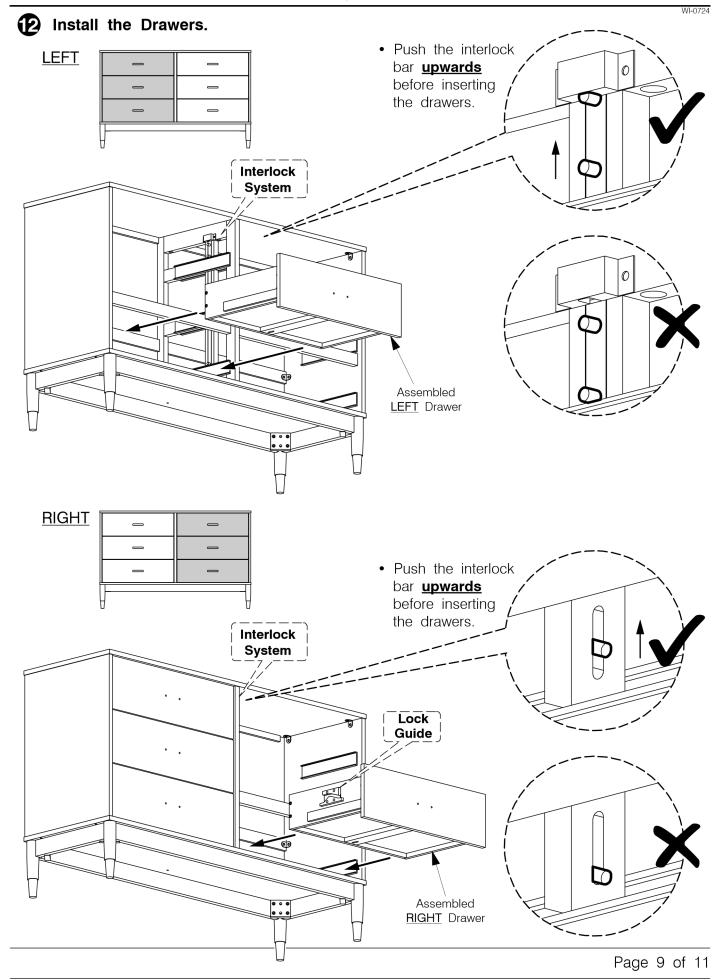

Assembly Instructions

Adjust the Drawer Face (K).

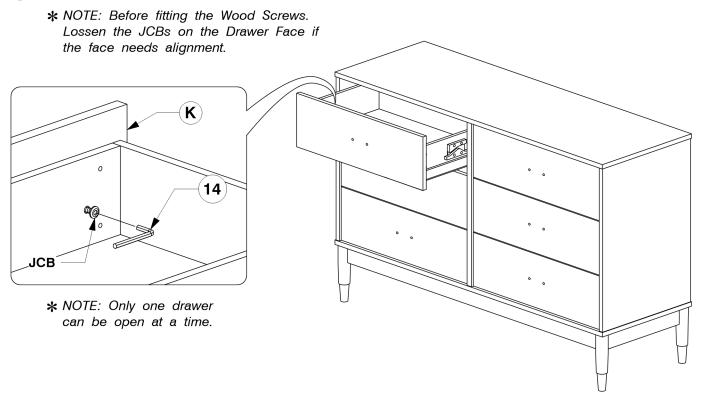

After the Drawer Faces (K) are aligned, secure with wood screws.

