 
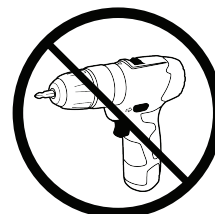 


9014 4 Drawer Chest

 
Assembly Instructions

WI-1024

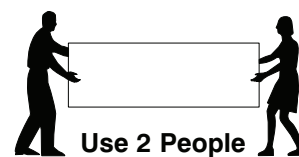

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

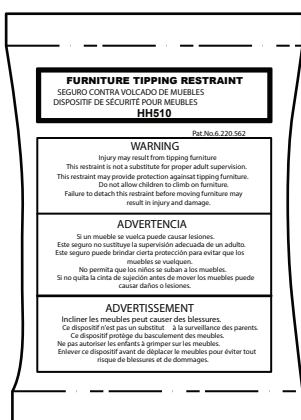

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.

9014 4 Drawer Chest

Assembly Instructions

 
WI-1024

1 Parts List


Parts in Box A:



A Top Panel x 1



B Bottom Panel x 1

 


C Back Panel x 2




D Upper Support Bar x 2



 E Bottom Front Support Bar x 1




F Bottom Rear Support Bar x 1

 

G Drawer Back x 4



 
H Drawer Bottom x 4



J Drawer Face x 4




 K Drawer Rail x 4




L Bottom Support x 4

 Parts in Box B:

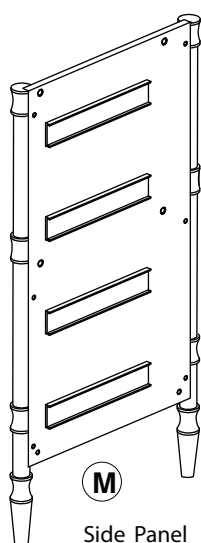


M Side Panel (Left Hand) x 1

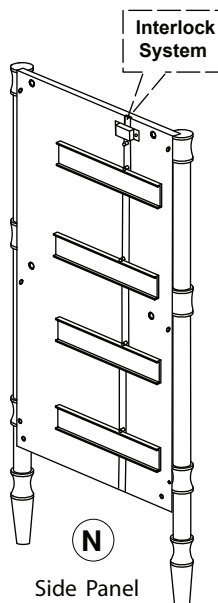 


N Side Panel (Right Hand) x 1

Interlock System

 O Drawer Side (Left Hand) x 4

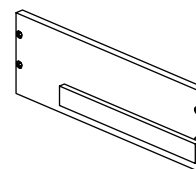

P Drawer Side (Right Hand) x 4

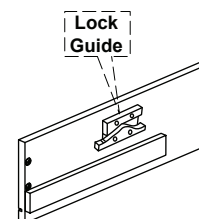 


Lock Guide

9014 4 Drawer Chest


Assembly Instructions

WI-1024

 2 Hardware List

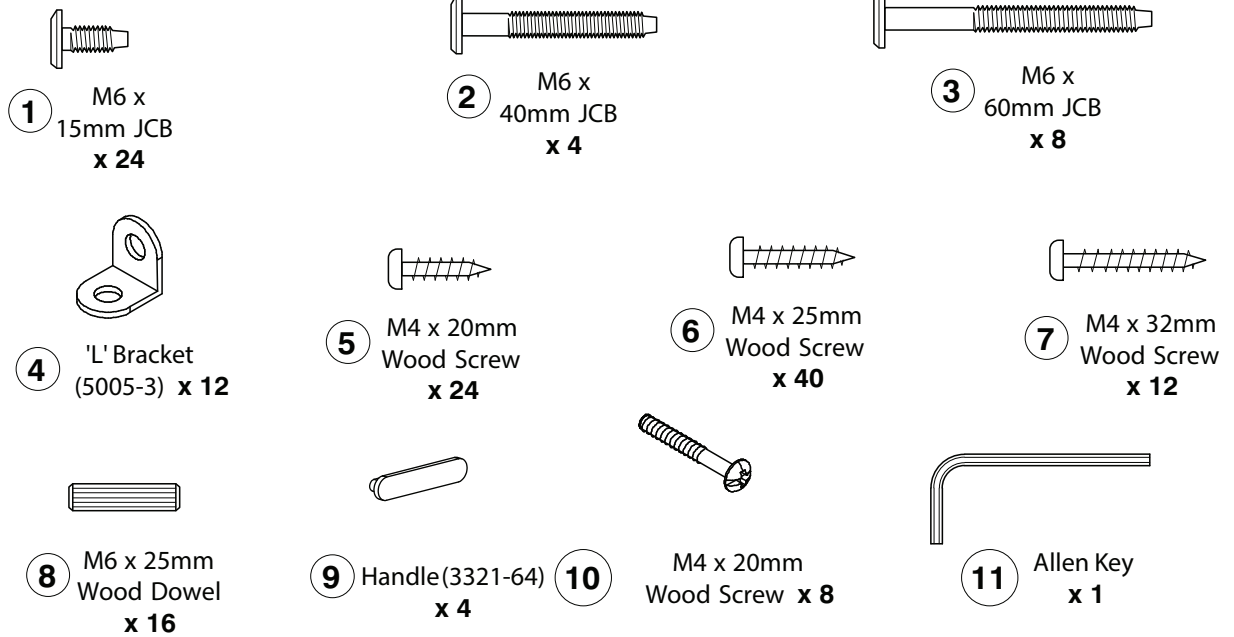

 3 Assemble the Drawer Sides (O & P) & Drawer Rail (K) to the Drawer Face (J).

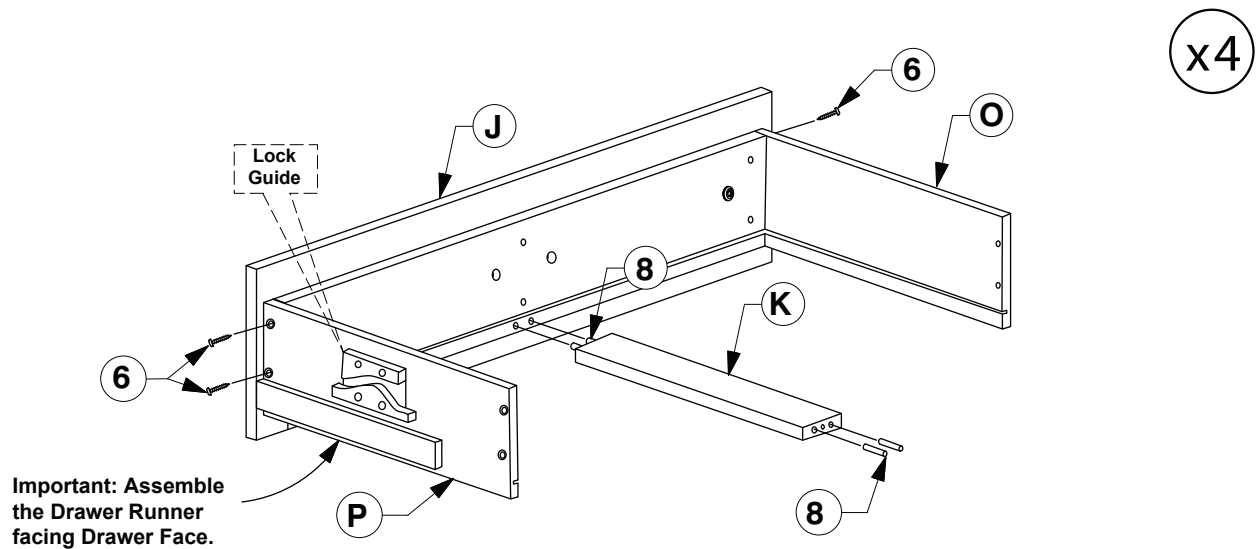


9014 4 Drawer Chest

Assembly Instructions

WI-1024


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (O & P).

 x4

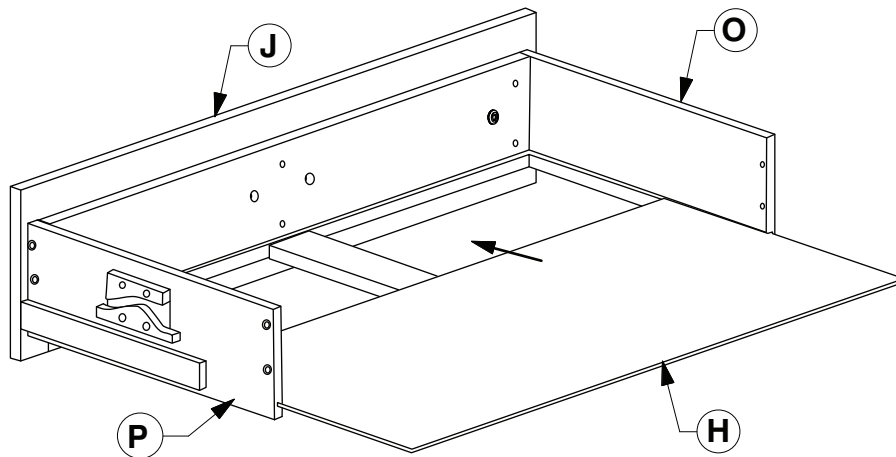


- 5** Assemble the Drawer Back (G) to the Drawer Sides (O & P).
Fit the Handle to the Drawer Face (J).

 x4

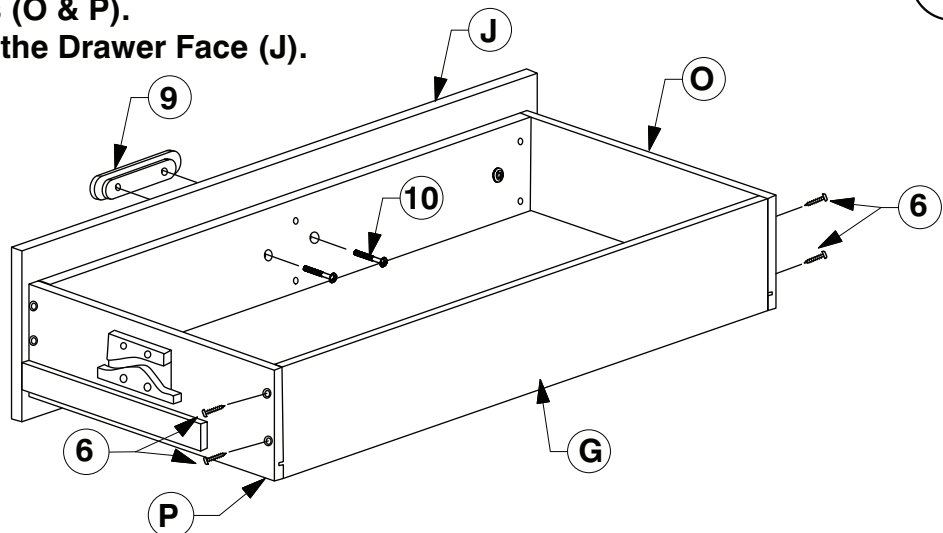

- 6** Turn the Drawer over to fit angled 25mm Wood screws (6) to the Drawer Rail (K).

 x4

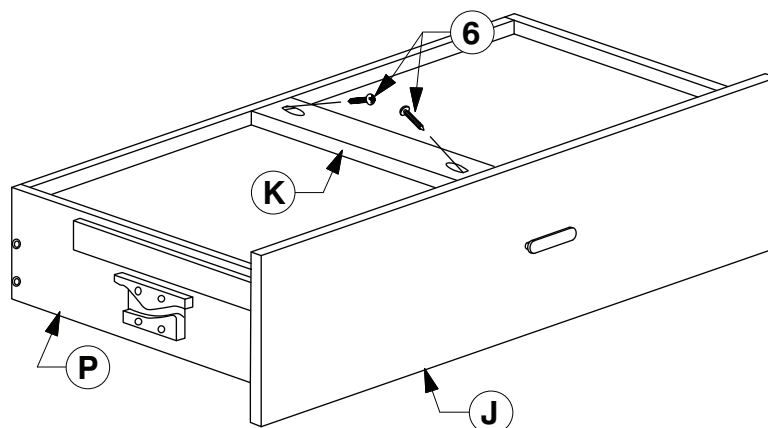


9014 4 Drawer Chest


Assembly Instructions

WI-1024

 - 7** Fit the 'L' Bracket (4) to the Side Panel (M & N).

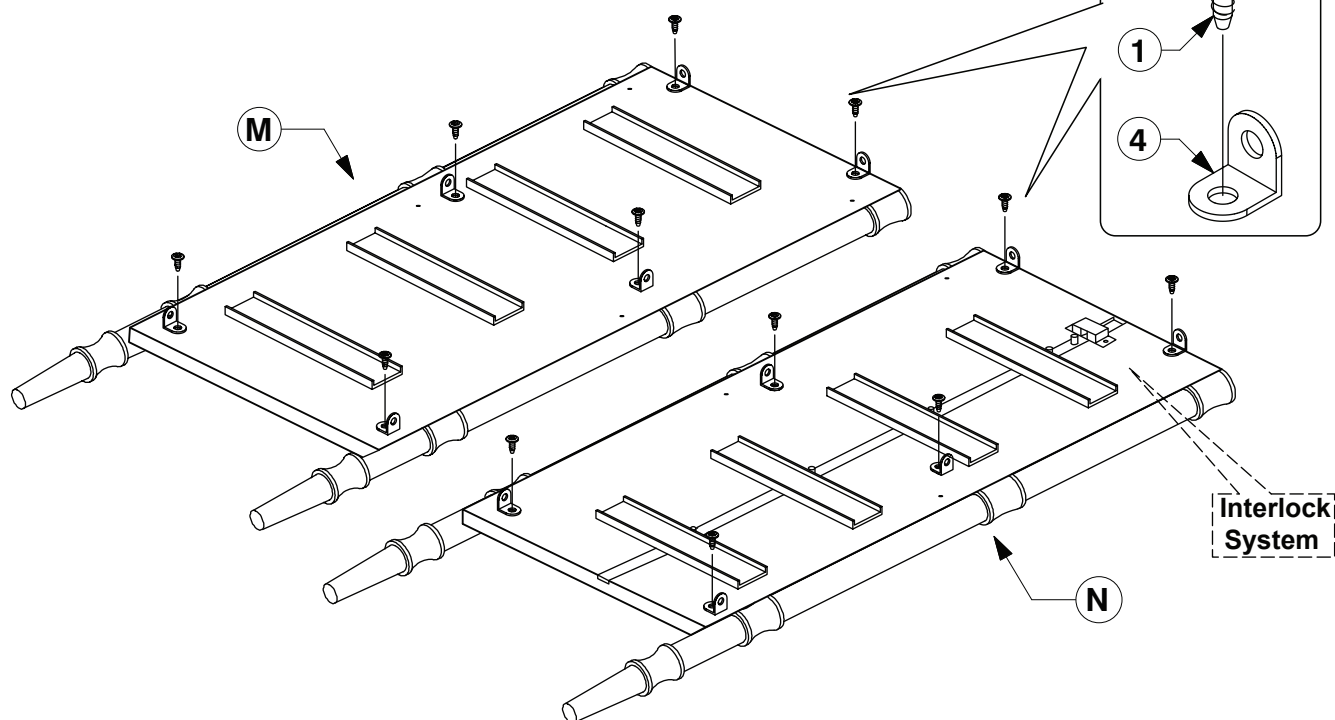

 - 8** Assembled the Top Panel (A) to the Side Panel (M & N).

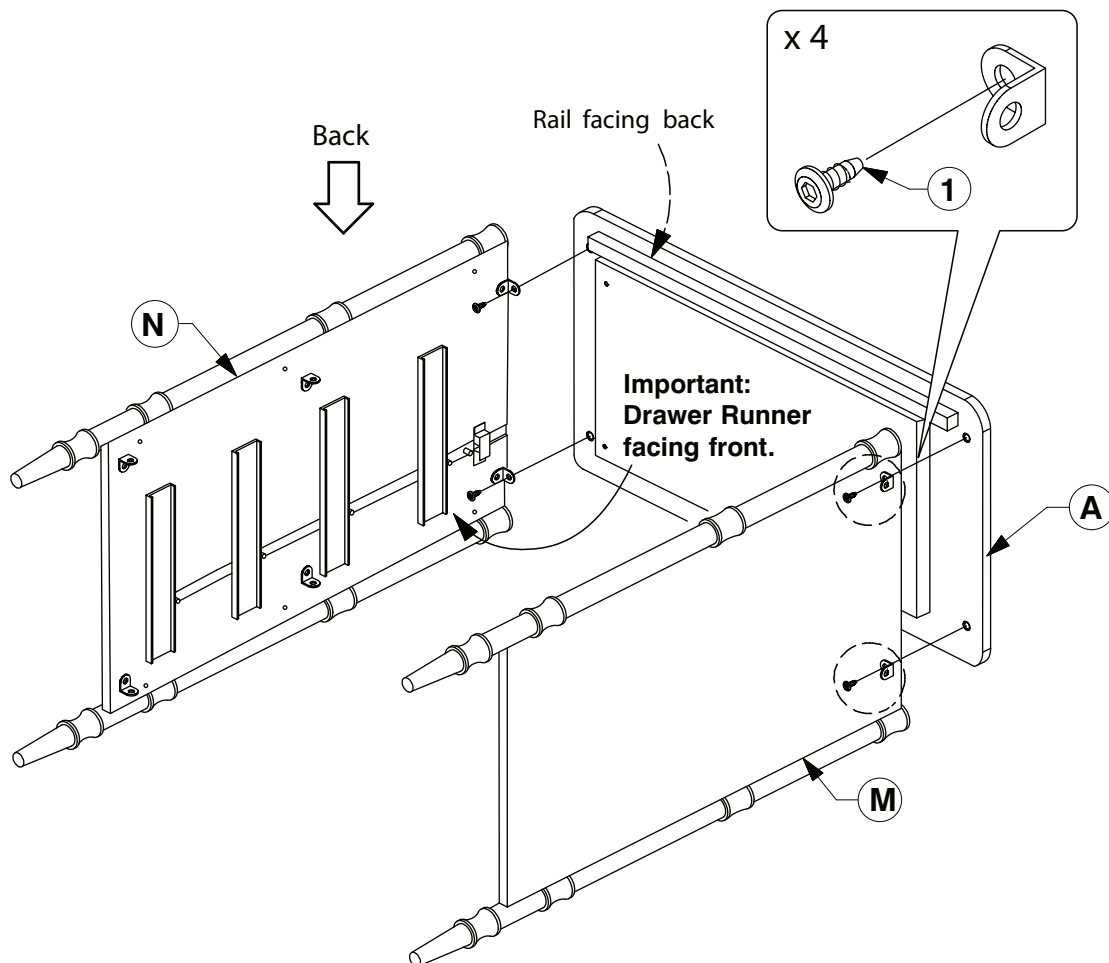


9014 4 Drawer Chest


Assembly Instructions

WI-1024

 - 9** Fit the Support Bar Upper & Bottom (D & E & F) to the Side Panel (M & N) as shown.

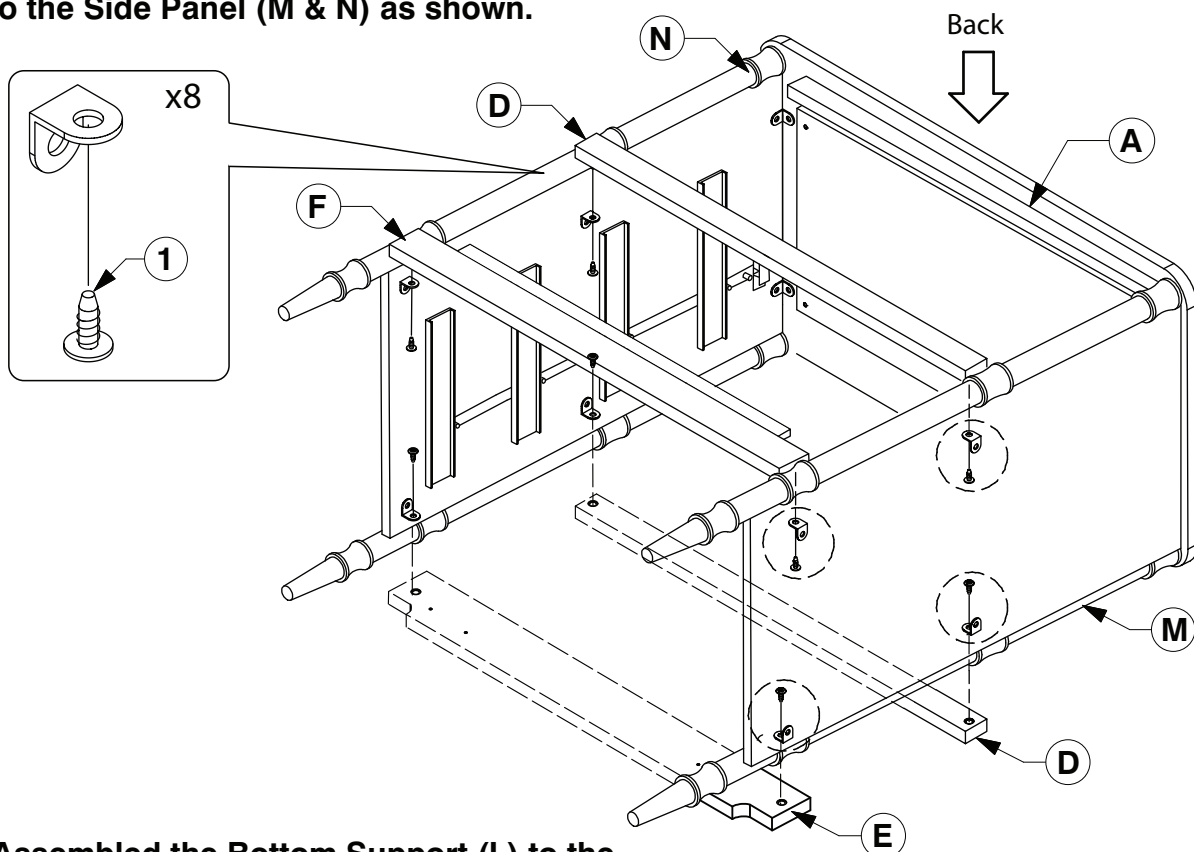

 - 10** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

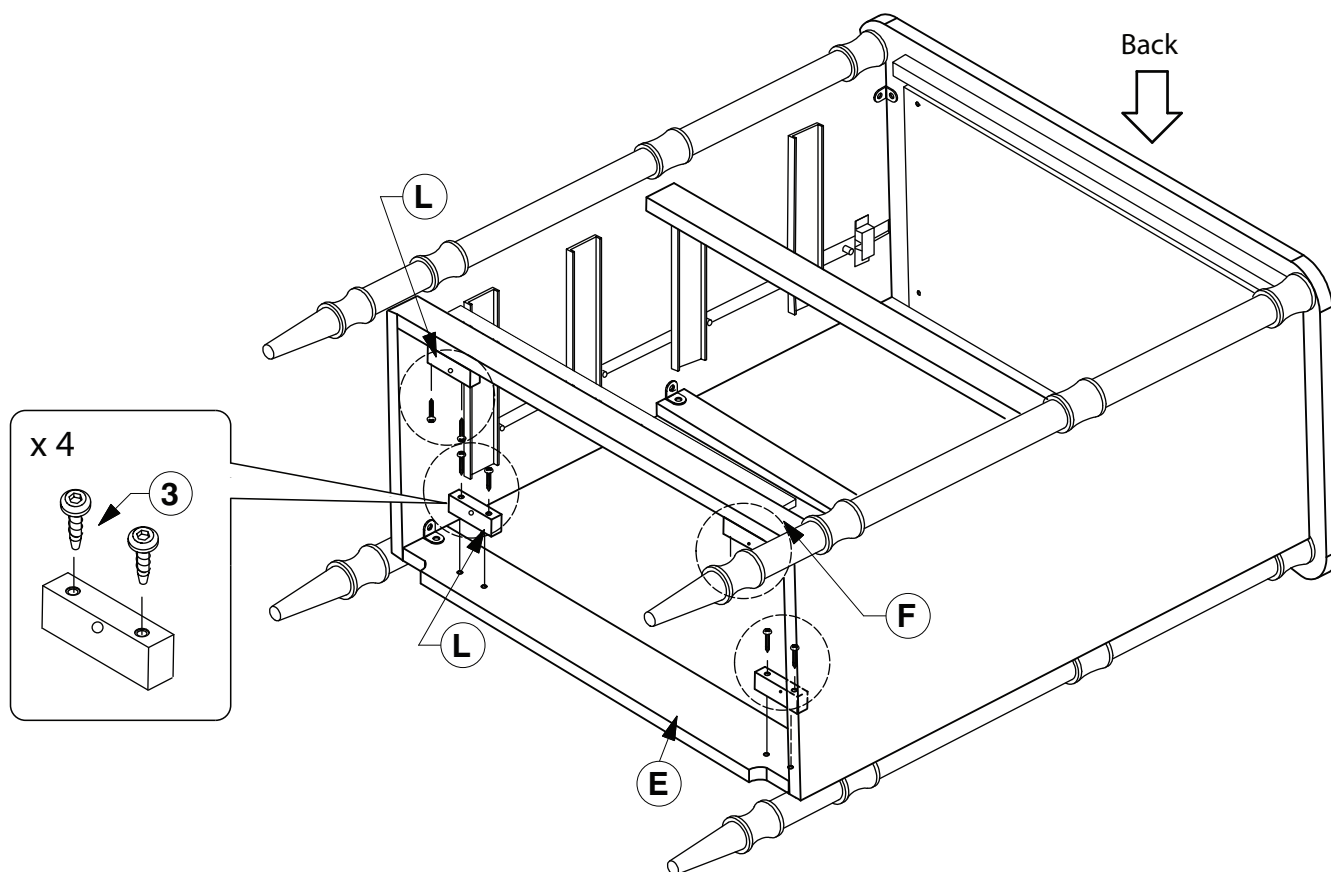


9014 4 Drawer Chest


Assembly Instructions

WI-1024

 - 11** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

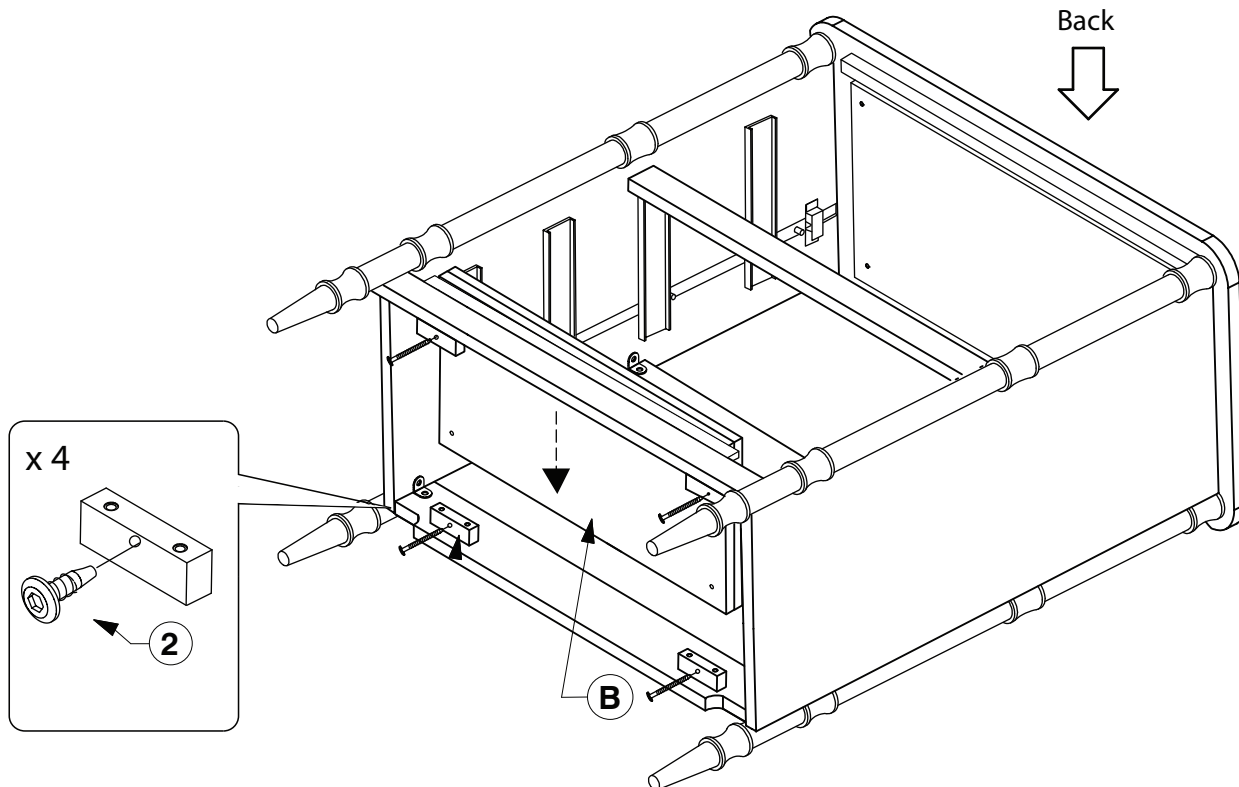

 - 12** Attached the Back Panel (C) to the back of the frame.

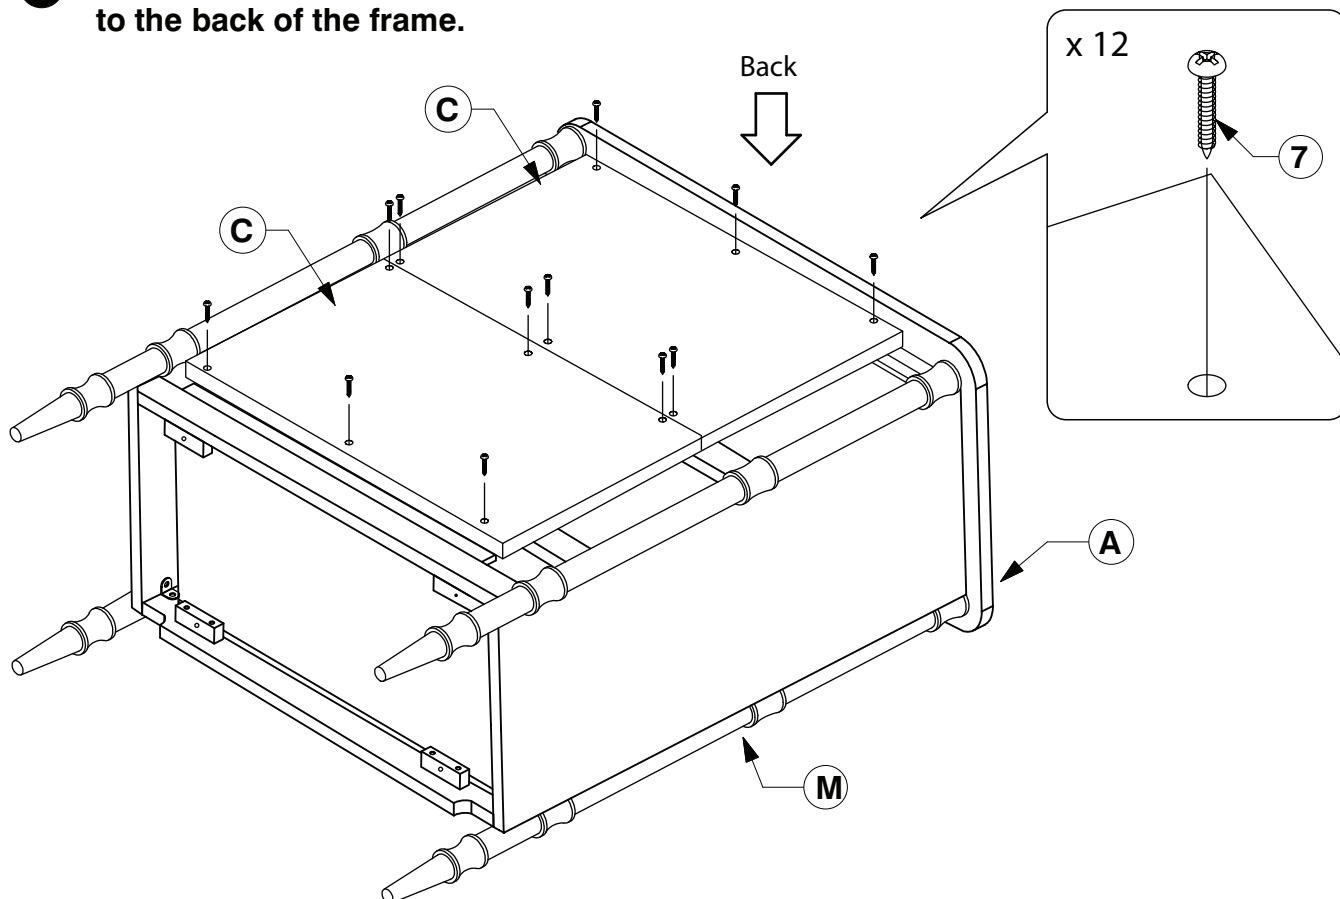


9014 4 Drawer Chest

Assembly Instructions

WI-1024


13 Install the Drawer.

 - Push the Interlock bar **upwards** before inserting the drawers.

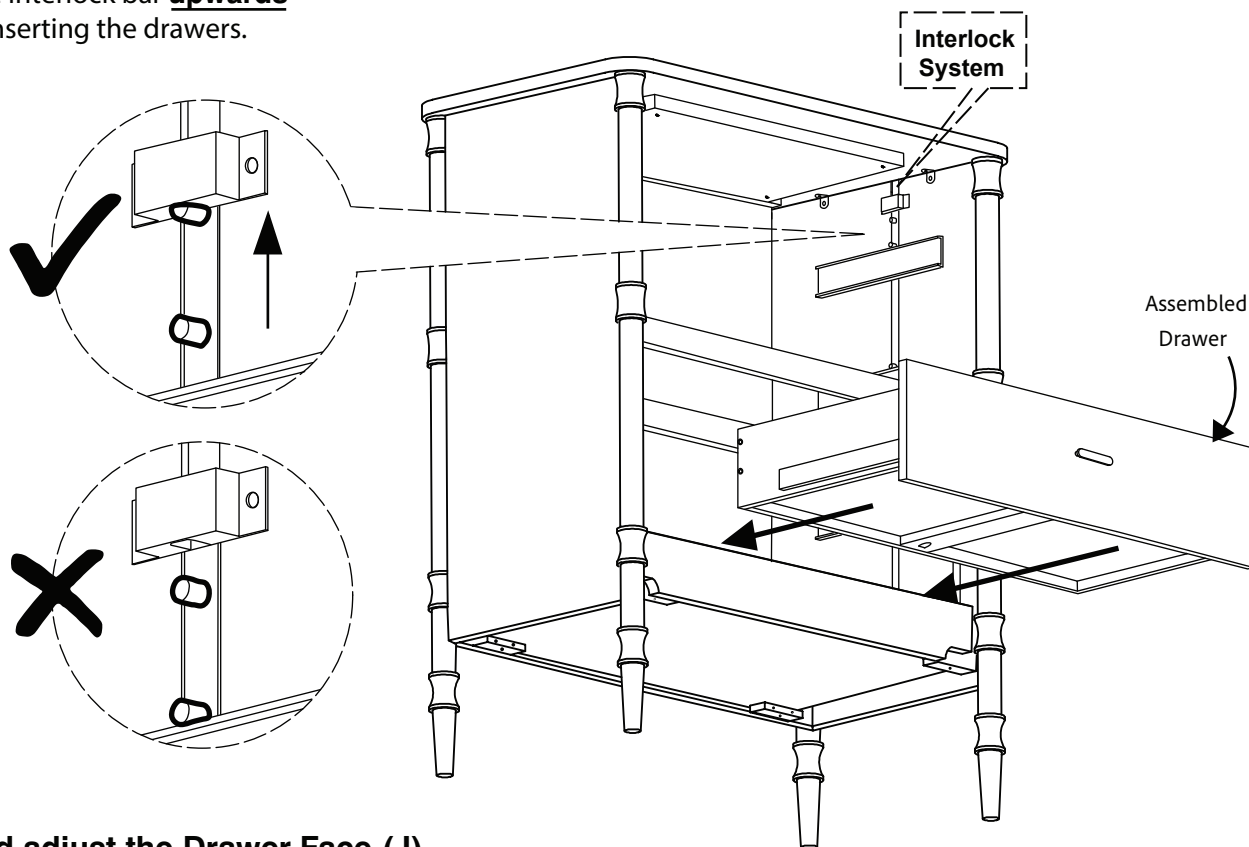


14 Fit and adjust the Drawer Face (J).

 - * NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if the face needs alignment .

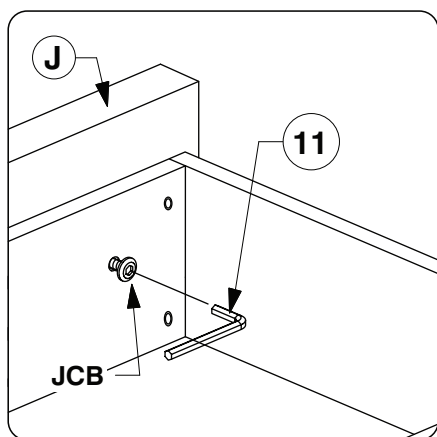

 - * NOTE: Only one Drawer can be open at a time.

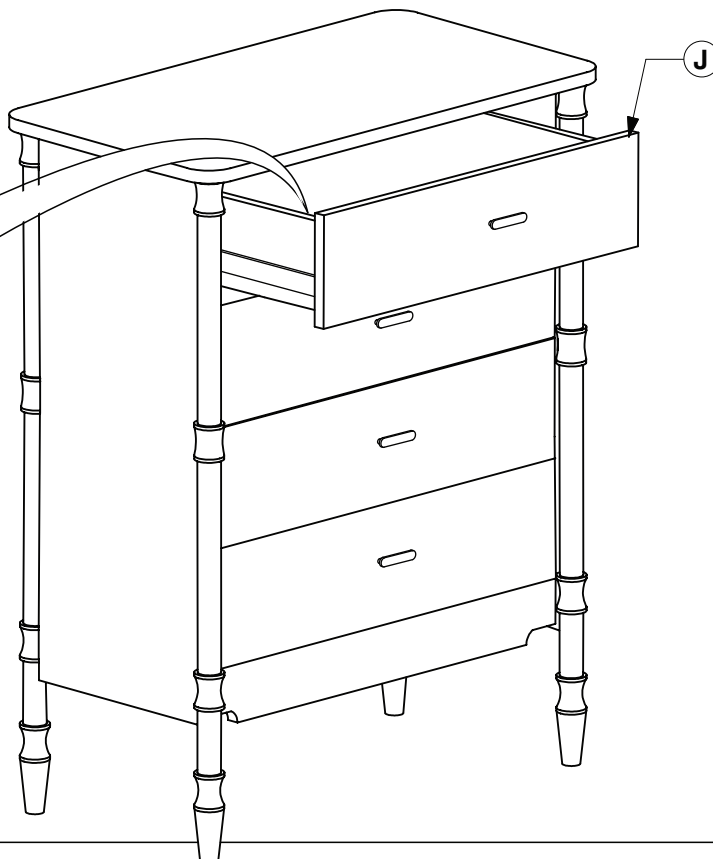


9014 4 Drawer Chest

Assembly Instructions

WI-1024

 - 15** After the Drawer Faces (J) are aligned, secure with wood screws.

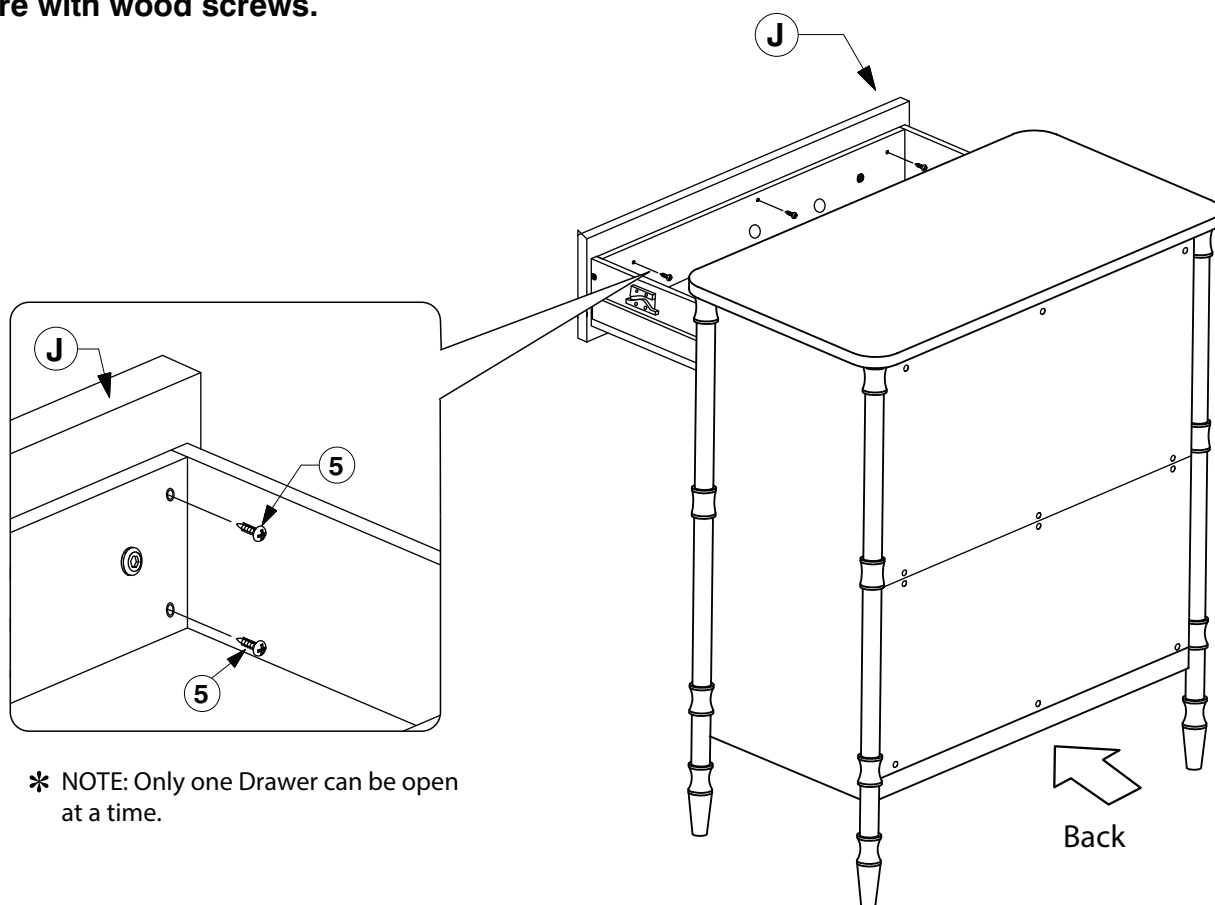




9014 4 Drawer Chest

Assembly Instructions


WI-1024

16 Remove the Drawers.

   - After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

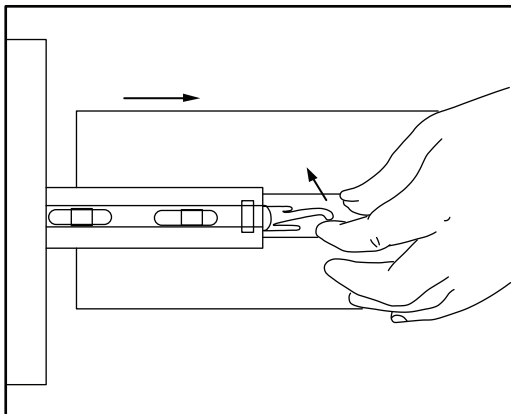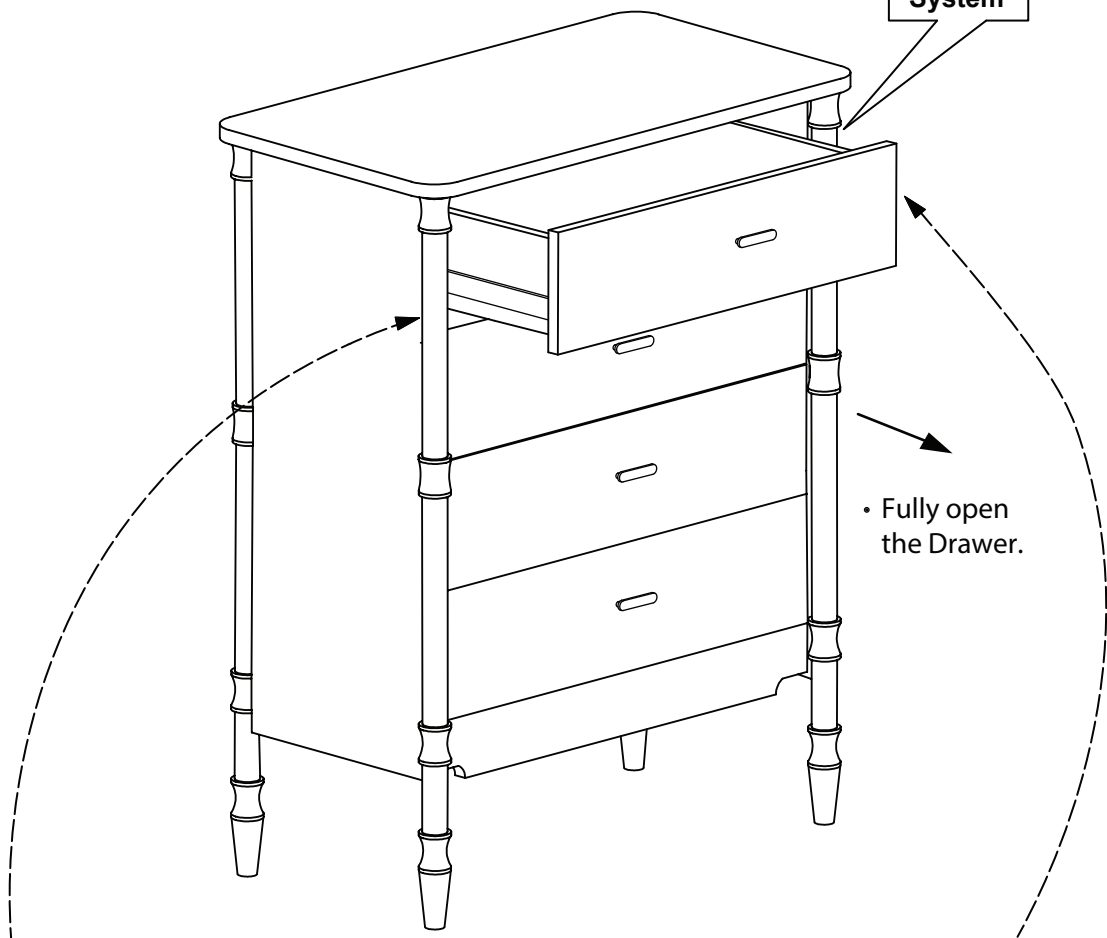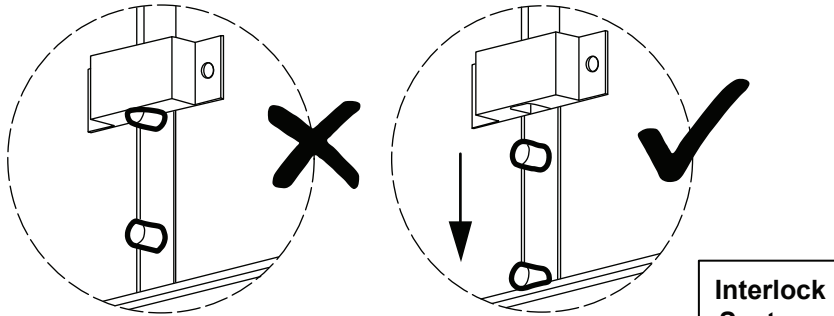

- Lift the **LEFT** side clip up.

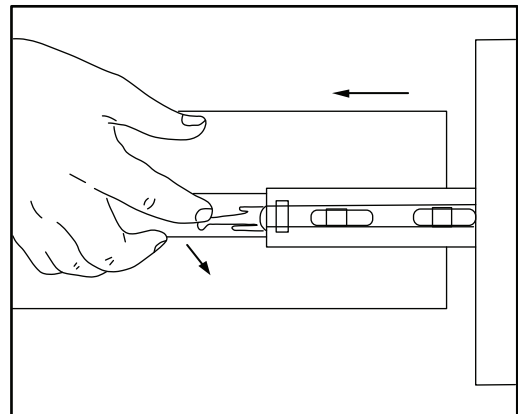 

- Push the **RIGHT** side clip down.