 
Assembly Instructions

WI-1024







Note: Do not assemble using power tools.

This can cause the bolts to be overtightened

WARNING



Anti Tipping Kit Anti Tipping Kit **x 1**











Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.

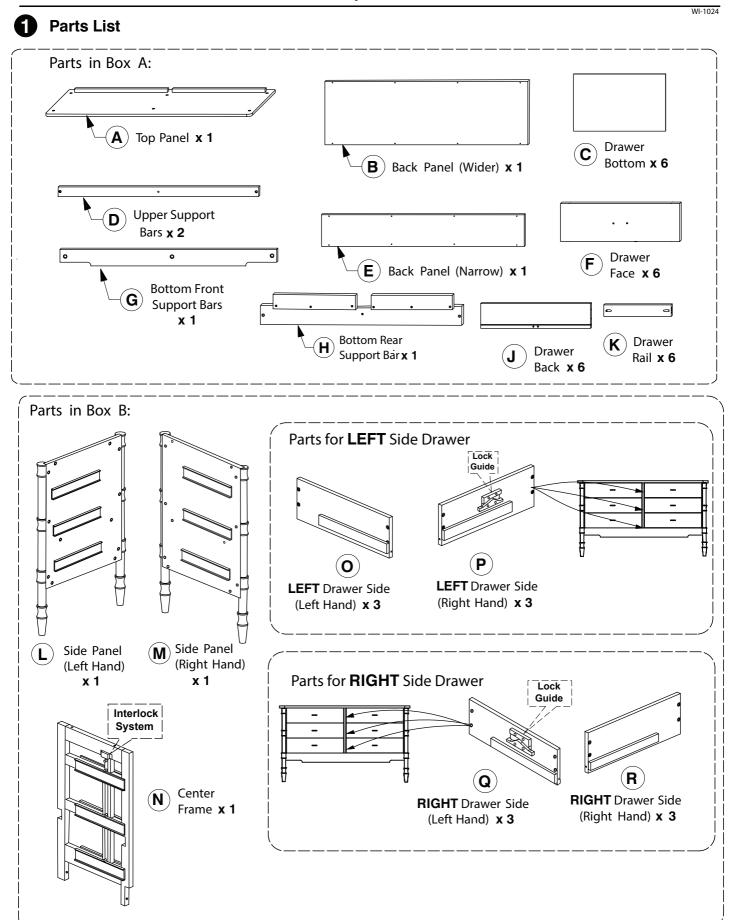

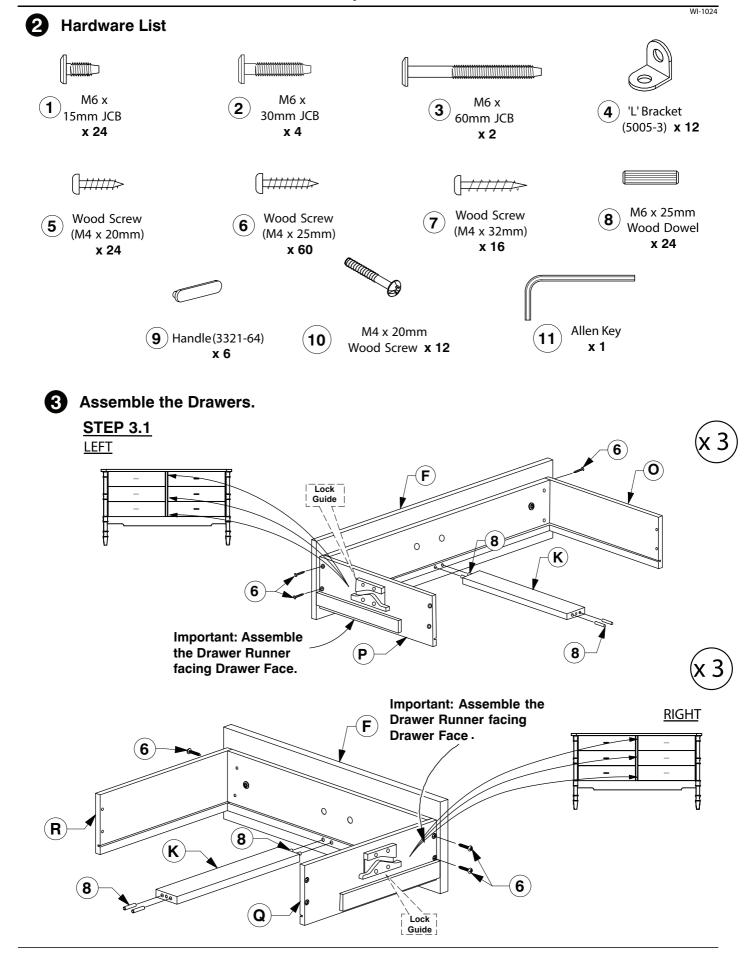

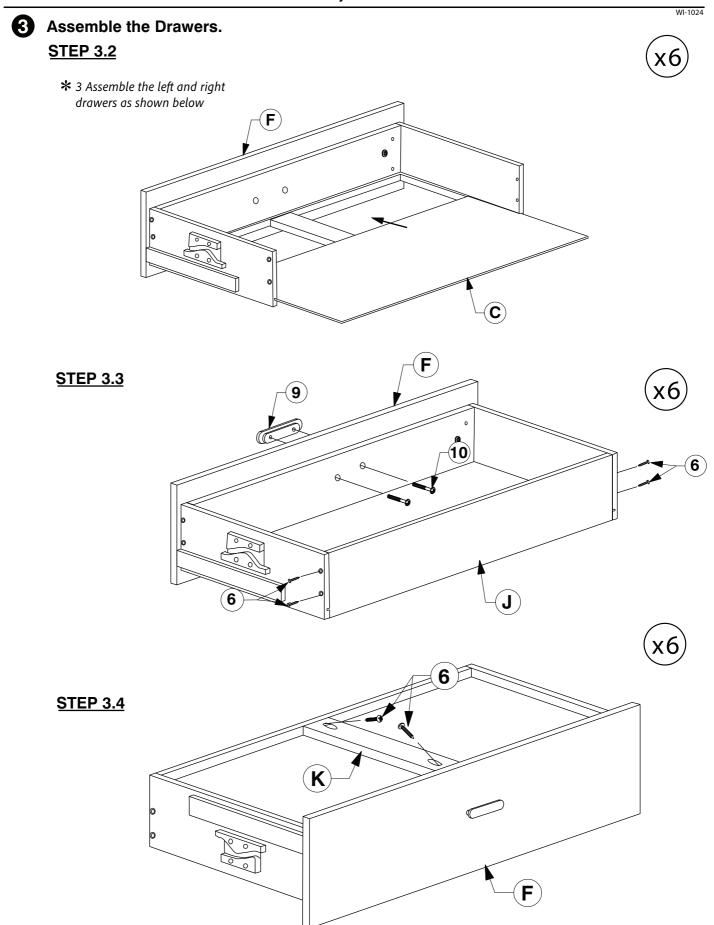


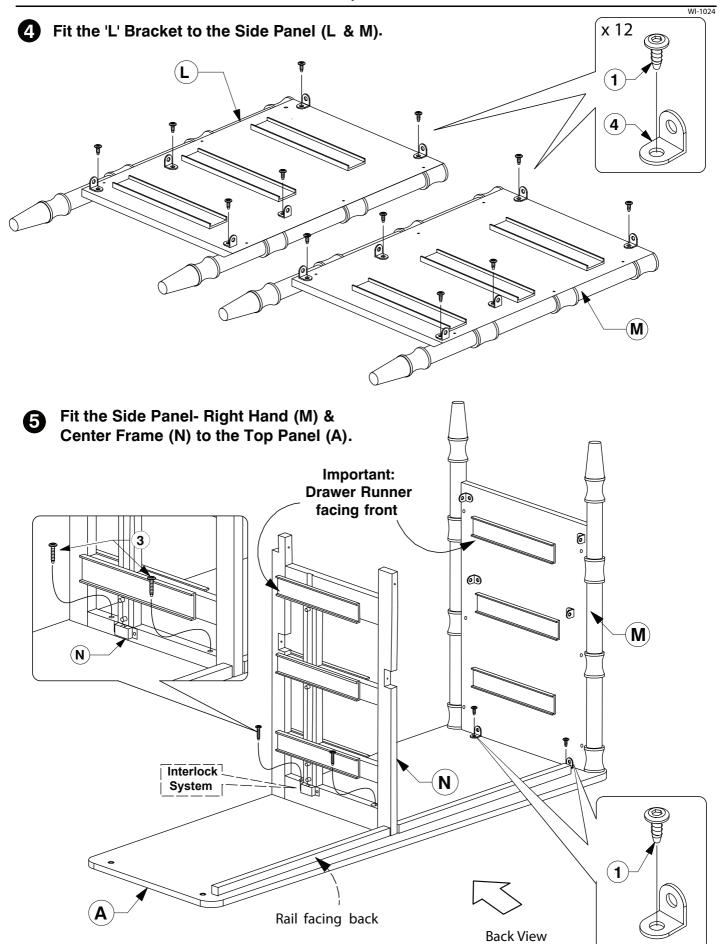



Assembly Instructions


Fit the Upper Support Bar (D) and Bottom Front & Rear Support Bars (G & H) to the Side Panel-Right Hand (M) & Center Frame (N) as shown.

WI-1024

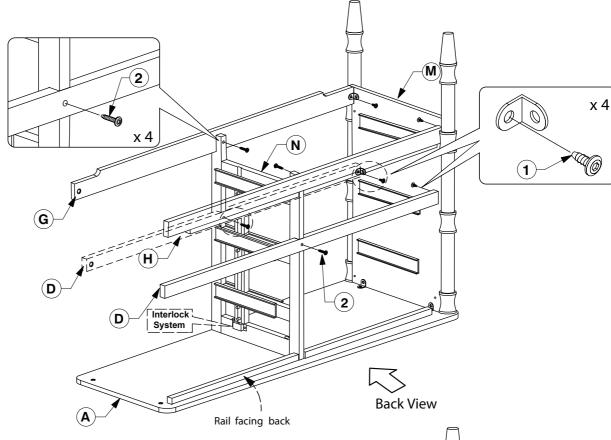

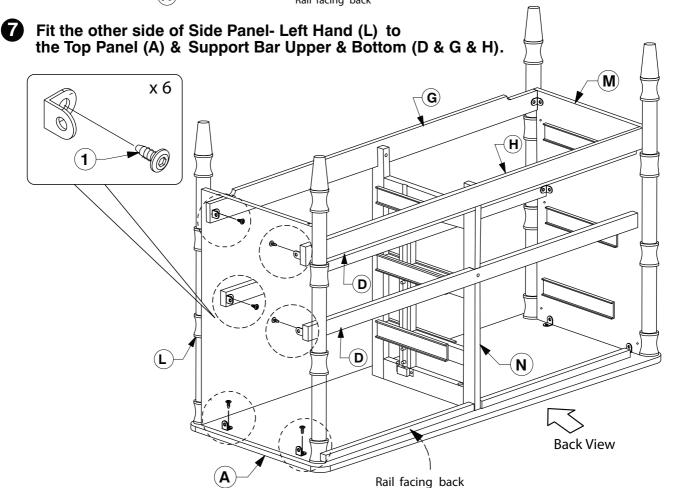

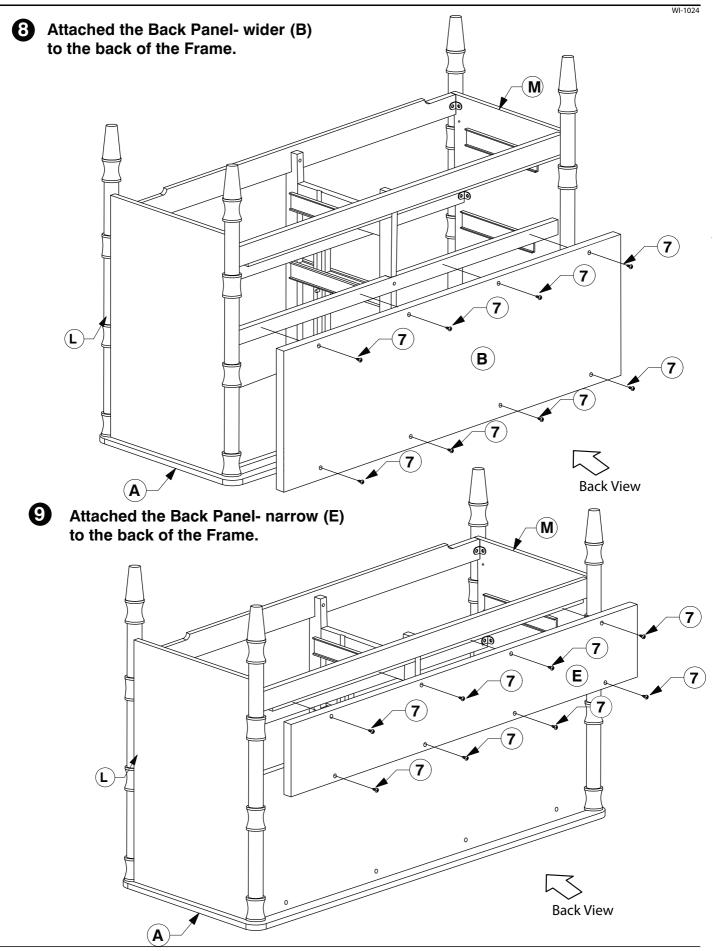

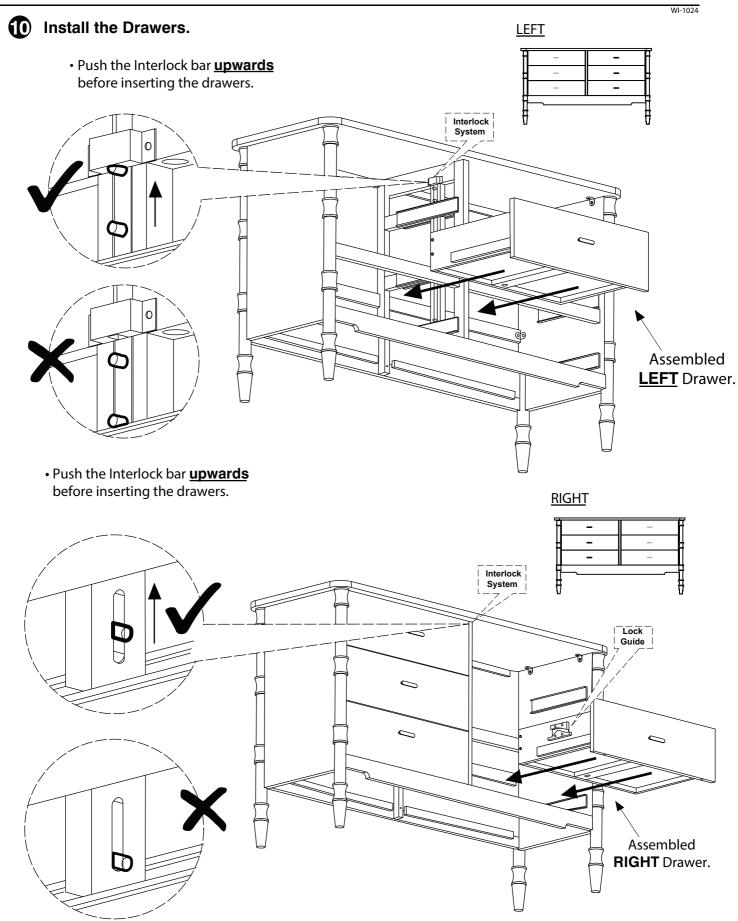


Assembly Instructions

WI-1024


Adjust the Drawer Face (F).

* NOTE: Before fitting the Wood Screws .

Lossen the JCBs on the Drawer Face if
the face needs alignment.

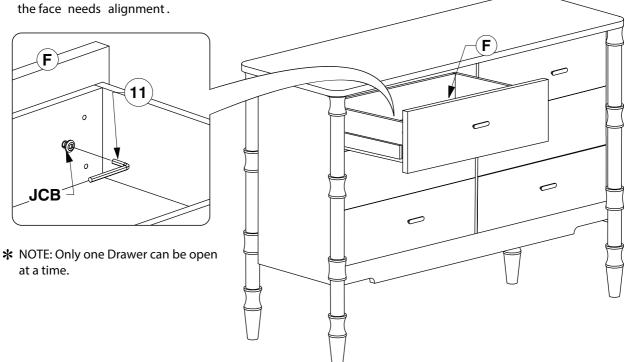

After the Drawer Faces (F) are aligned, secure with wood screws.

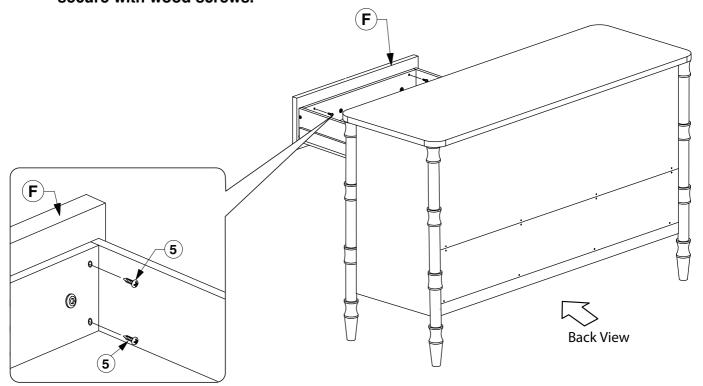

* NOTE: Only one Drawer can be open at a time.

Assembly Instructions

13 Remove the Drawers.

WI-1024

