

ASSEMBLY INSTRUCTIONS

KL-1823_LEEBA - BISCOTTY - WOODEN - 3 DRAWERS - CONSOLE - TABLE


PARTS

S.NO.	DESCRIPTION	QNT
A	 TOP	01
B	 LEGS	02

HARDWARE

S.NO.	DESCRIPTION	QNT
C	 WASHER	08
D	 SPRING WASHER	08
E	 JCBC M6 x 30	08
F	 ALLEN KEY	01

1

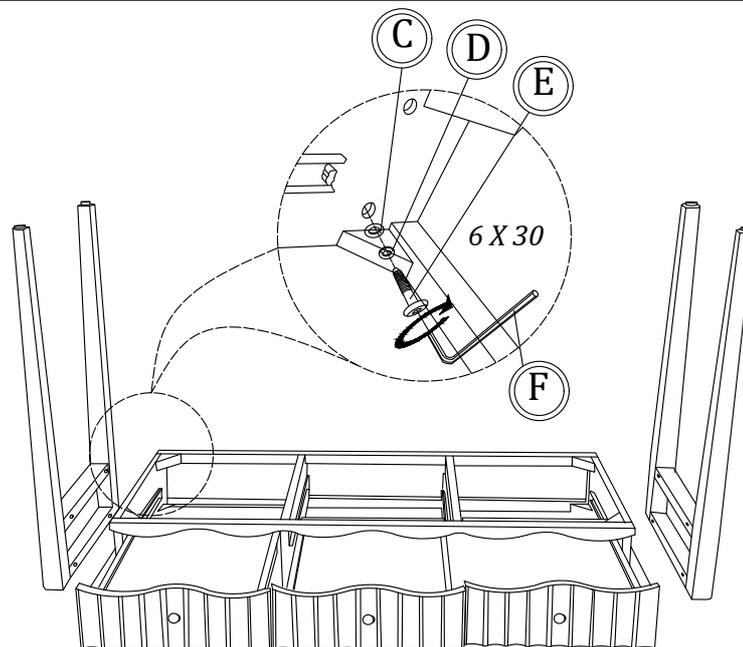

2

