

# ASSEMBLY INSTRUCTION

14921 | MD-39956 WHITE WASH RUSTIC WOOD COFFEE TABLE



## THANK YOU FOR PURCHASING OUR PRODUCTS

This furniture is designed for indoor application. Please read this instruction carefully and Use all the items correctly as described. And please kindly note that the warranty does not Apply to any product that has been improperly used

THIS INSTRUCTION SHEET CONTAINS  
IMPORTANT INFORMATION  
PLEASE READ AND KEEP IT FOR FUTURE REFERENCE

## Safety and Care Advice

### Warnings

- Use on level surface only
- Do Not stand on the table or use it as a ladder
- Only use as a table
- Do Not use the table if parts are damaged or screws are loose or missing only
- Do Not sit on the table
- Do Not allow kids to play with the table
- Never leave children alone with the table only
- Severe injuries will occur, if these warnings are ignored

### Cleaning & Maintenance

- CLEANING** • Wipe with a soft, slightly moist cloth • Never use corrosive detergent, wire brushes, abrasive scourers, metal or sharp tools
- MAINTENANCE** • Check and tighten all parts regularly • if this chair in damage or seem unsafe, immediately contact us for after sales services

### Components


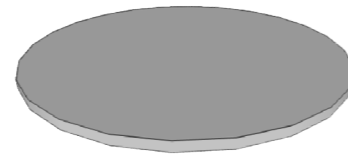



TABLE TOP

A [1x]

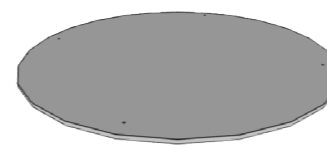


SHELF

B [1x]

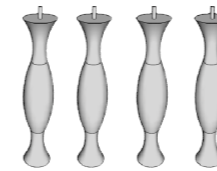

LEGS

C [4x]

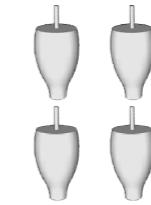

LOWER LEGS

D [4x]


Make sure all legs are fully tightened before using the table

### Before Assembly

- Remove all wrapping materials, staples and packing straps
- Read the Parts List and Hardware List carefully, make sure all parts and hardware are intact
- Place all parts on a clean and smooth surface, such as rug or carpet, to prevent the parts from being scratched
- Do Not cross-thread screws
- Do Not use electric tools

**1** ASSEMBLE TABLE TOP AND LEGS

TIGHTEN CLOCKWISE

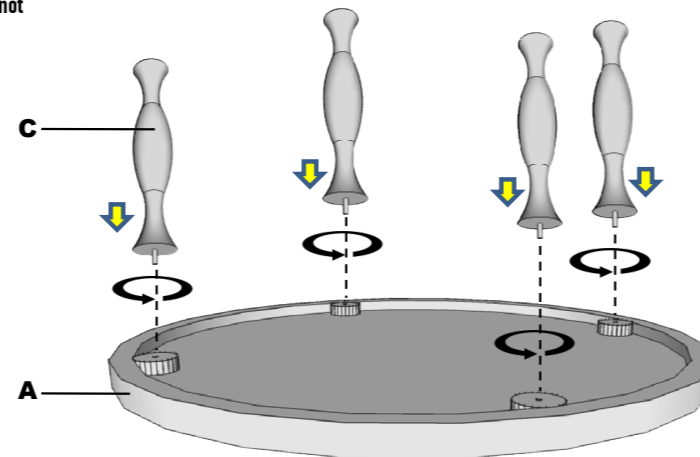

**2** ASSEMBLE SHELF AND LOWER LEGS

TIGHTEN CLOCKWISE

