



# Assembly Instruction


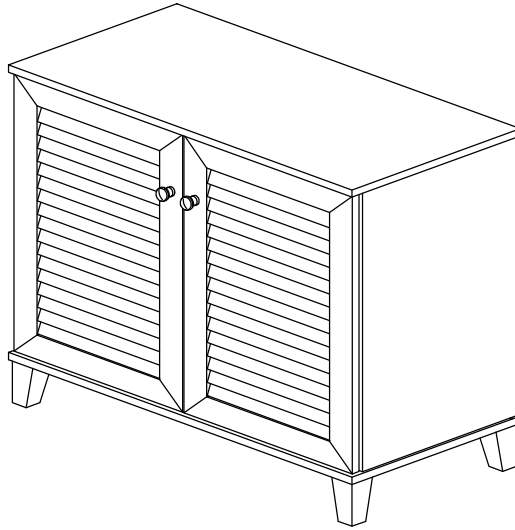


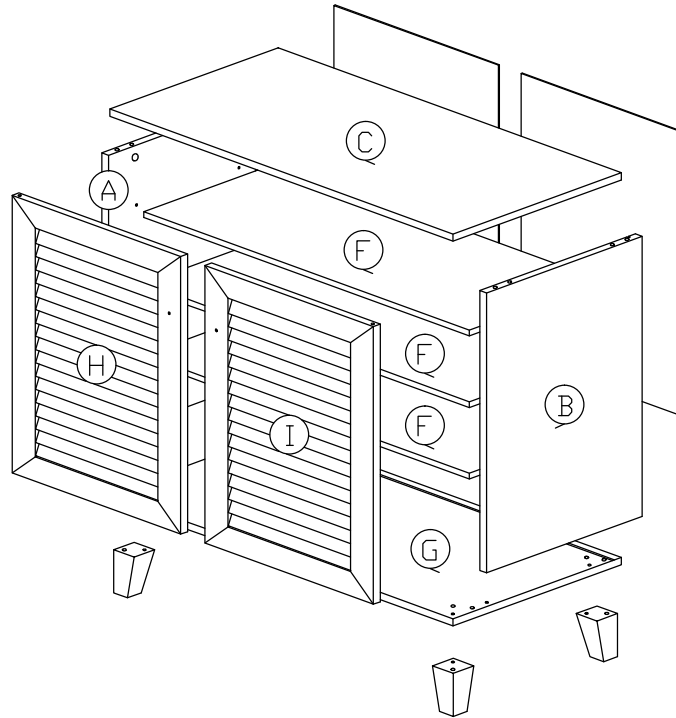

Model : WI5304









## Part List




### Hardware List

No.	SHAPE	DESCRIPTION	Qty.
1		<b>8x25mm Wood Dowel</b>	12Pcs
2		<b>15MM Titus Mini Fix</b>	4Sets
3		<b>M3x16mm Screw</b>	4Pcs
4		<b>M4x38mm Screw</b>	4Pcs
5		<b>M7x40mm Screw</b>	4Pcs
6		<b>Shelf Support</b>	14Pcs


7		<b>M6x22 Steel Bracket</b>	4Pcs
8		<b>Brown Magnet 2 Pin Flat Head Tapping Screw M6x10mm ZB</b>	2Sets
9		<b>Handle (9988) M4x25mm (Handle Screw)</b>	2Sets
10		<b>Wooden Leg</b>	4Pcs
11		<b>L Key</b>	1Pc
12		<b>Z Bracket</b>	2Pcs

# Assembly Instruction

## Step 1

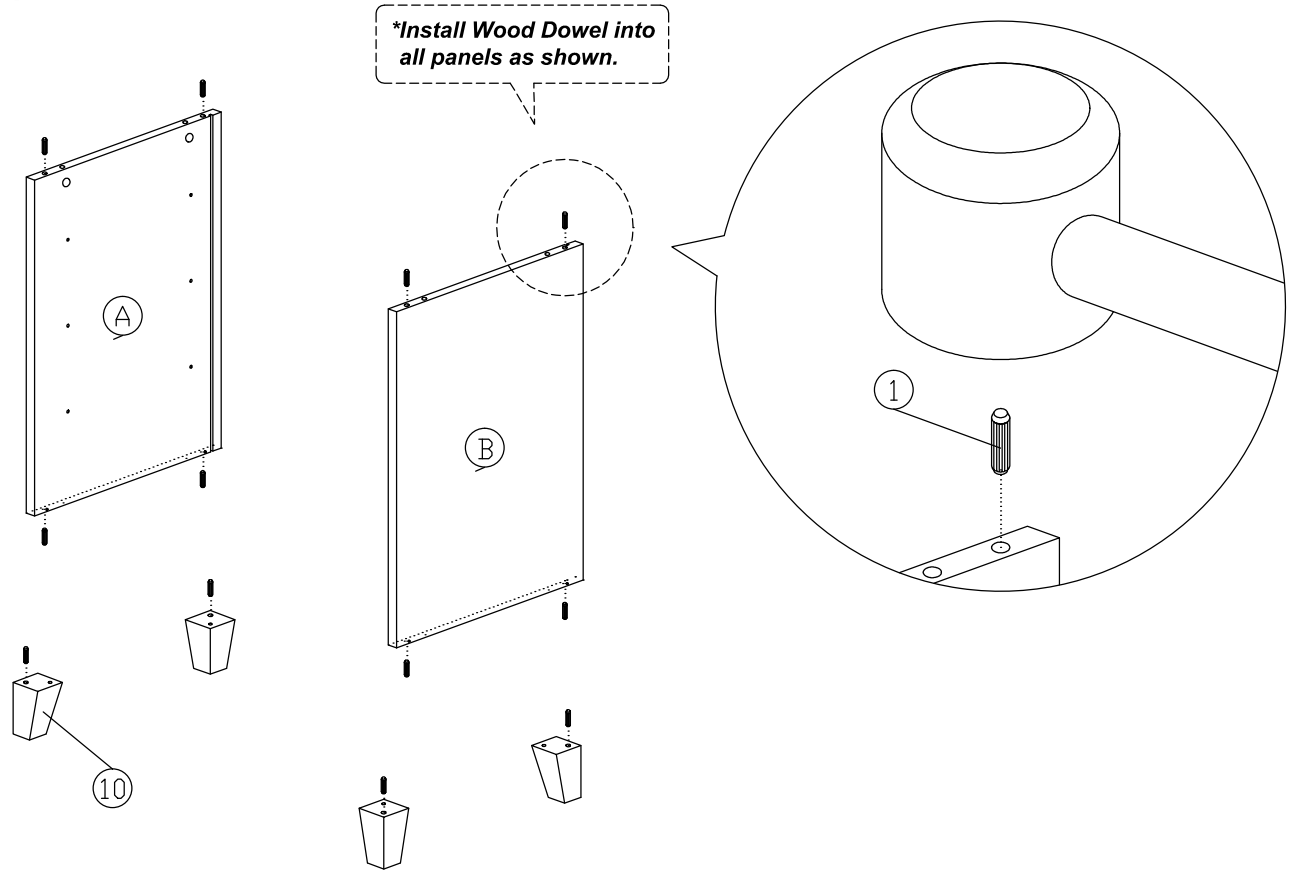


## Step 2

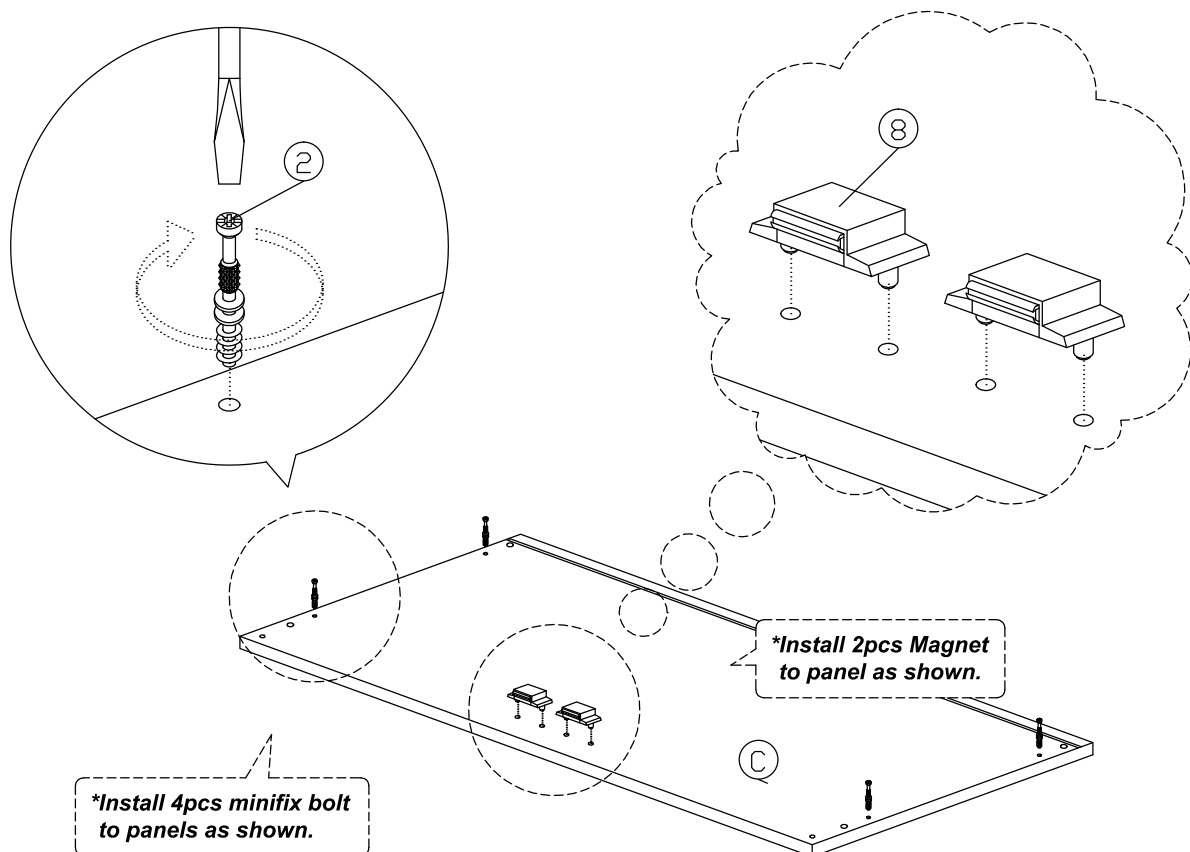


# Assembly Instruction

## Step 3

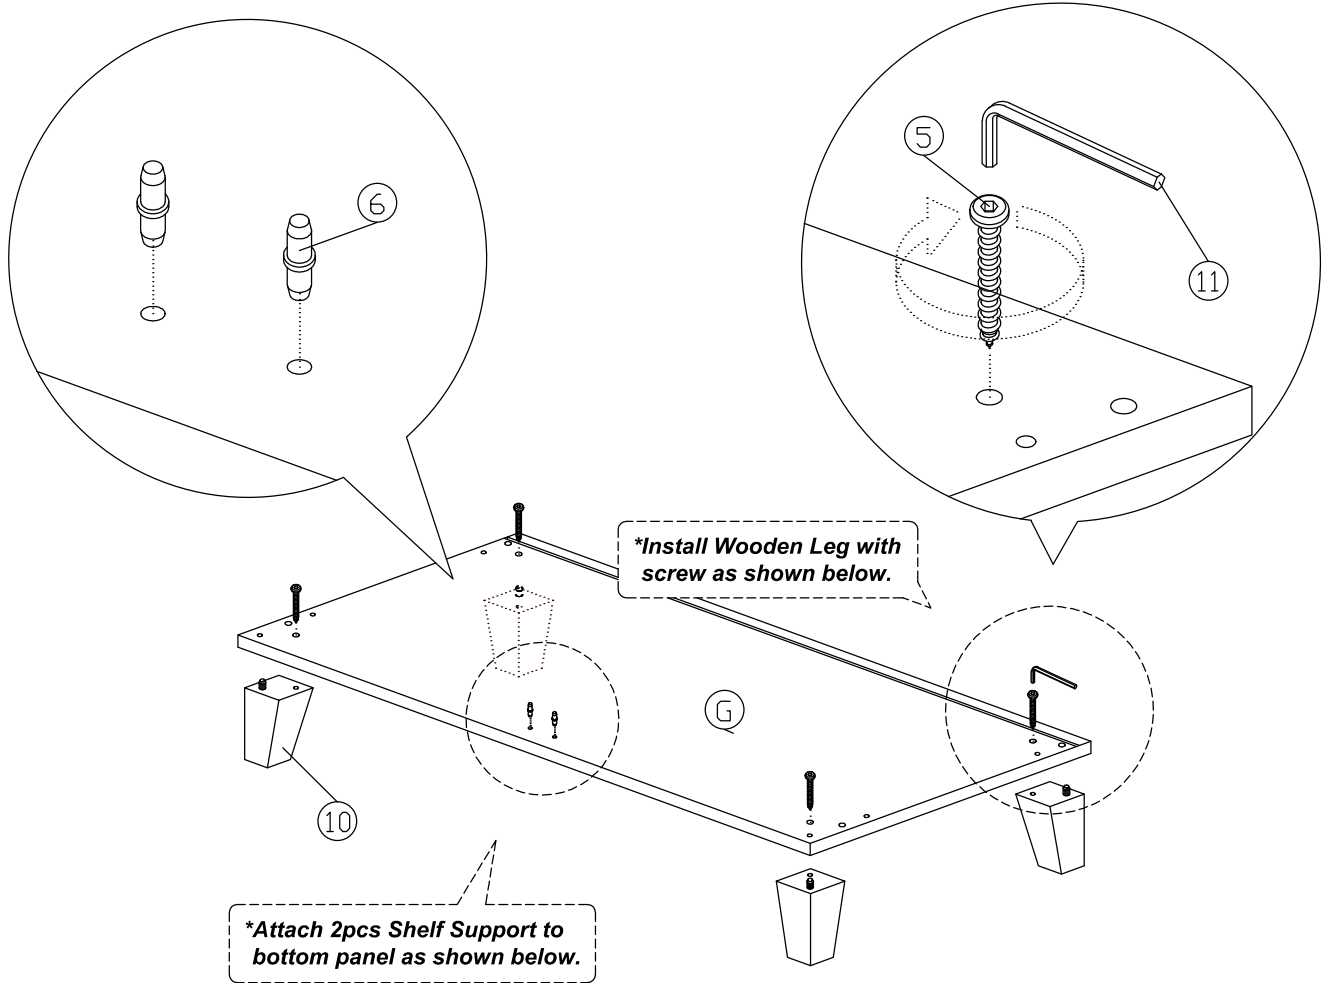


## Step 4

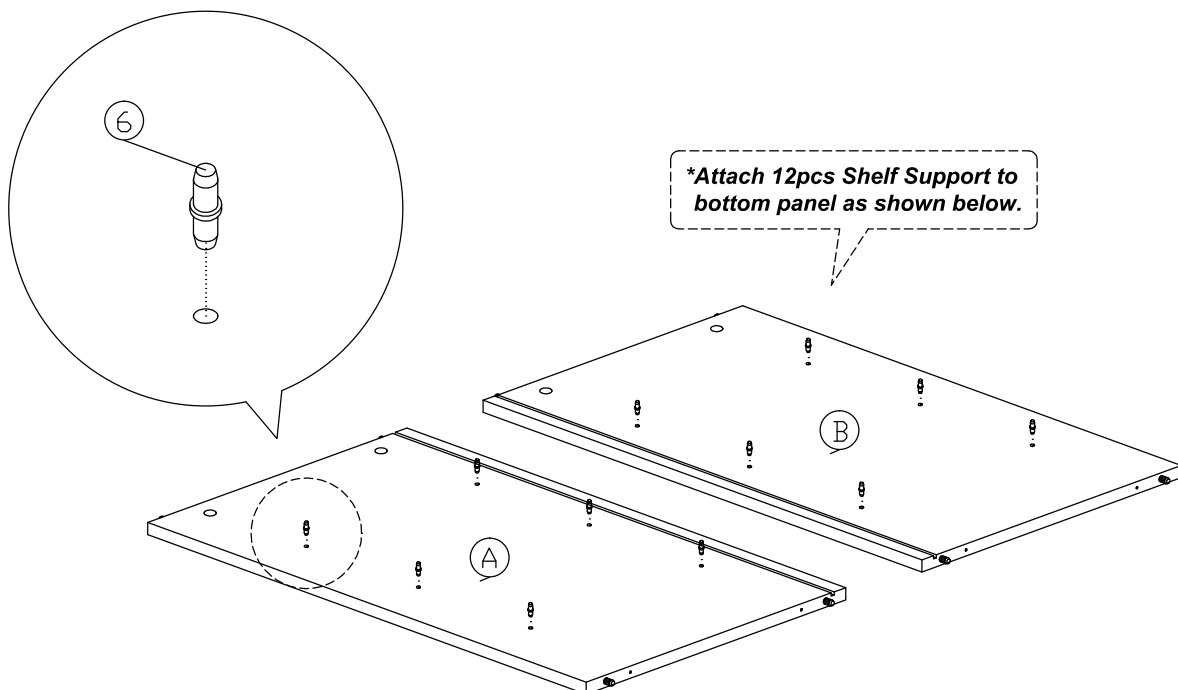


# Assembly Instruction

## Step 5


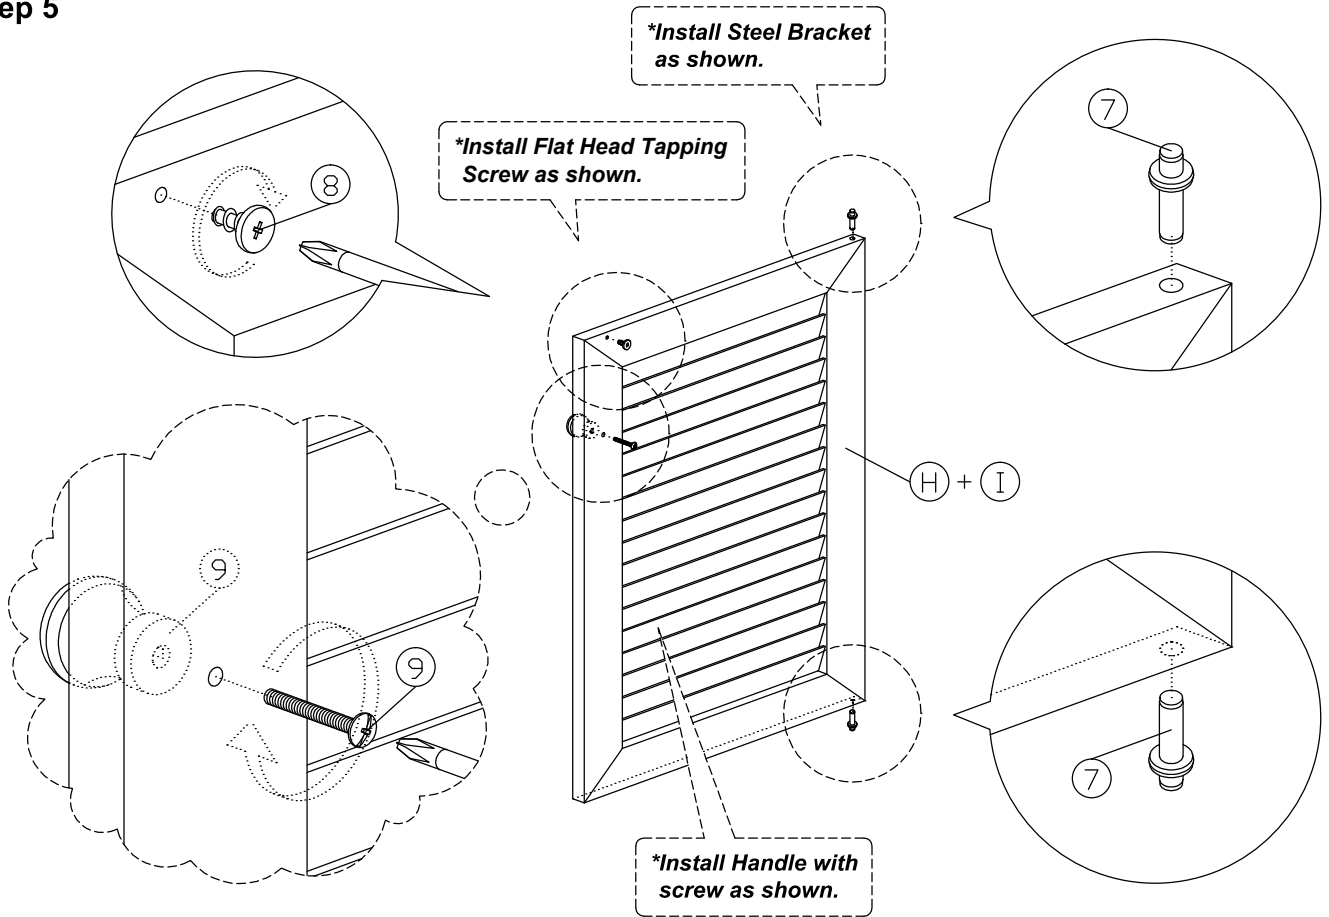


## Step 6

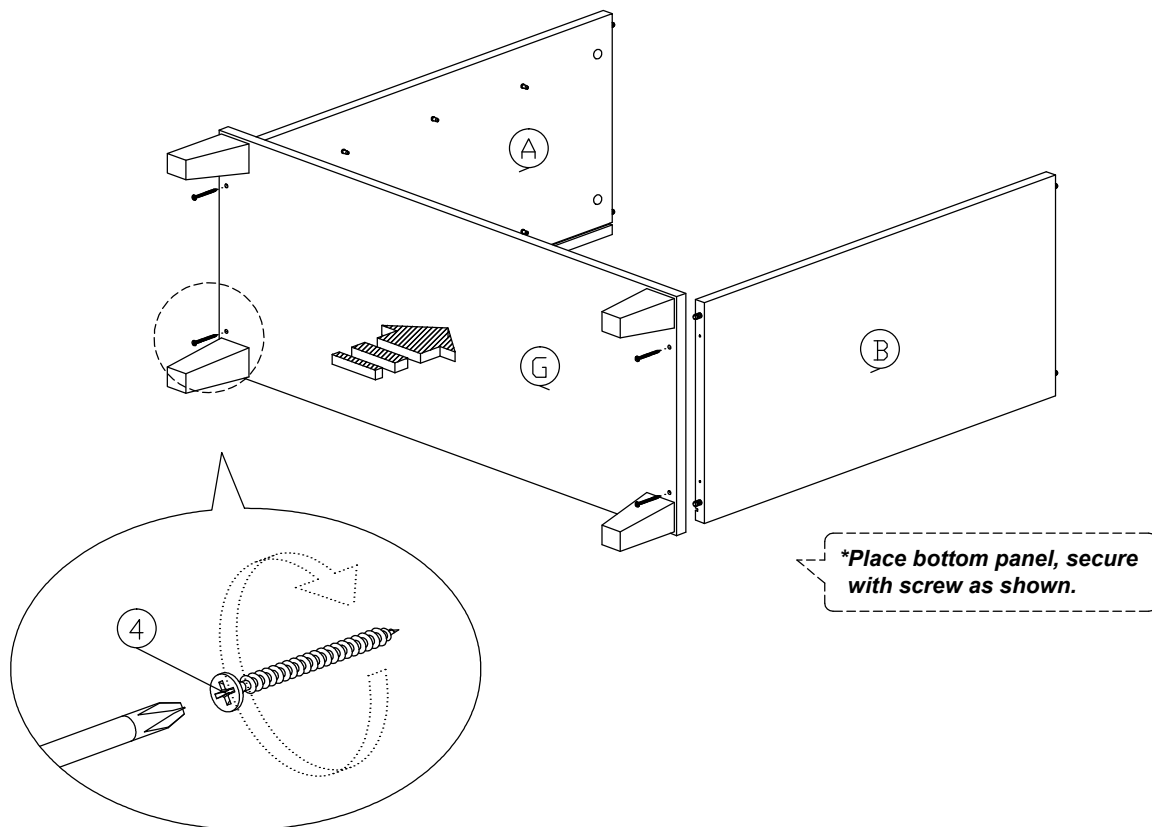


# Assembly Instruction

## Step 7

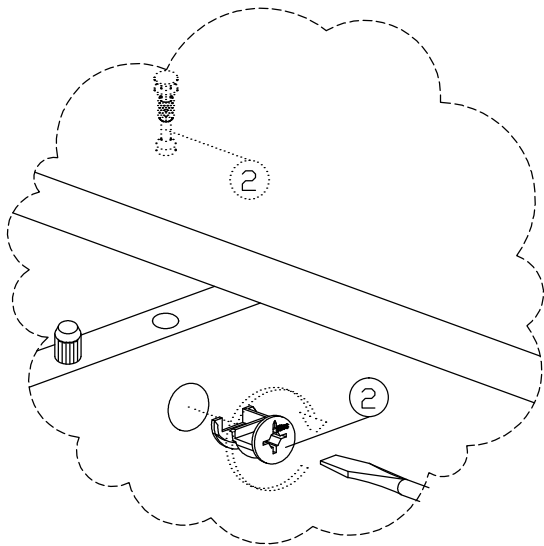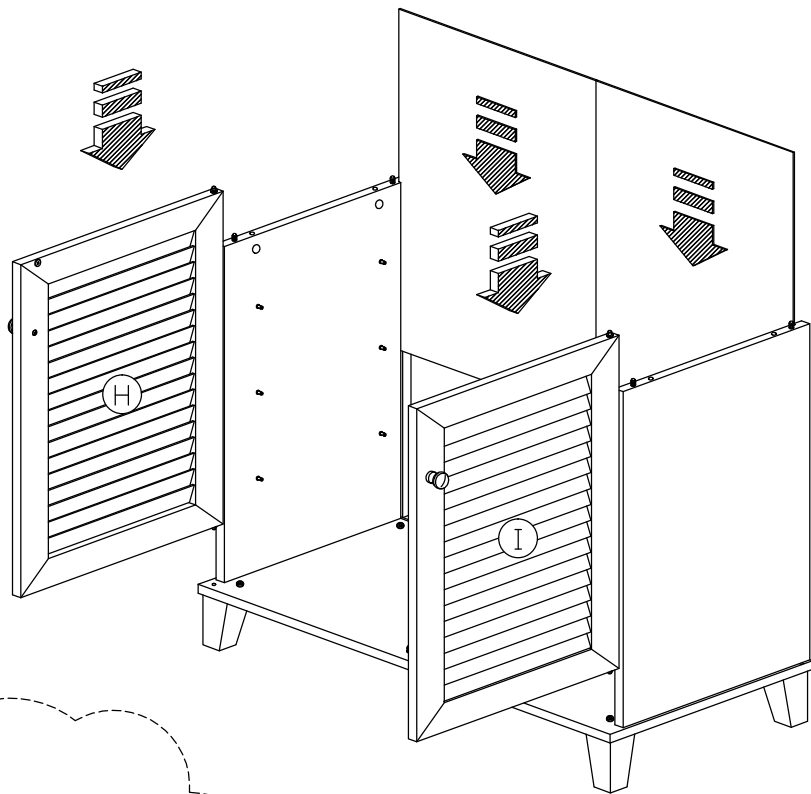


*\*Place both doors before  
place top panel as shown.*

*\*Place top panel, secure  
with minifix as shown.*

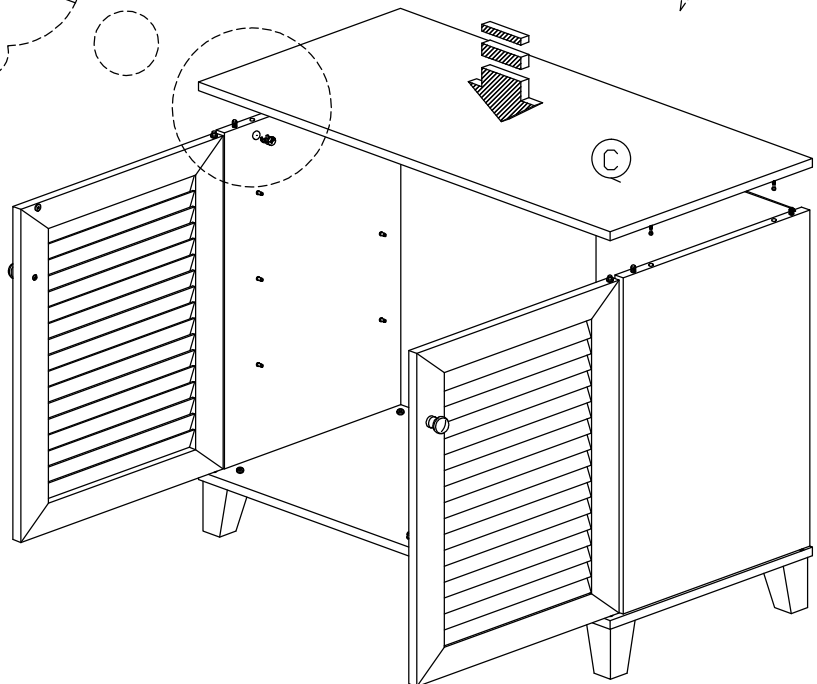

# Assembly Instruction

## Step 8

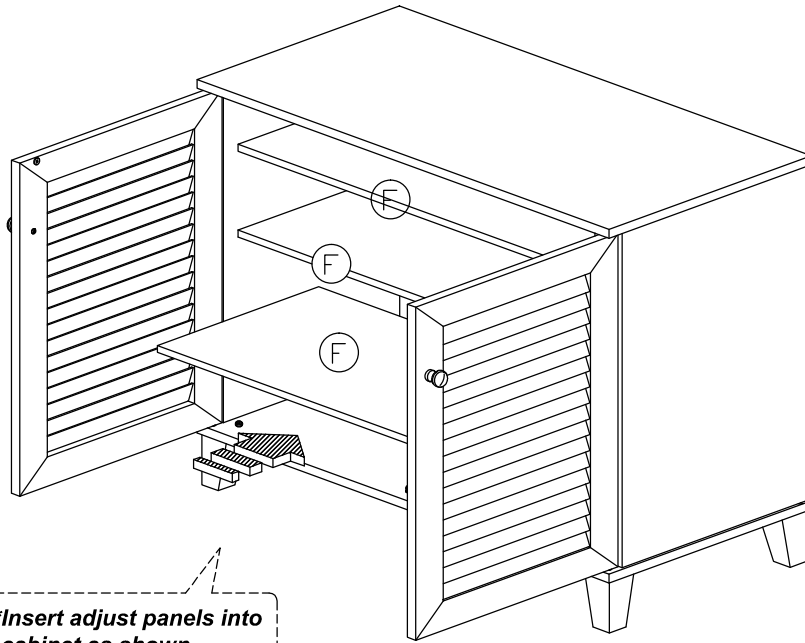

## Step 9

