
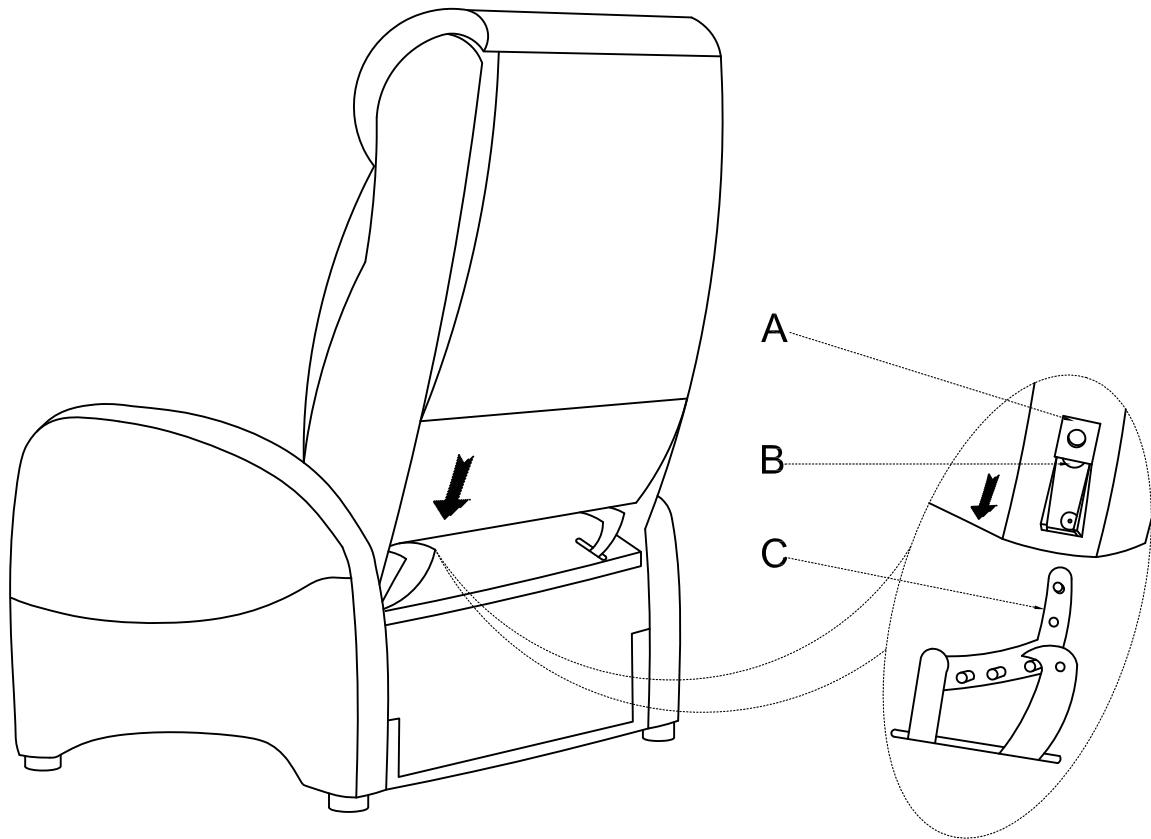


ASSEMBLY INSTRUCTION

SO-

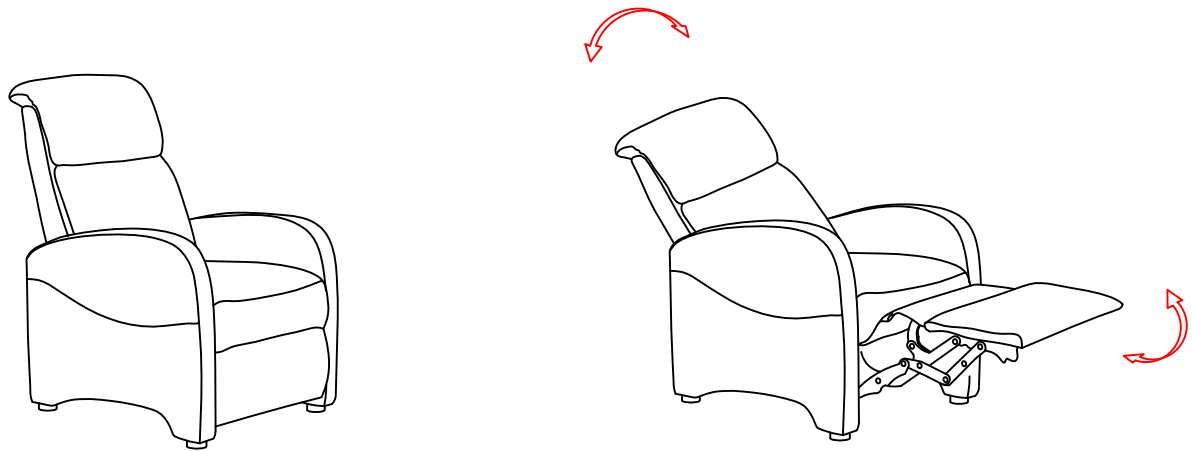

Align metal-clamp(A) on both sides of bottom of backrest to metal clamp(C) on base of seat cushion and push down so that metal lever(B) clicks in and backrest locks into place.

ASSEMBLY INSTRUCTIONS;