

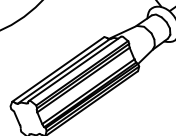
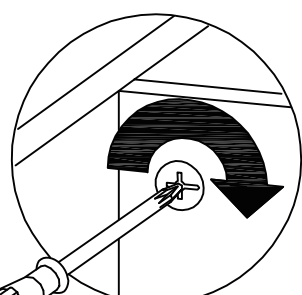
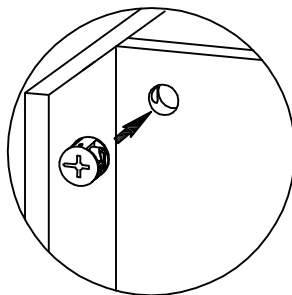
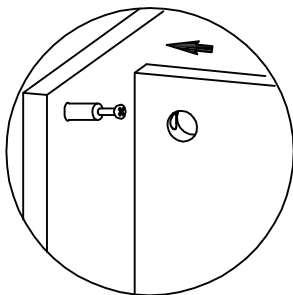
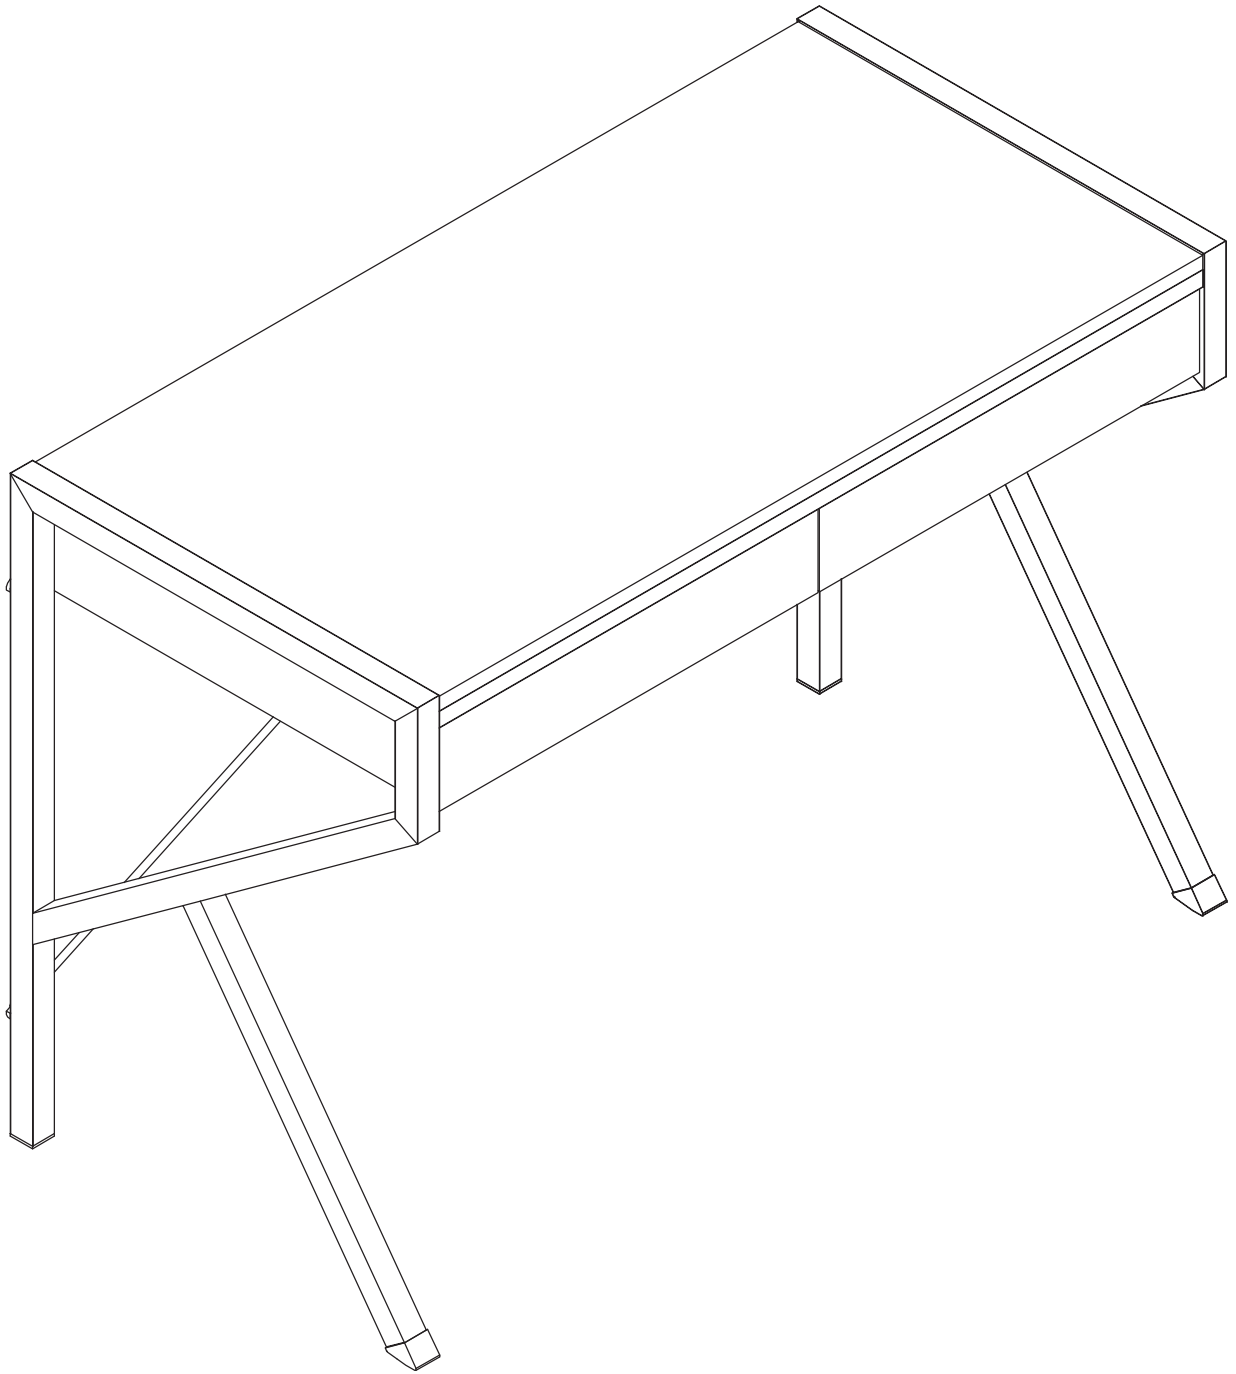
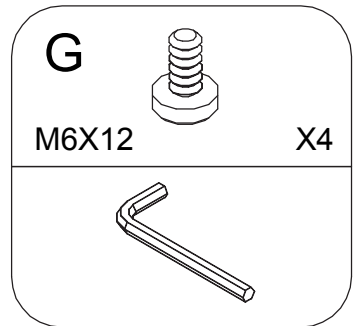
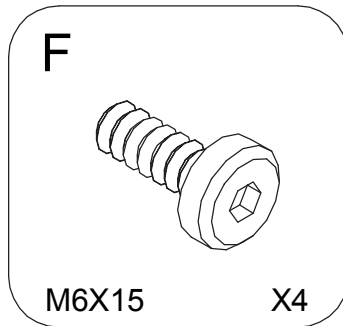
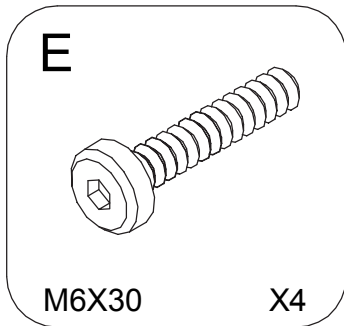
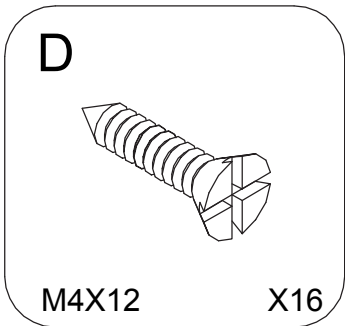
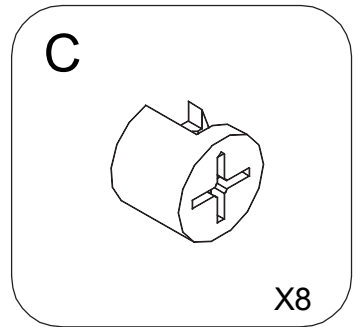
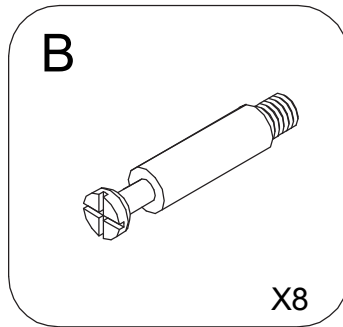
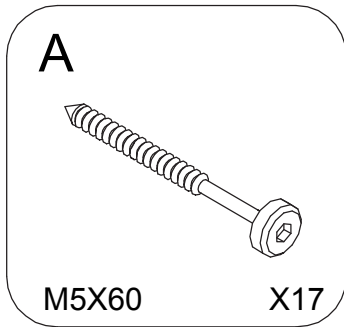
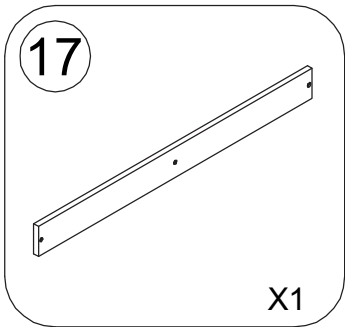
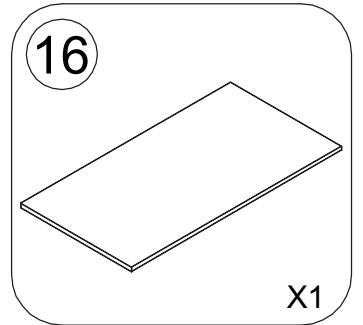
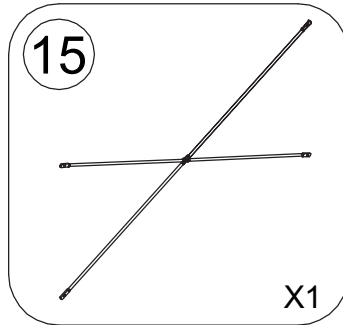
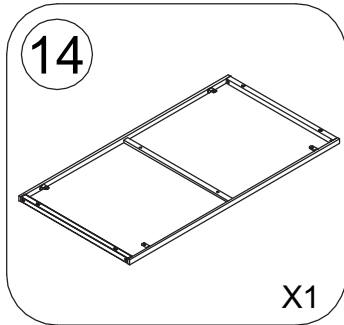
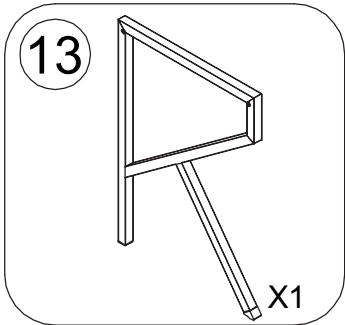
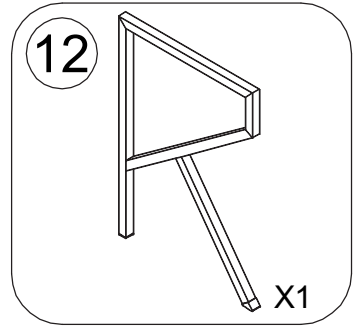
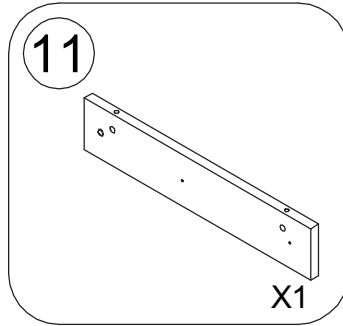
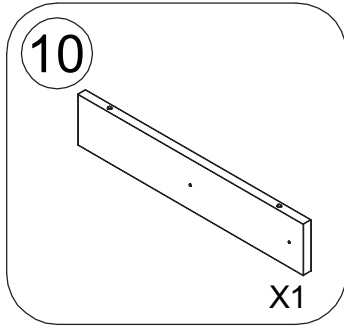
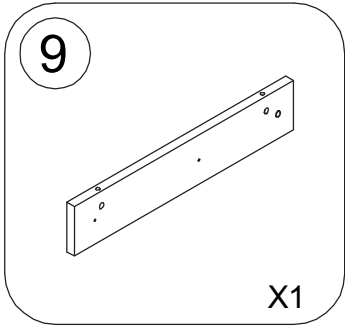
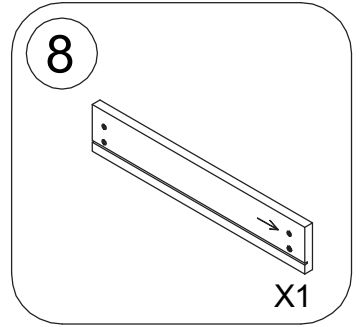
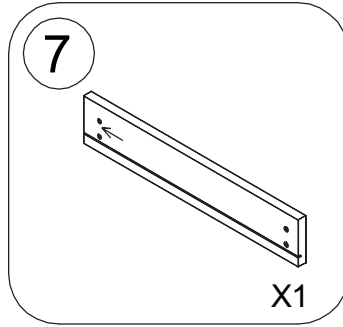
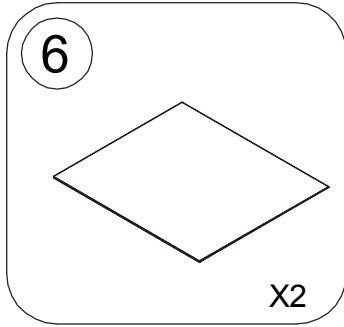
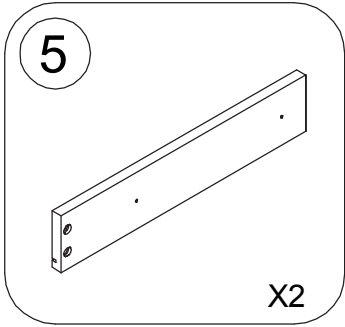
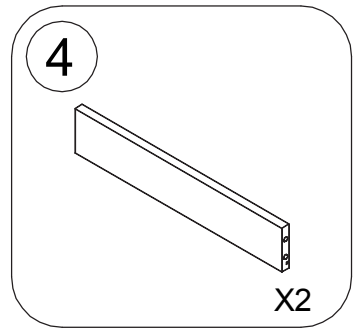
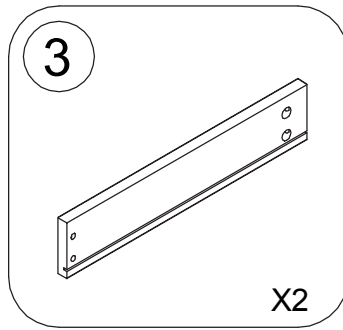


# Assembling Instruction


ITEM# AA-13-D3

Attention: Do not tighten the screws until all of them are in right positions

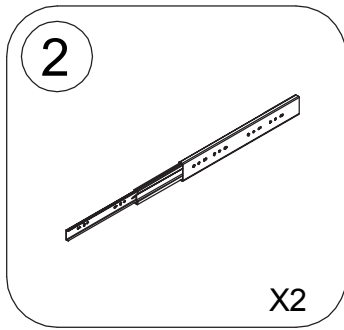


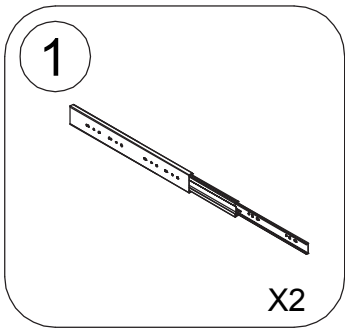


1

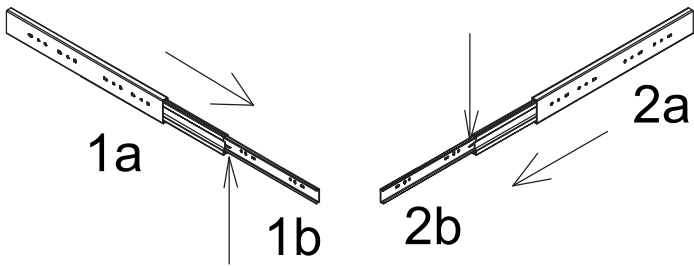




2PCS

2

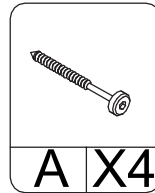
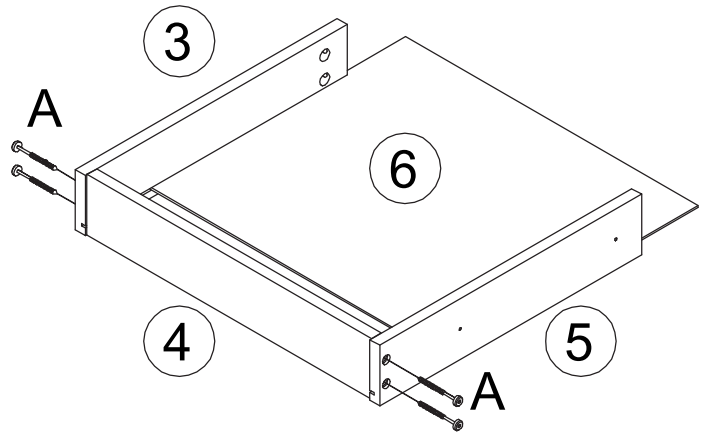


2PCS




3

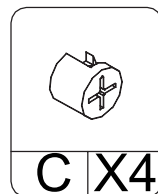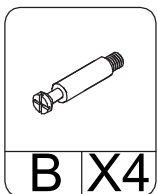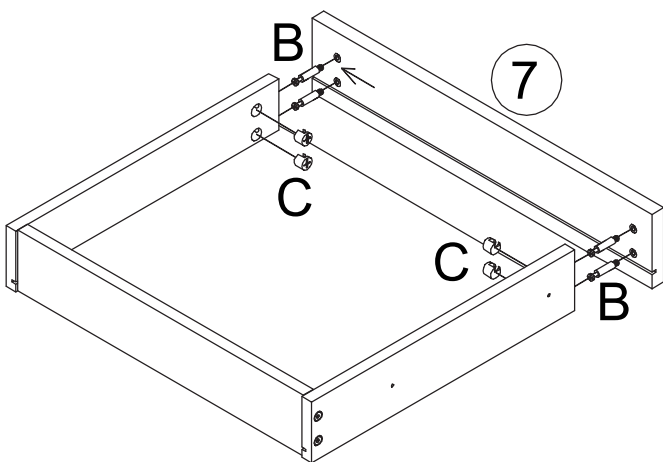



4

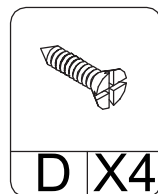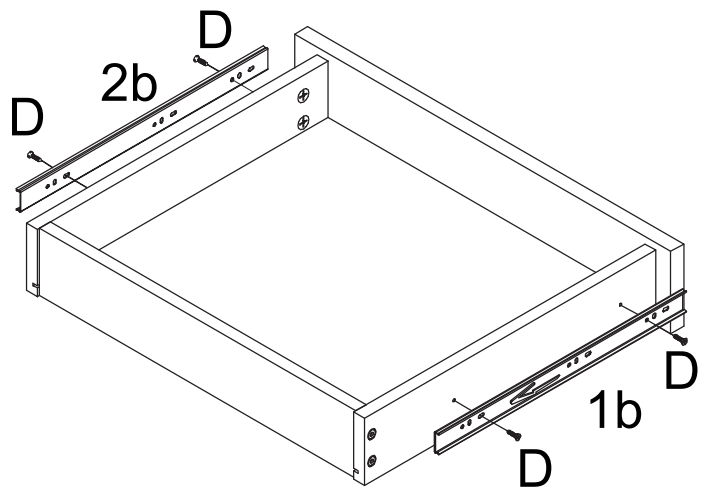



5

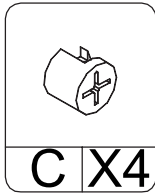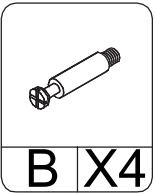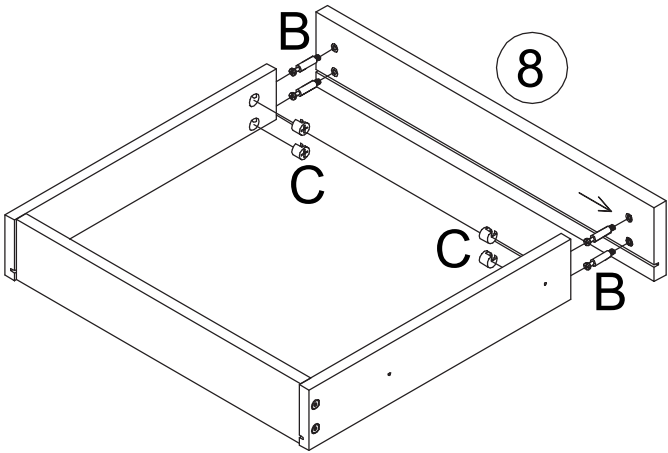



6

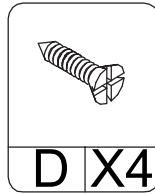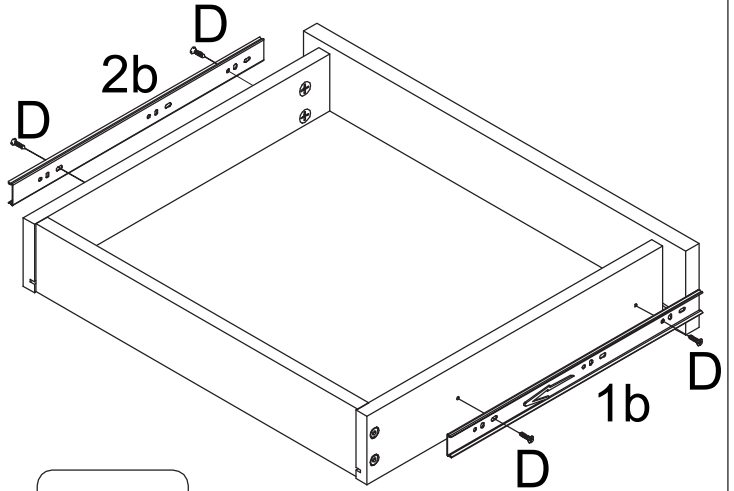



7

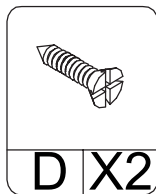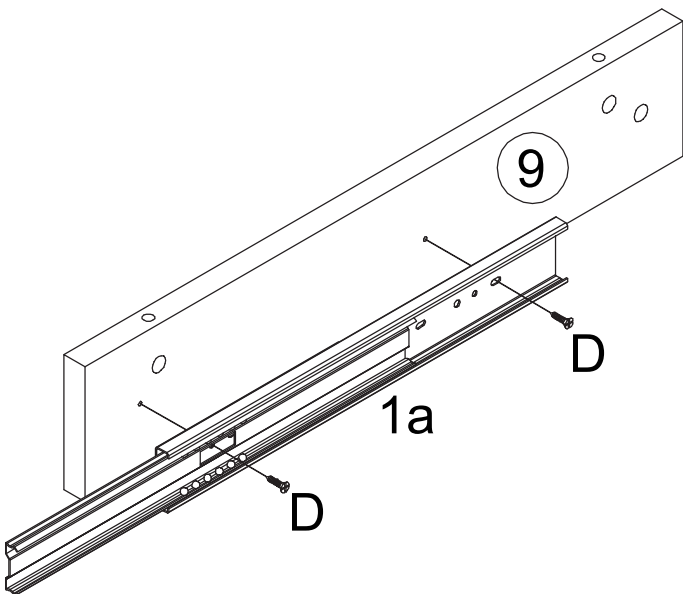




8

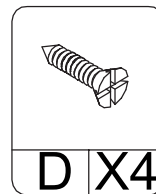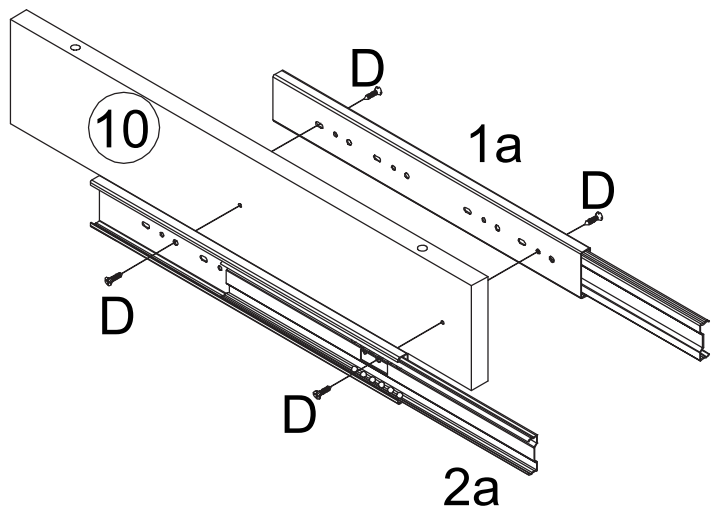



9

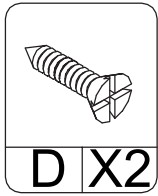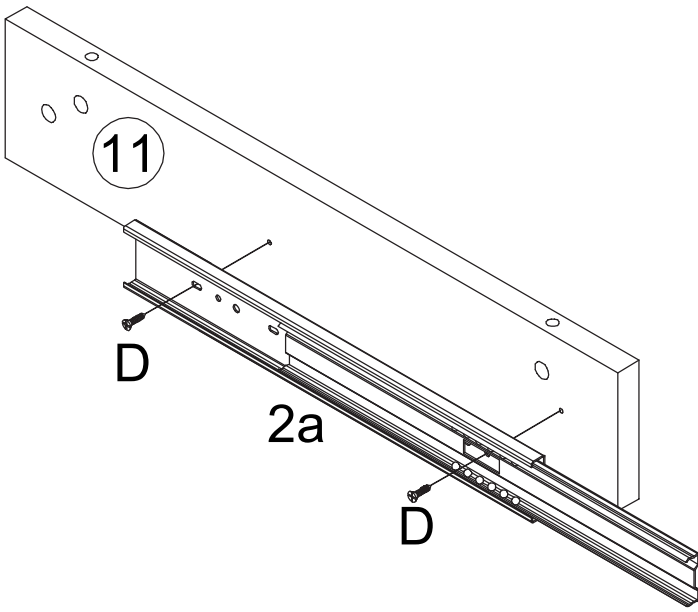



10

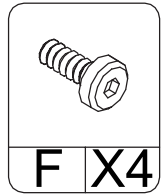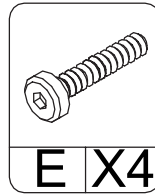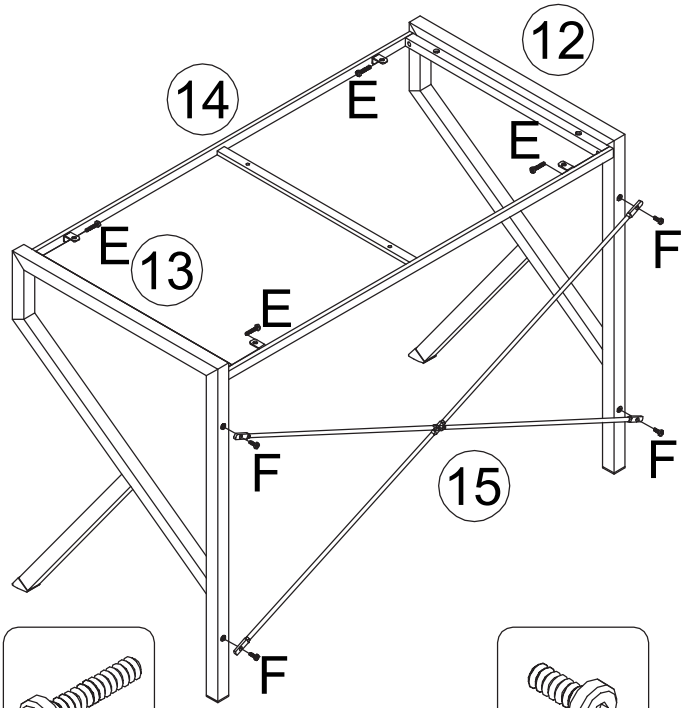



11

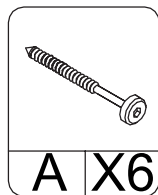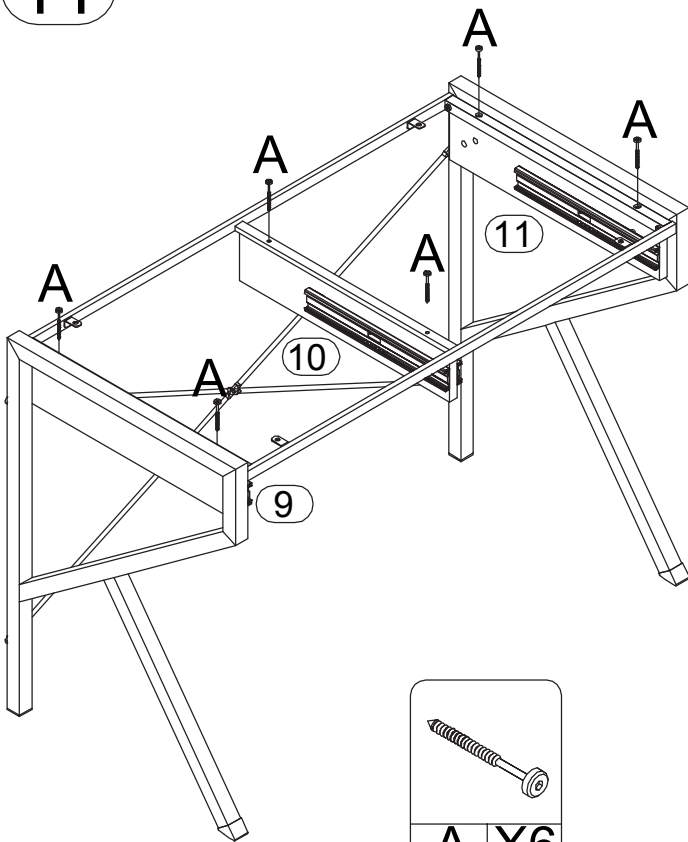

12

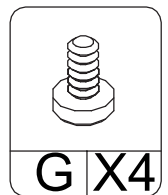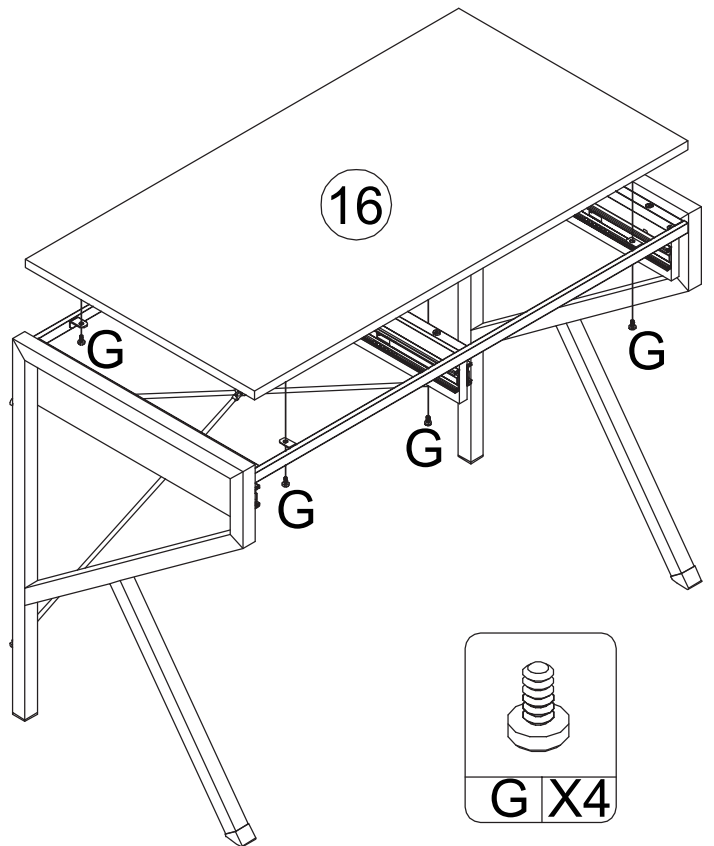

13

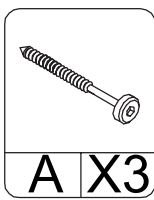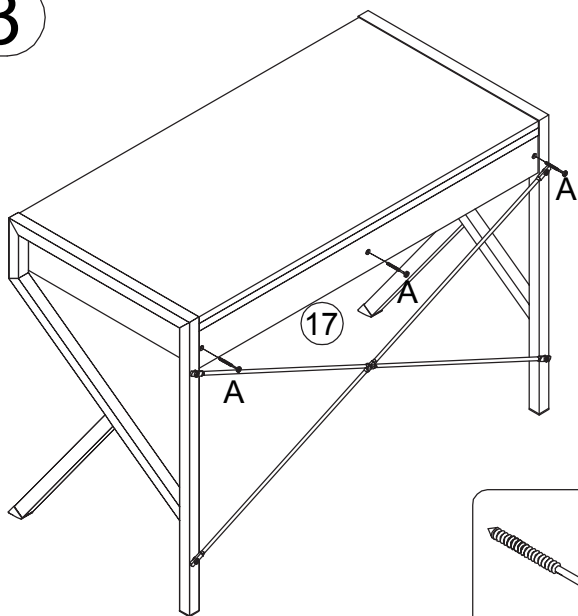

A X3

14

