



# Assembly Instruction

Model : WI6461

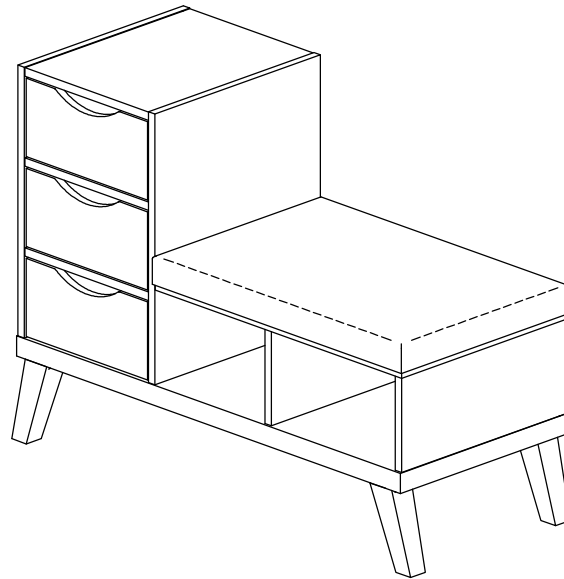

## Part List

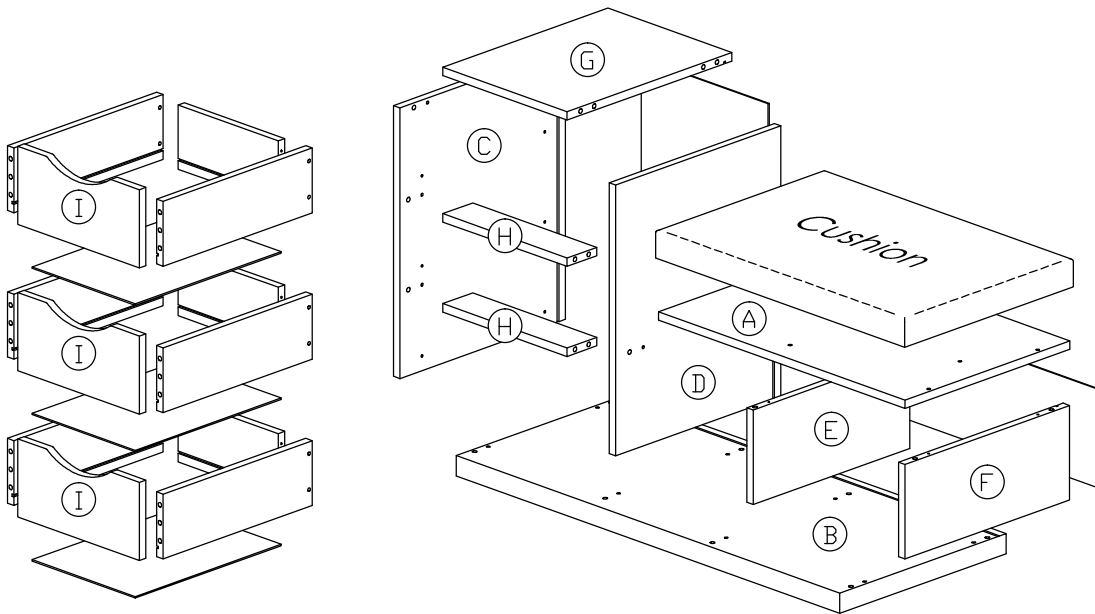

### Hardware List


| No. | SHAPE | DESCRIPTION                      | Qty.   |
|-----|-------|----------------------------------|--------|
| 1   |       | <b>8x25mm Wood Dowel</b>         | 35Pcs  |
| 2   |       | <b>15MM Titus Mini Fix</b>       | 16Sets |
| 3   |       | <b>M5x8mm Screw (Euro Screw)</b> | 12Pcs  |
| 4   |       | <b>M3.5x15mm Screw</b>           | 28Pcs  |
| 5   |       | <b>M3x16mm Screw</b>             | 8Pcs   |
| 6   |       | <b>M4x25mm Screw</b>             | 2Pcs   |

|    |  |                                    |       |
|----|--|------------------------------------|-------|
| 7  |  | <b>M4x38mm Screw</b>               | 16Pcs |
| 8  |  | <b>M4x65mm Screw</b>               | 8Pcs  |
| 9  |  | <b>Drawer Slide = 350mm</b>        | 3Sets |
| 10 |  | <b>15mm Minifix Cap</b>            | 6Pcs  |
| 11 |  | <b>OS 140mm Long Tapper (Gold)</b> | 4Pcs  |
| 12 |  | <b>Z Bracket (Big)</b>             | 4Pcs  |

# Assembly Instruction


## Step 1

*\*Install 35pcs Wood Dowel into all panels as shown.*

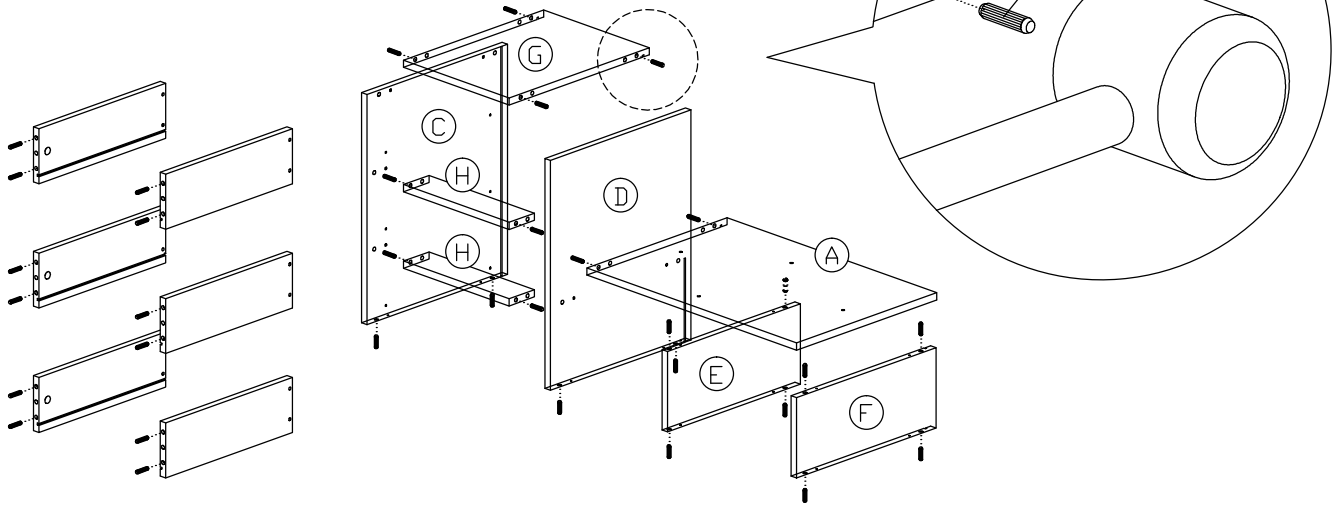


## Step 2

*\*Install 16pcs minifix bolt to all panels as shown.*

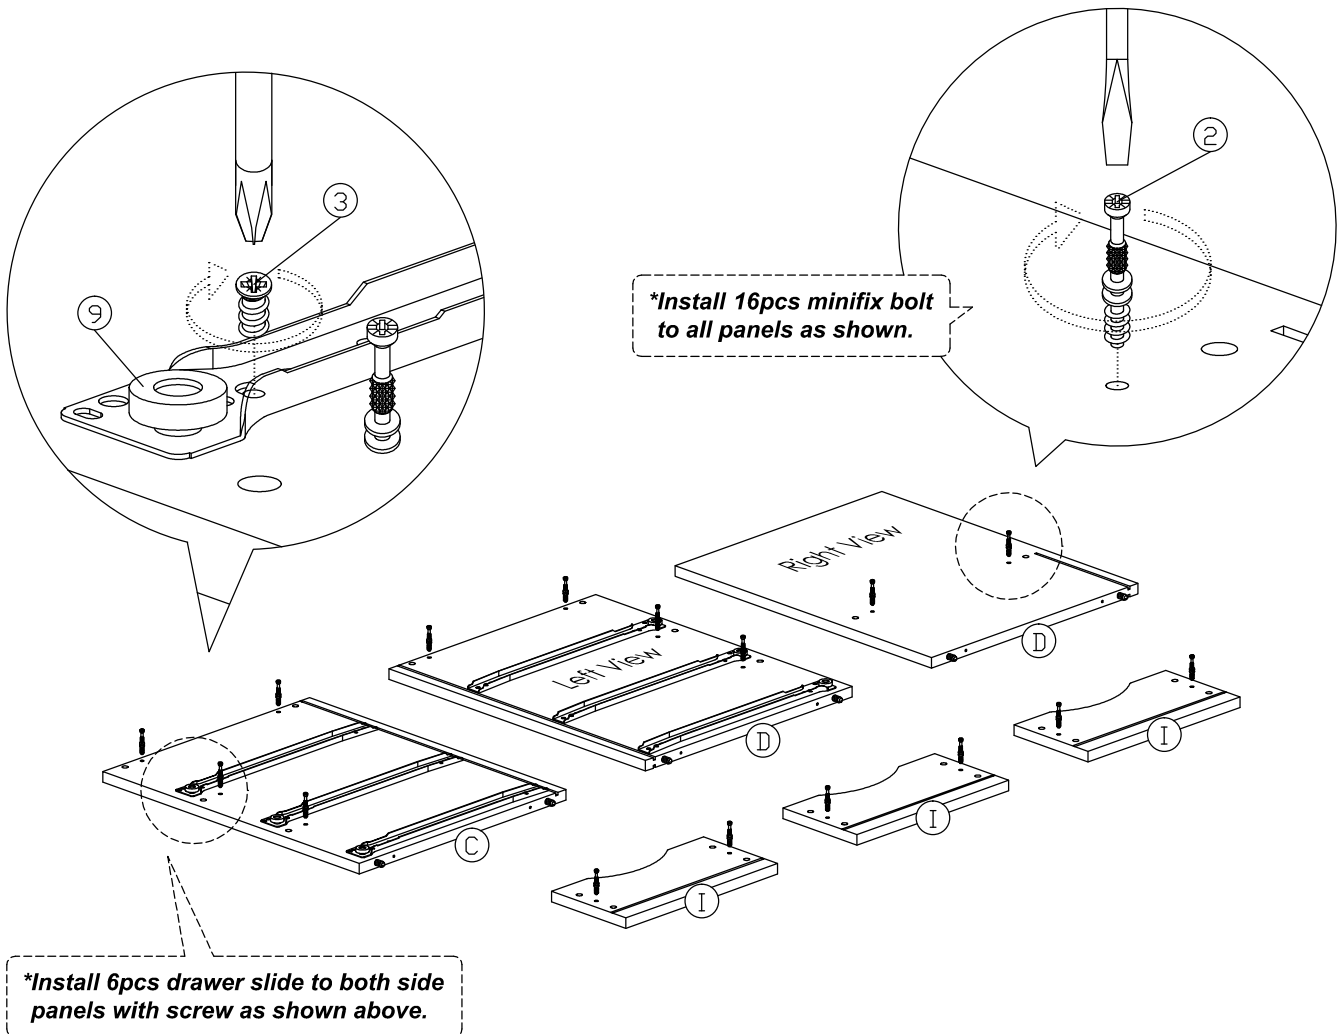


# Assembly Instruction

## Step 3

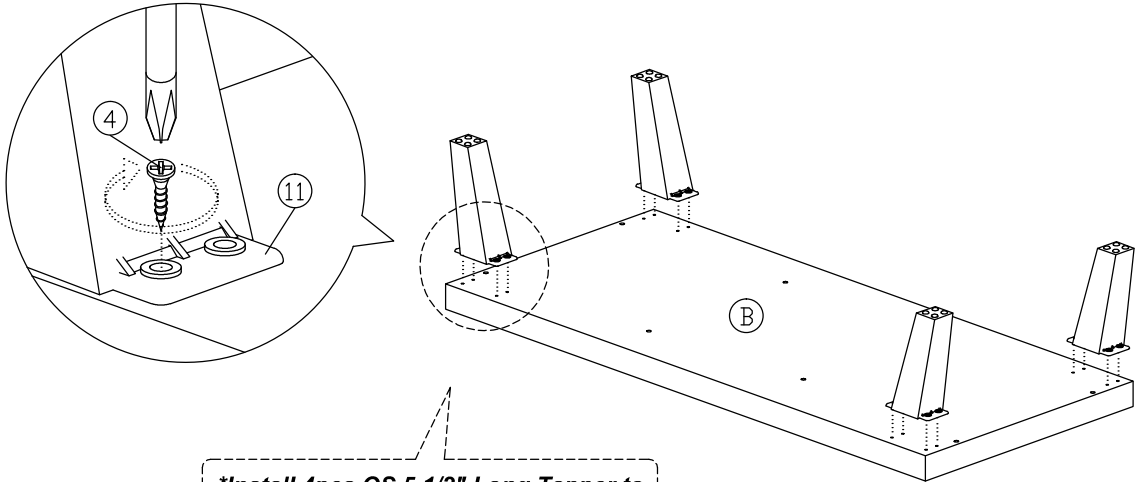


*\*Install 4pcs OS 5 1/2" Long Taper to panel with screw as shown above.*

## Step 4

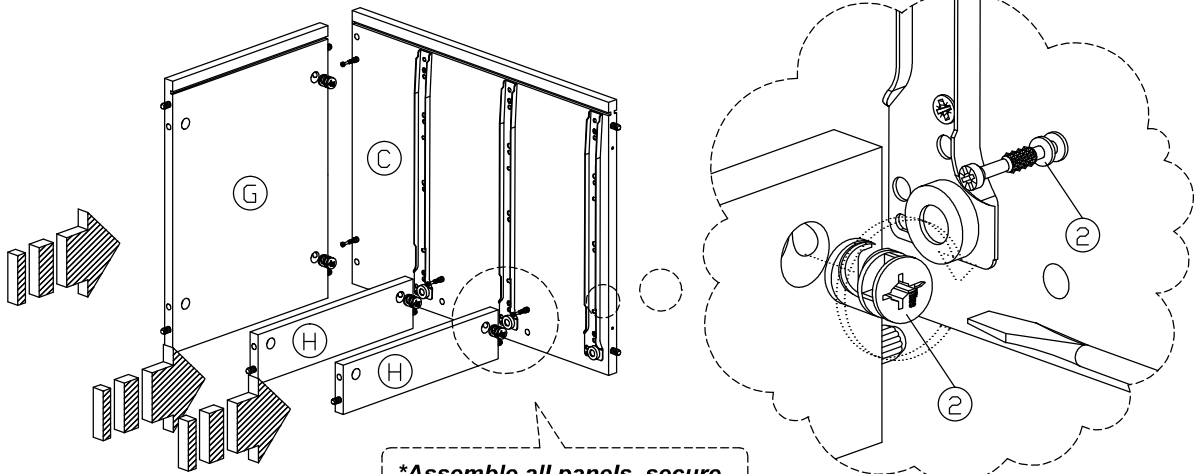

*\*Assemble all panels, secure with Minifix as shown above.*


## Step 5

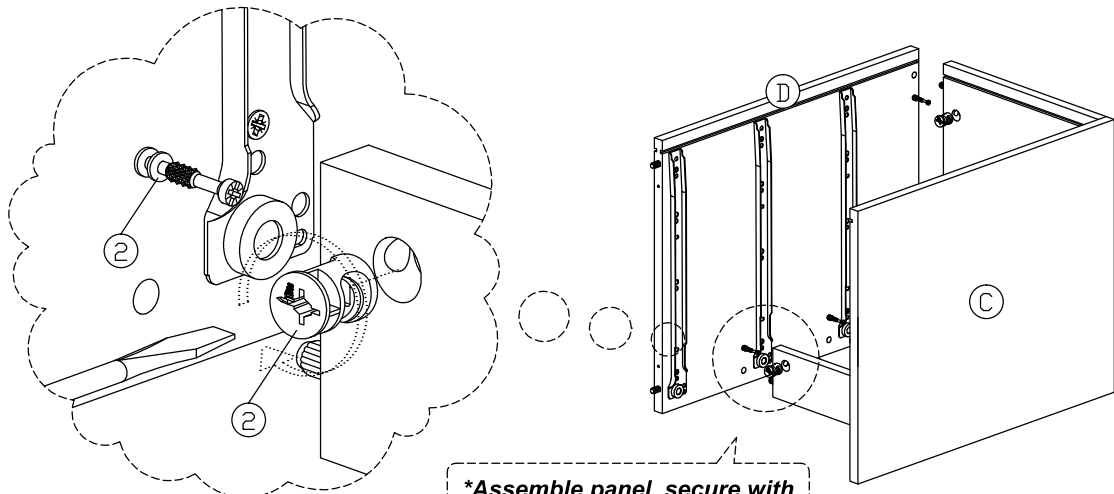


*\*Assemble panel, secure with Minifix as shown above.*

# Assembly Instruction


## Step 6

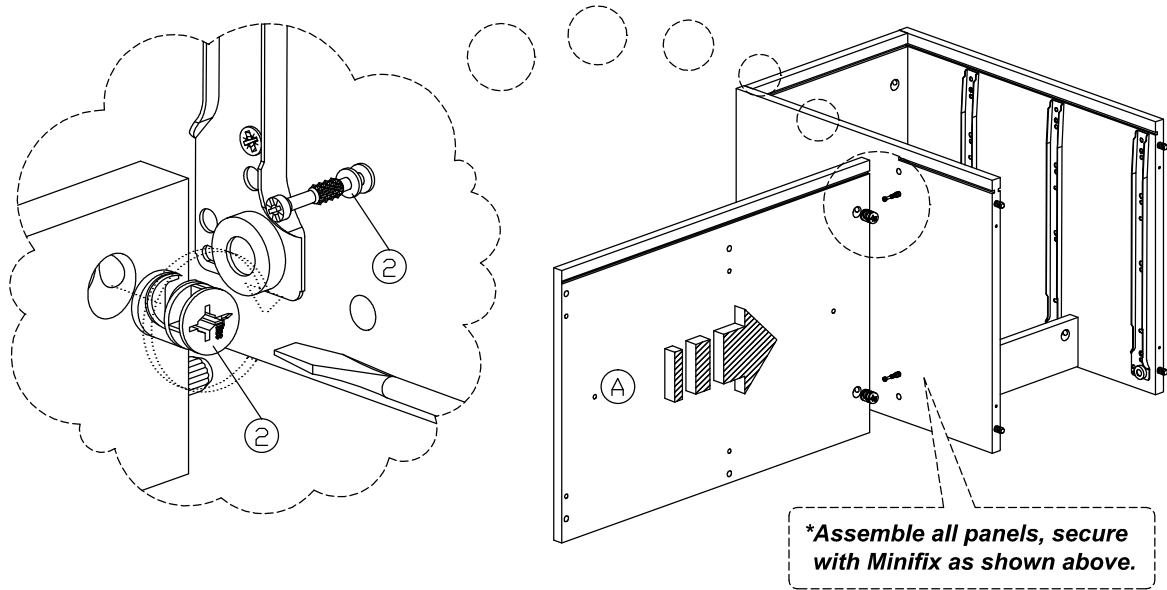

## Step 7

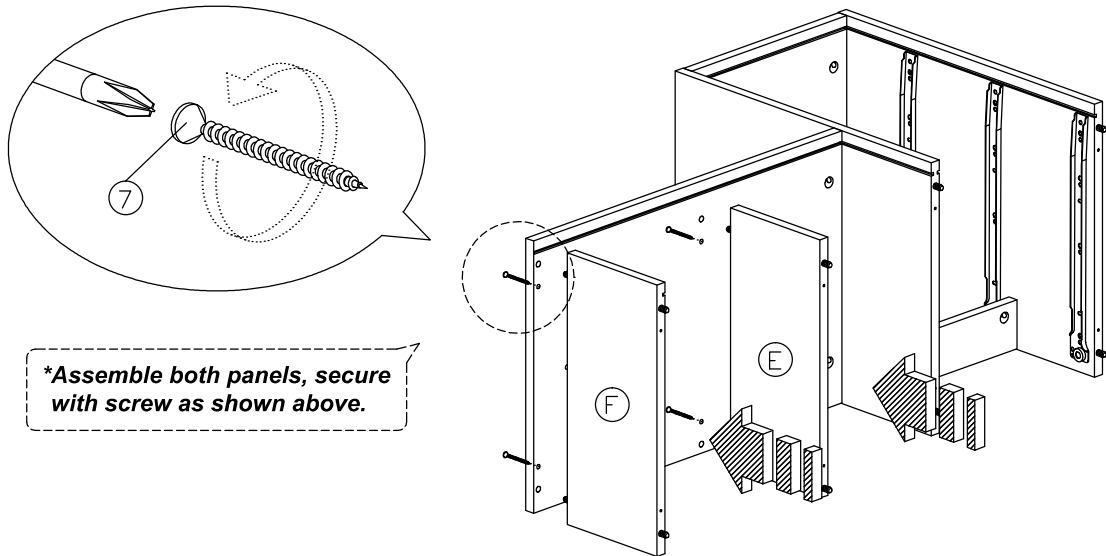


## Step 8

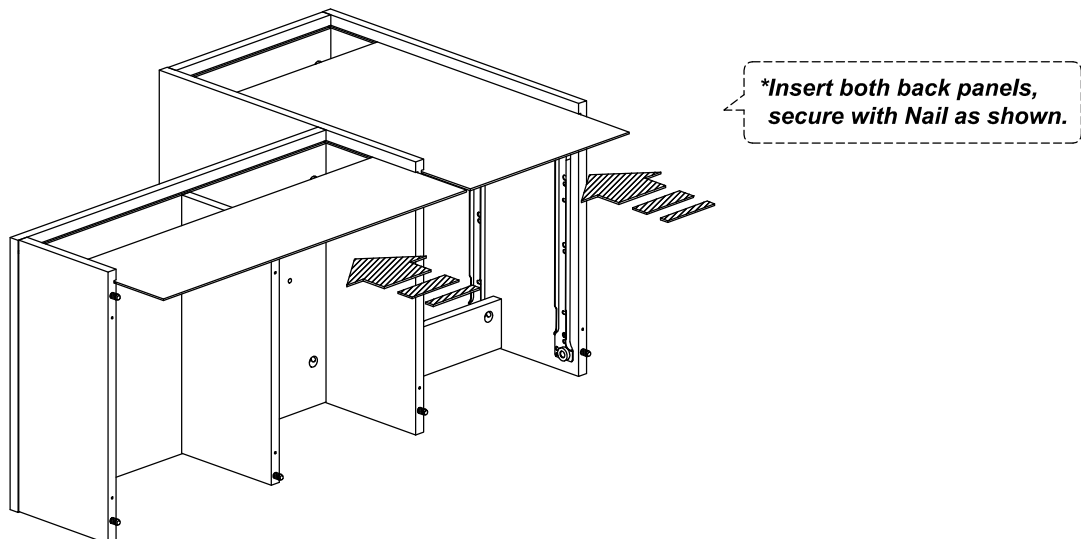


# Assembly Instruction


## Step 9

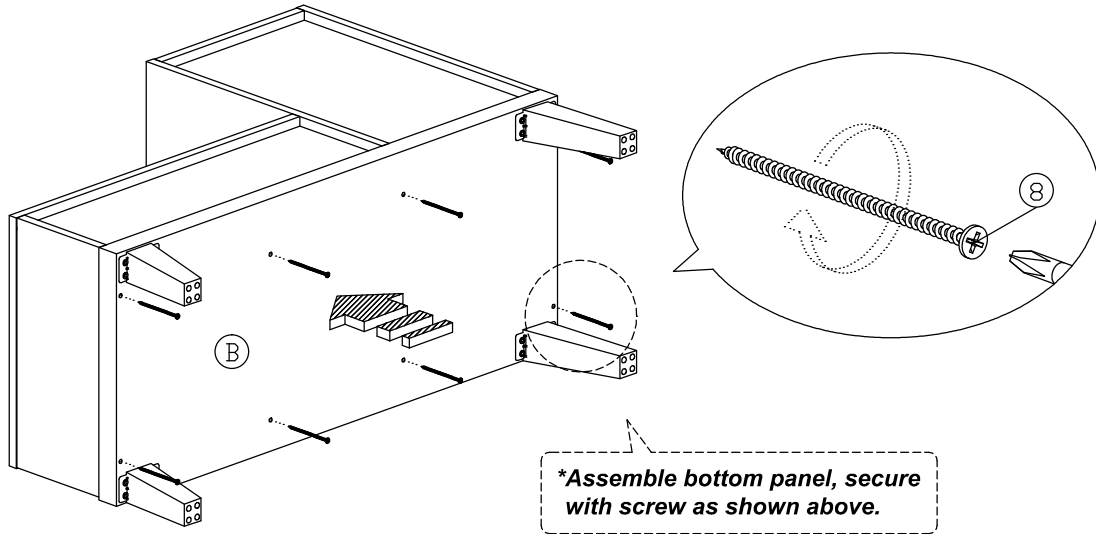

## Step 10

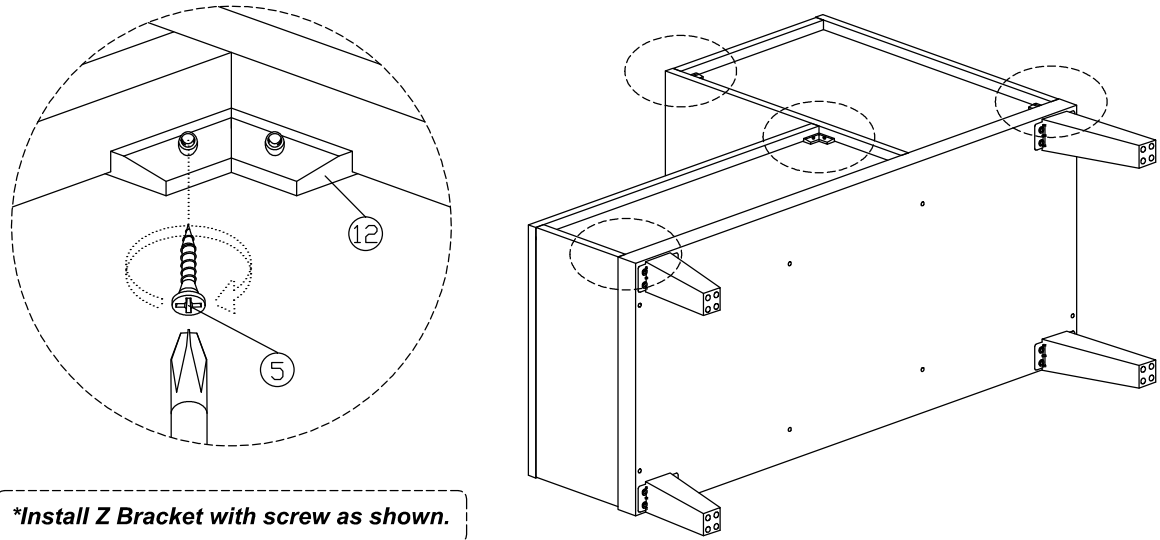


## Step 11


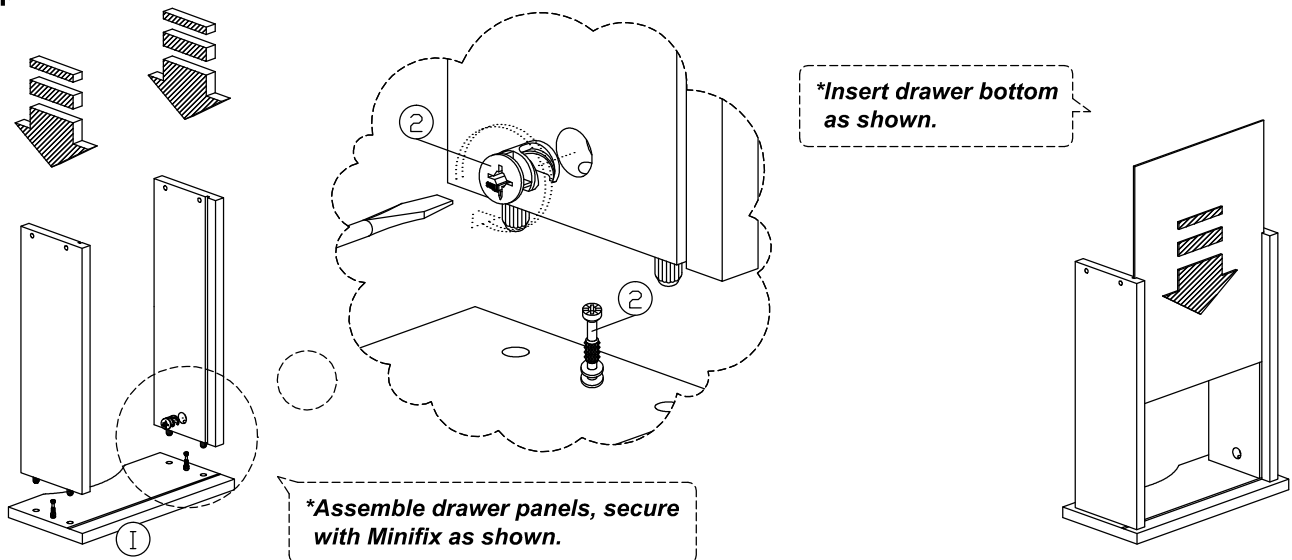


# Assembly Instruction

## Step 12


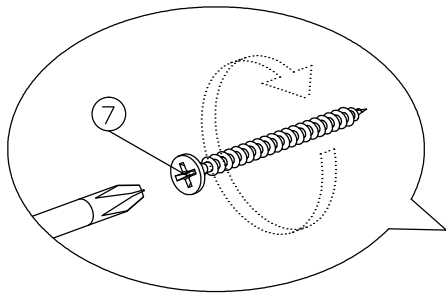


*\*Insert drawer back, secure with screw as shown.*

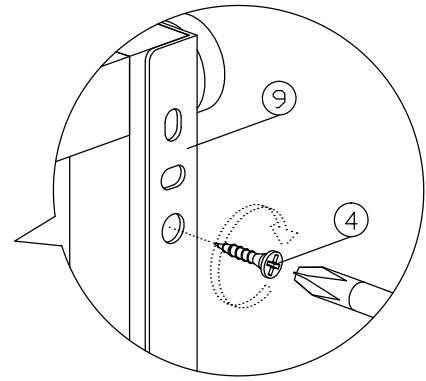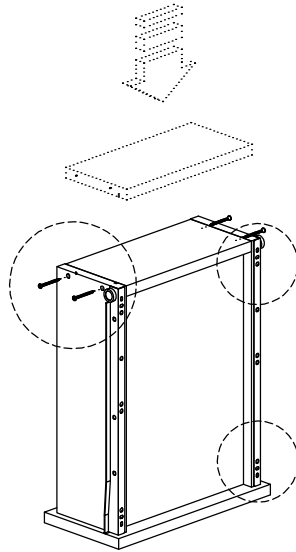



*\*Install Drawer Slide with screw as shown.*

## Step 13

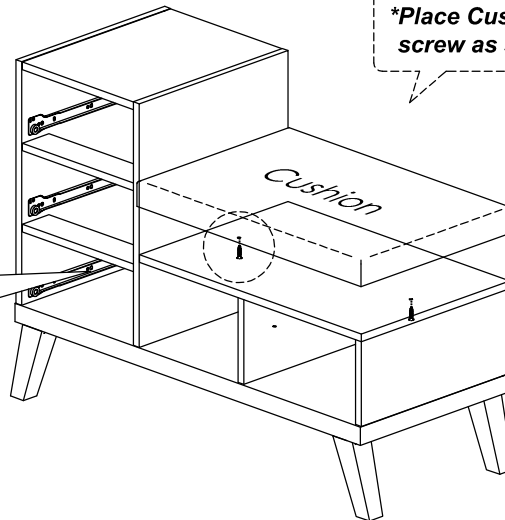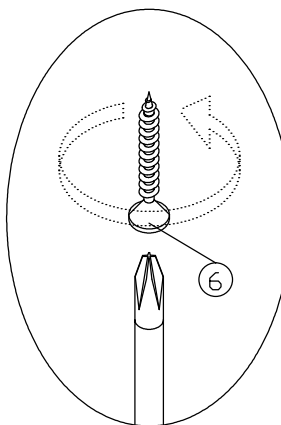

*\*Place Cushion, secure with screw as shown below.*

## Step 14

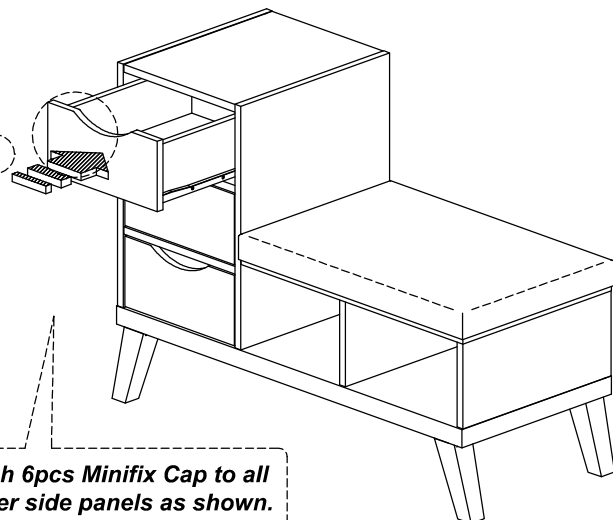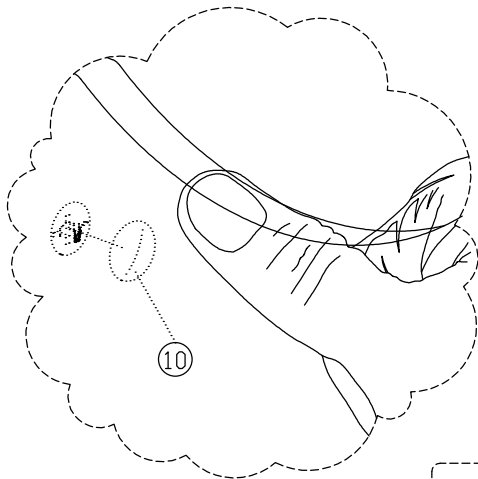

*\*Attach 6pcs Minifix Cap to all drawer side panels as shown.*