ASSEMBLY INSTRUCTIONS


Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

- CAUTIONS: 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.
 - 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
 - 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

| PART LIST | | | |
|-----------|------------------------|--------|--|
| ITEM | DESCRIPTION | QTY | |
| Α | HEADBOARD | 1 PC | |
| В | HEADBOARD LEG (L&R) | 2 PCS | |
| С | FOOTBOARD | 1 PC | |
| D | SIDE RAIL | 2 PCS | |
| E | CENTER RAIL | 1 PC | |
| F | CENTER SUPPORT | 2 PCS | |
| G | CENTER SUPPORT LEG | 3 PCS | |
| Н | BED SLAT | 24 PCS | |
| I | BED LEG | 2 PCS | |
| Ĵ | HEADBOARD SUPPORT WOOD | 2 PCS | |
| К | HEADBOARD SUPPORT RAIL | 1 PC | |

| PART LIST | | | |
|-----------|---------------------------|--------------|--------|
| ITEM | DESCRIPTION | | QTY |
| 1 | JCBB BOLT M8 x 30mm | | 8 PCS |
| 2 | JCBC BOLT M8 x 50mm | | 6 PCS |
| 3 | JCBC BOLT M8 x 60mm | | 4 PCS |
| 4 | JCBC BOLT M8 x 70mm | | 2 PCS |
| 5 | M8 FLAT WASHER | @ | 10 PCS |
| 6 | M8 SPRING WASHER | • | 10 PCS |
| . 7 | WOOD SCREW M3.5 x 16mm | 4mm=8 | 8 PCS |
| 8 | BED SLAT SIDE FITTER | | 24 PCS |
| 9 | BED SLAT CENTER FITTER | \Diamond | 12 PCS |
| 10 | M5 ALLEN KEY (BALL SHAPE) | | 1 PC |

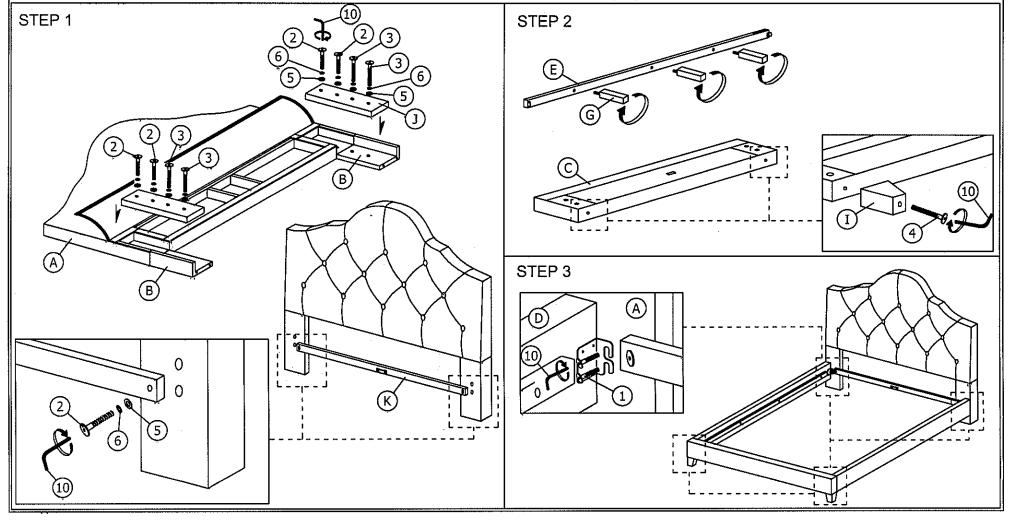

ASSEMBLY INSTRUCTIONS

