ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.


3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	HEADBOARD	1 PC	
В	FOOTBOARD	1 PC	
С	SIDE RAIL (L)	1 PC	
D	SIDE RAIL (R)	1 PC	
E	CENTER RAIL	2 PCS	
F	CENTER SUPPORT	3 PCS	
G	CENTER SUPPORT LEG	6 PCS	
Н	BED SLAT	39 PCS	
I	BED LEG	4 PCS	

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBB BOLT M8 x 30mm		4 PCS
2	JCBB BOLT M8 x 40mm	@	6 PCS
3	JCBB BOLT M8 x 50mm		4 PCS
4	M8 FLAT WASHER	0	6 PCS
5	M8 SPRING WASHER		6 PCS
6	WOOD SCREW M3.5 x 16mm	411111	12 PCS
7	PVC BLACK WASHER		4 PCS
8	BED SLAT SIDE FITTER		26 PCS
9	BED SLAT CENTER FITTER	\Diamond	26 PCS
10	M5 ALLEN KEY (BALL SHAPE)		1 PC
	1 2 3 4 5 6 7 8	ITEM DESCRIPTION 1 JCBB BOLT M8 x 30mm 2 JCBB BOLT M8 x 40mm 3 JCBB BOLT M8 x 50mm 4 M8 FLAT WASHER 5 M8 SPRING WASHER 6 WOOD SCREW M3.5 x 16mm 7 PVC BLACK WASHER 8 BED SLAT SIDE FITTER 9 BED SLAT CENTER FITTER	TTEM DESCRIPTION 1 JCBB BOLT M8 x 30mm 2 JCBB BOLT M8 x 40mm 3 JCBB BOLT M8 x 50mm 4 M8 FLAT WASHER 5 M8 SPRING WASHER 6 WOOD SCREW M3.5 x 16mm 7 PVC BLACK WASHER 8 BED SLAT SIDE FITTER

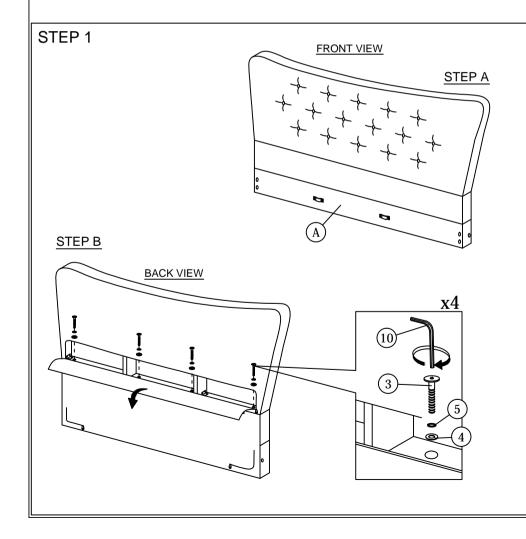

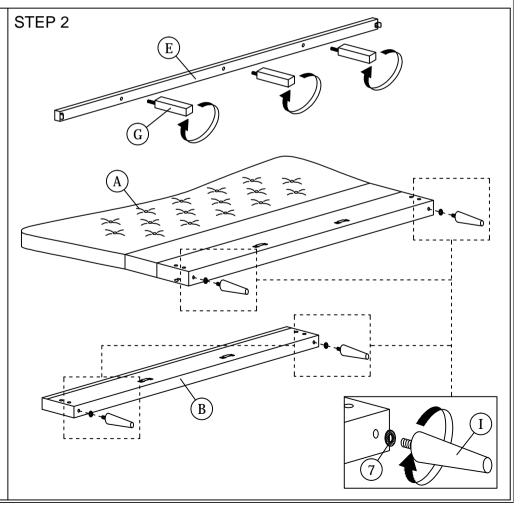


**Finish step C,

Please screw tied the step A & B bolt.

STEP 3

Loosely fit bolt (2) into Headboard (A) as picture shown.

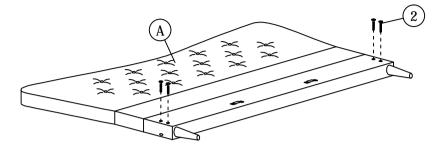

Loosely fit bolt (1) into Footboard (B) as picture shown.

