









# Assembly Instruction



**Model : CT - 2DW**



<b>1</b>  Ø x 20mm 1X44	<b>2</b>  Ø x 20mm 1X3	<b>3</b>  15mm 3.5 x 10mm 1X28	<b>4</b>  38mm 4 x 20mm 1X8	<b>5</b>  65mm 4 x 20mm 1X6	<b>6</b>  6a 10 Sets	<b>7</b>  1X5	<b>8</b>  8a 1X2	 8b 1X4	<b>9</b>  2 Sets (400 mm)
----------------------------------	---------------------------------	--	---	---	-------------------------------	---------------------	---------------------------	---------------	---------------------------------

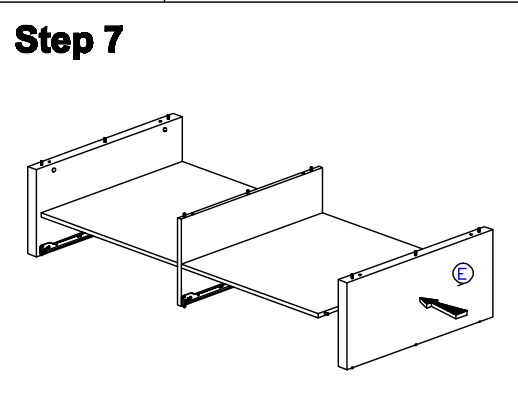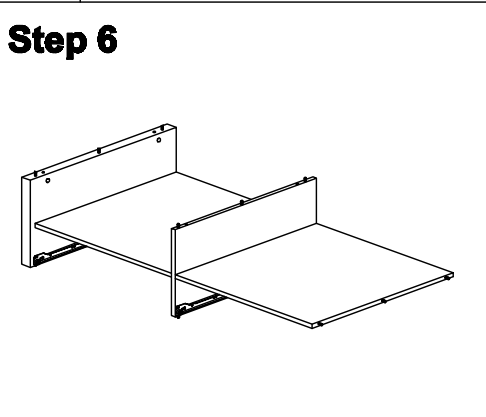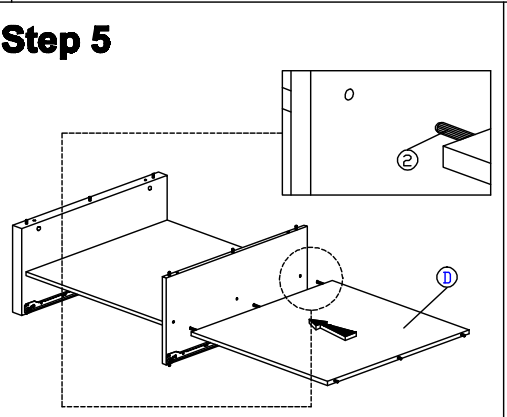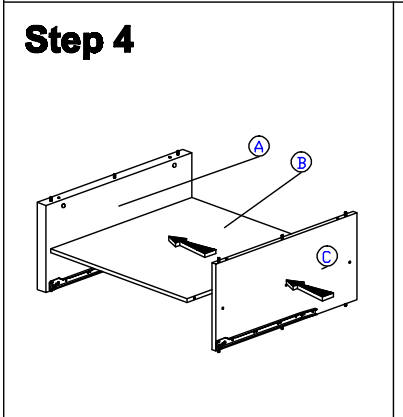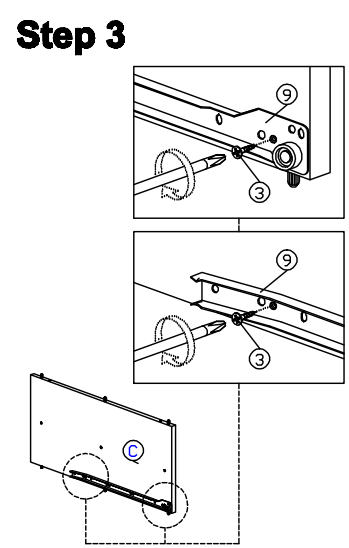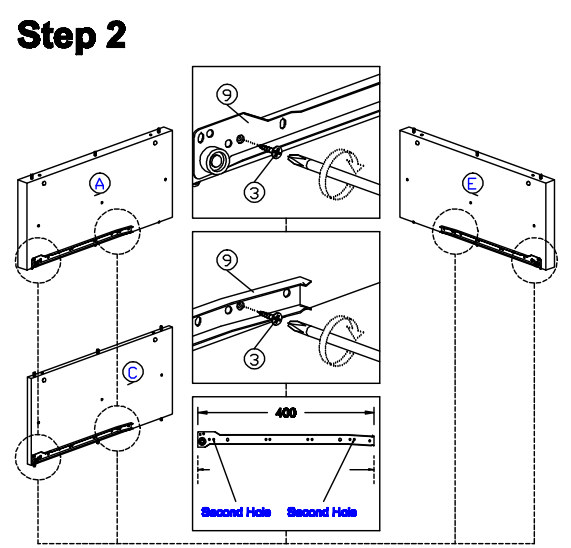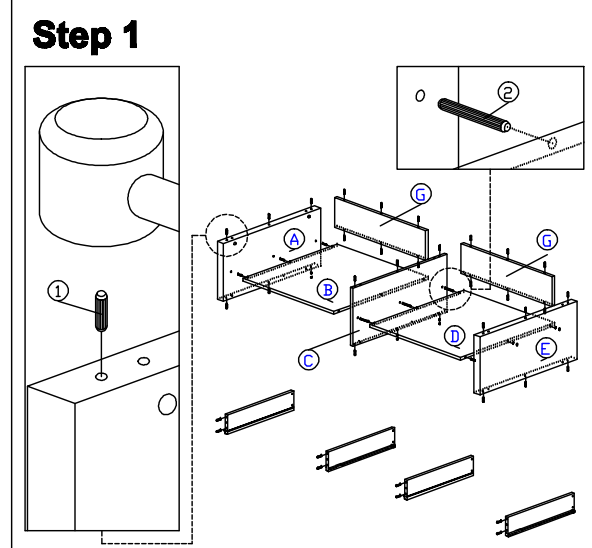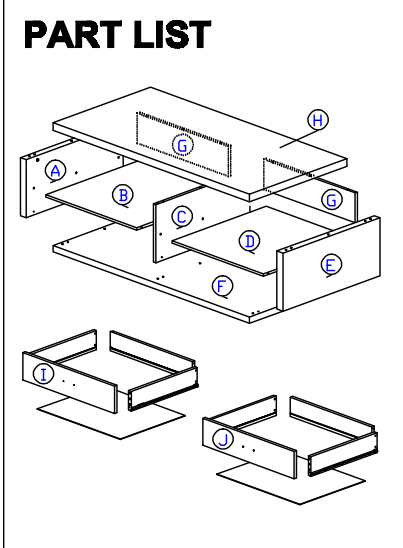


# Assembly Instruction




**Model : CT - 2DW**




**Step 8**

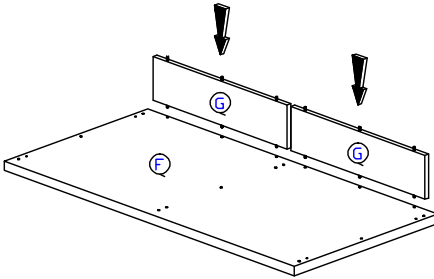


**Step 9**

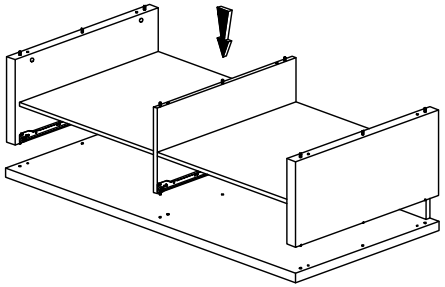


**Step 10**

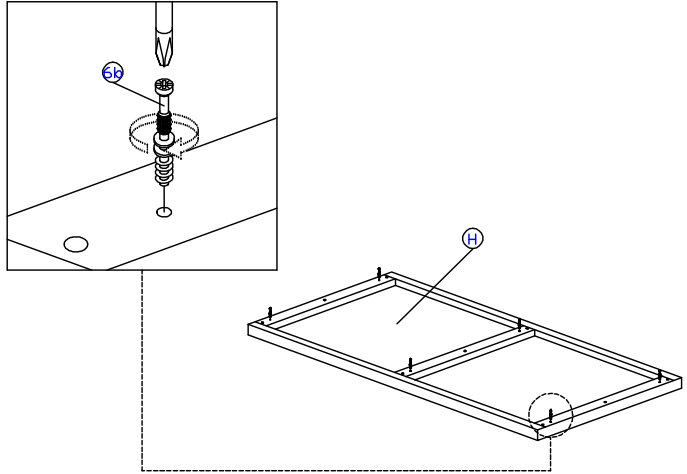


**Step 11**

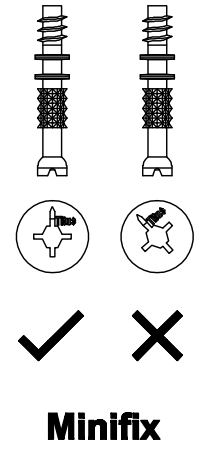


**Step 12**

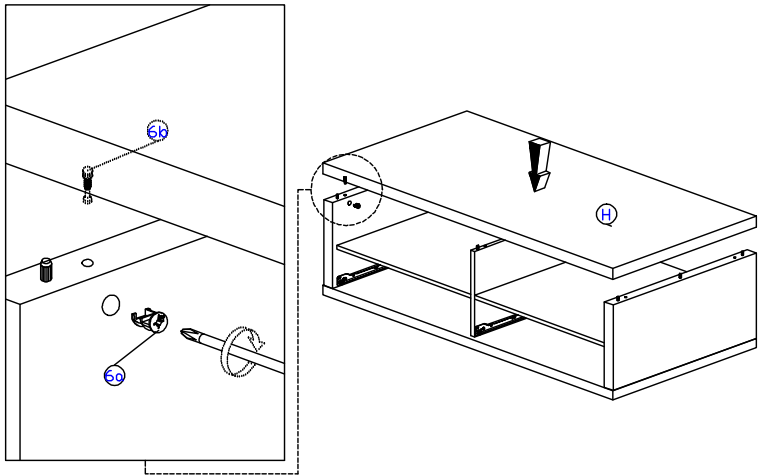

**Step 13**

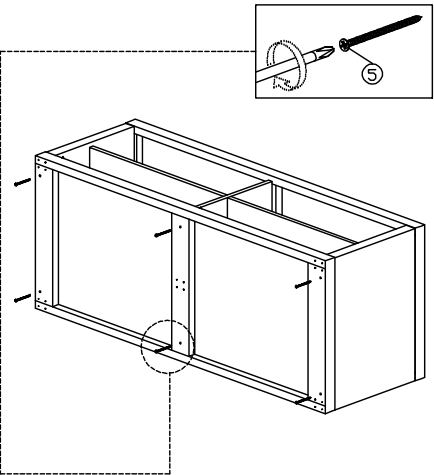


**Step 14**

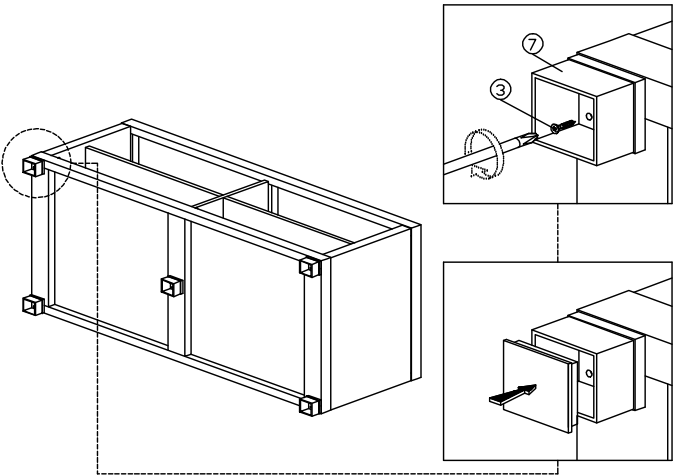


# Assembly Instruction




**Model : CT - 2DW**




**Step 15**

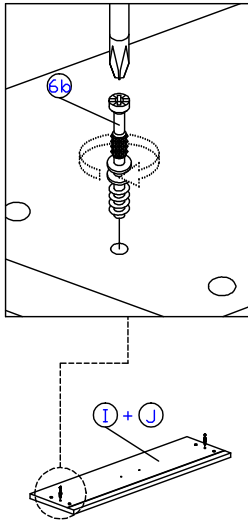


**Step 16**

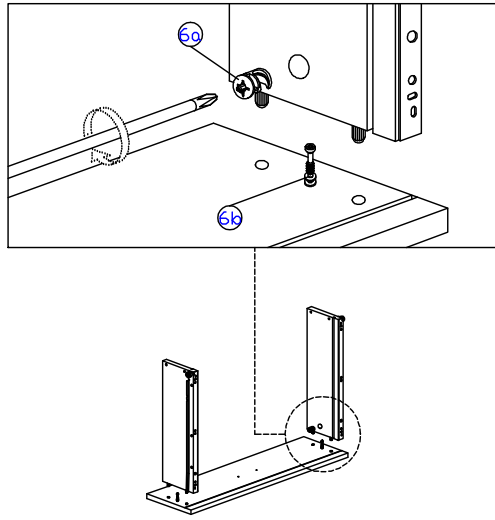


**Step 17**

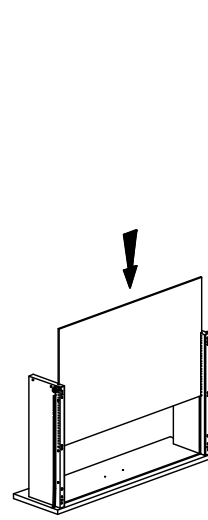


**Step 18**

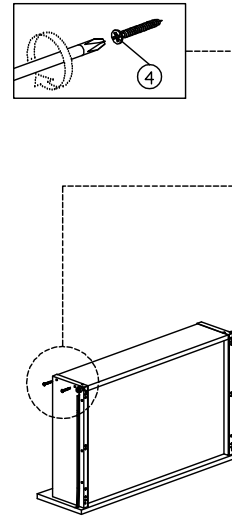


**Step 19**

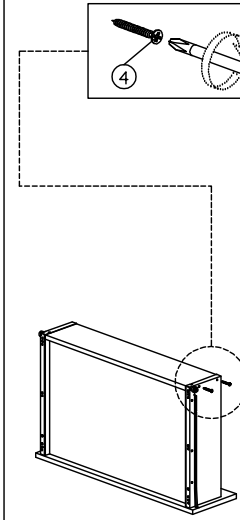


**Step 20**

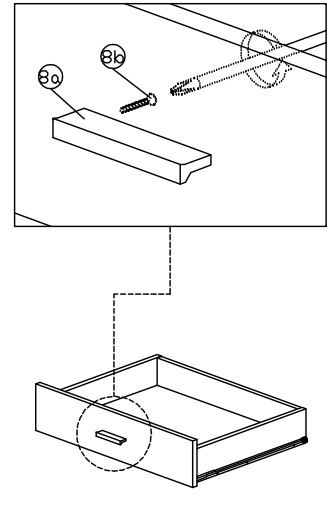

**Step 21**

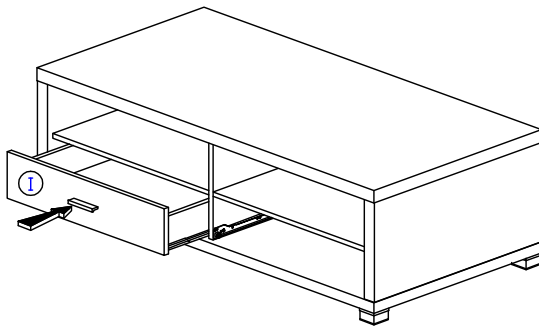

**Step 22**

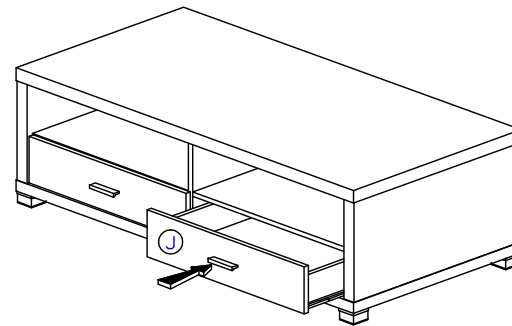

**Complete**

