



Assembly Instruction

Model : FTV - 4122

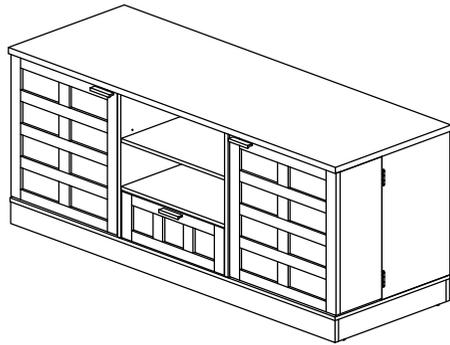

Dowel / Cam - Lock Installation

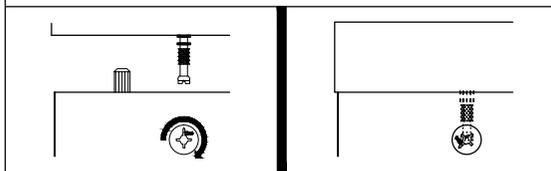


Hardware List


No.	SHAPE	DESCRIPTION	Qty.
-----	-------	-------------	------

1		8x25mm Wood Dowel	100Pcs
2		15MM Titus Mini Fix	85Sets
3		M3x12mm Screw	8Pcs
4		M3.5x15mm Screw	4Pcs
5		M3x16mm Screw	28Pcs
6		M4x38mm Screw	5Pcs
7		M5x38mm Screw	10Pcs
8		Shelf Support	4Pcs
9		Nail	15Pcs
10		Drawer Slide 16" (400mm)	1Set
11		Handle L Shape (84mm) M3.6x24mm Screw	3Sets
12		Double Roller Catch	2Sets
13		Nail Leg	8Pcs
14		15mm Minifix Cap	22Pcs
15		Hinges (RA4406 180°)	4Pcs



Part List

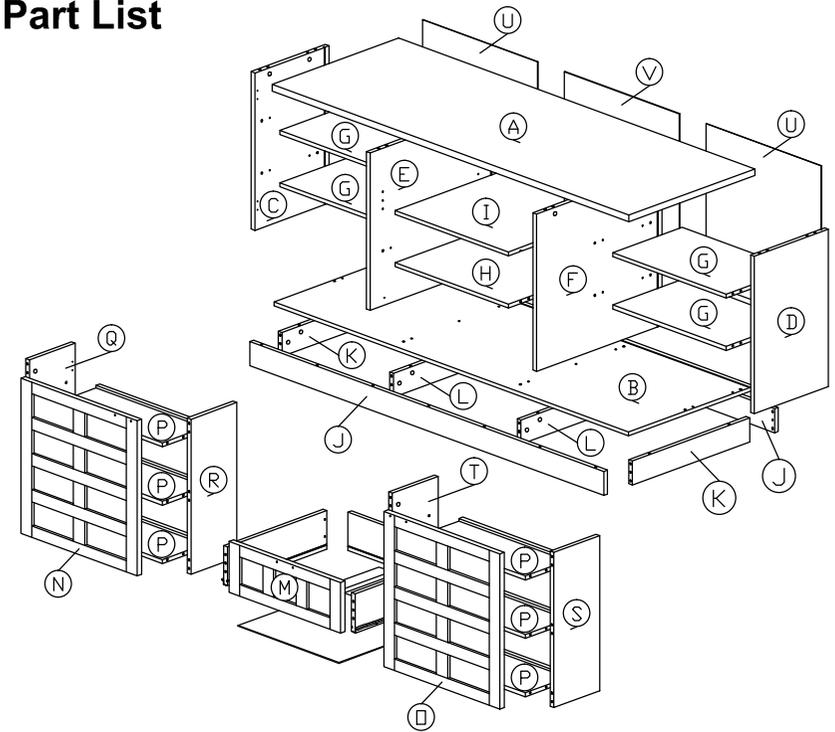

Step 1

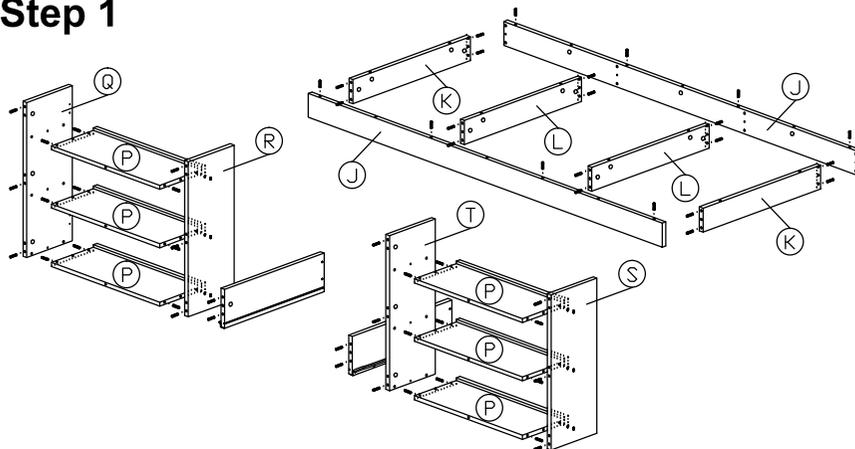


*Install 100pcs Wood Dowel into all panels as shown.

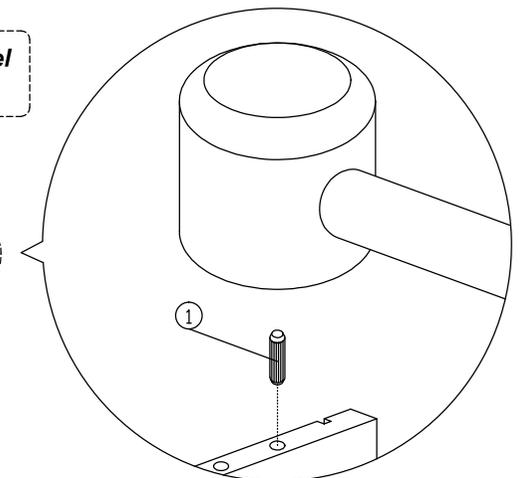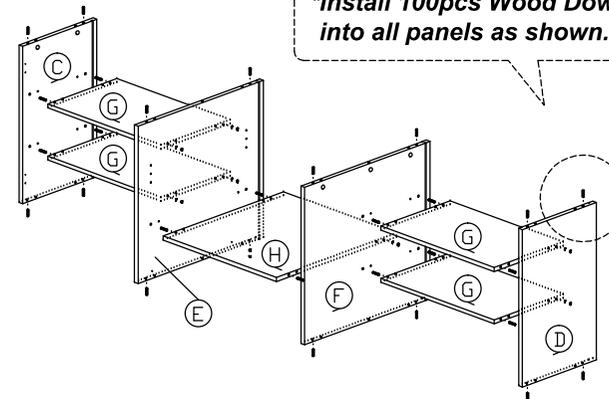


Assembly Instruction


Step 2

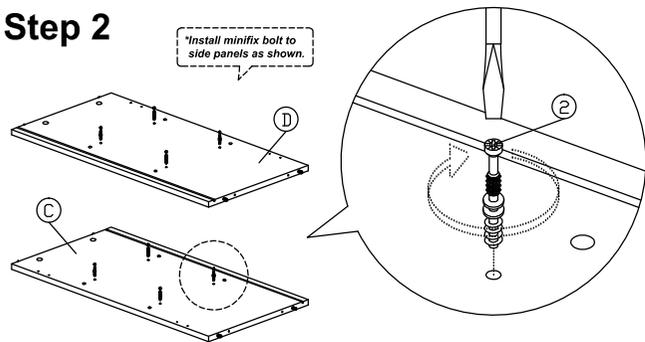


Step 3

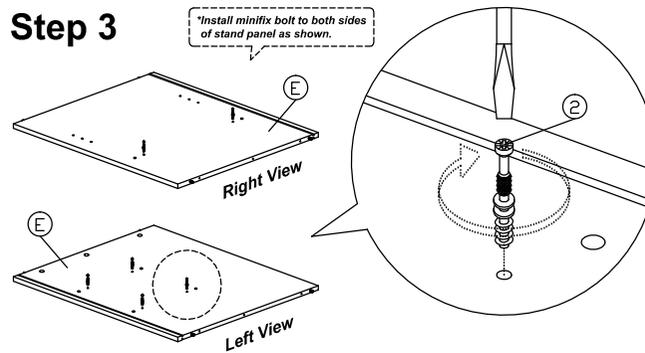


Step 4

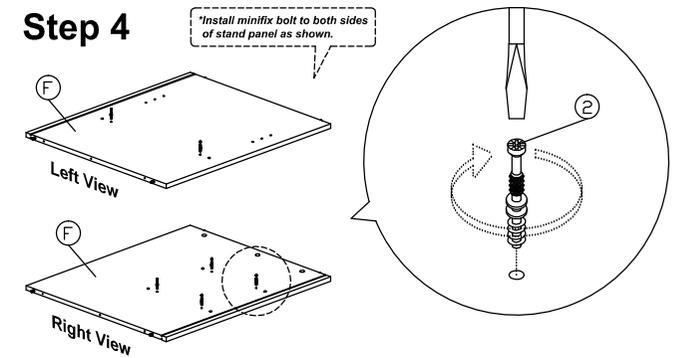


Step 5

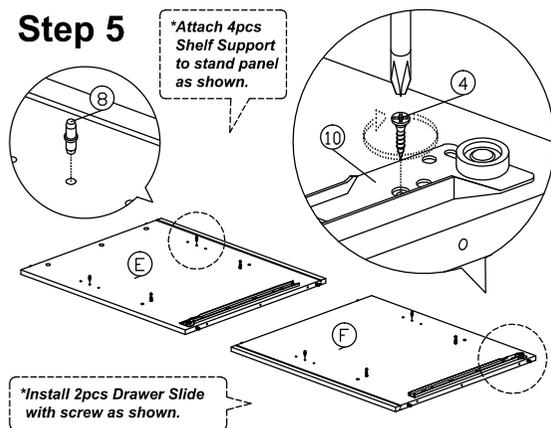


Step 6

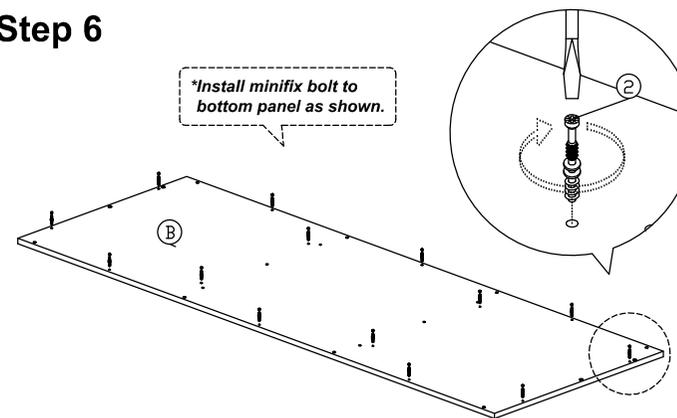


Step 7

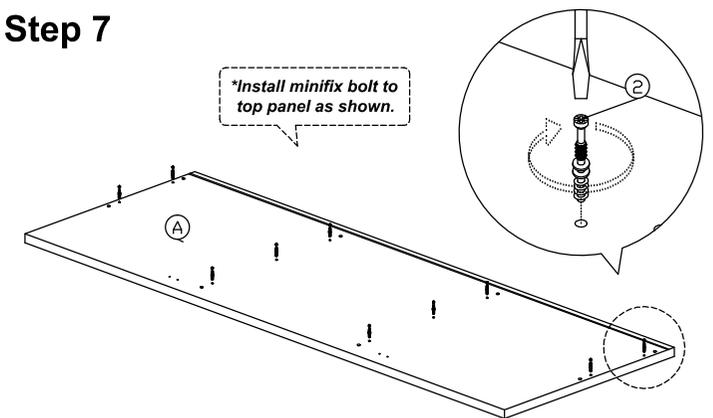


Step 8

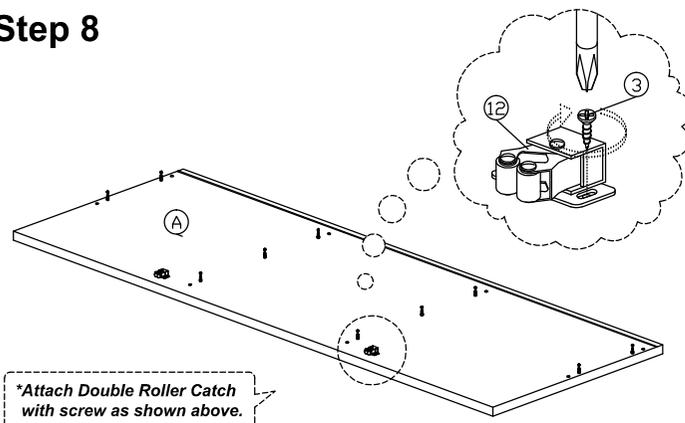

Step 9

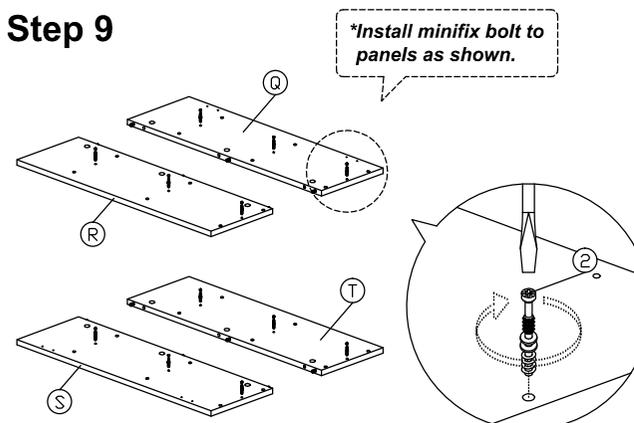


Step 10

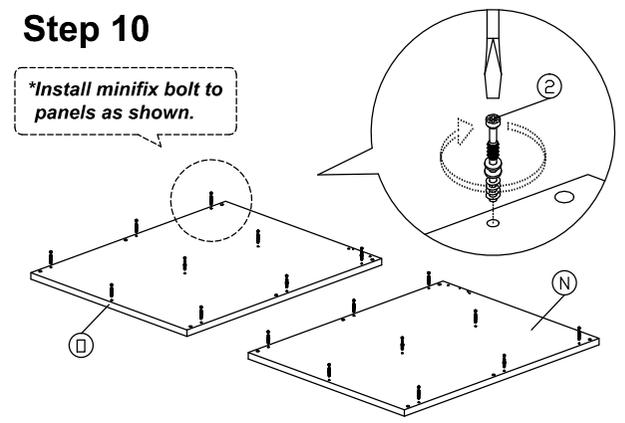


Assembly Instruction



Step 11

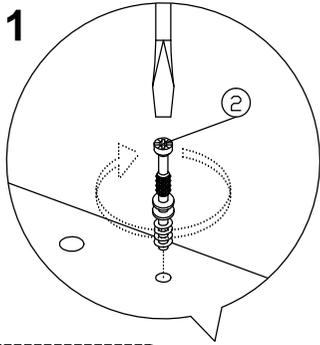


**Install minifix bolt to drawer front as shown.*

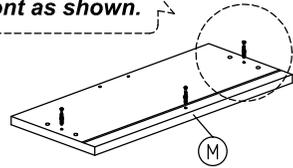

Step 12

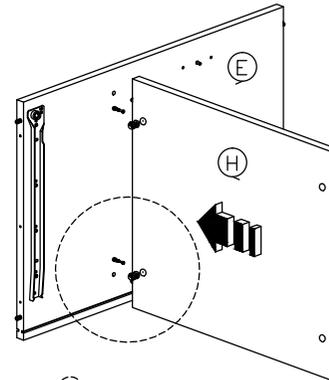
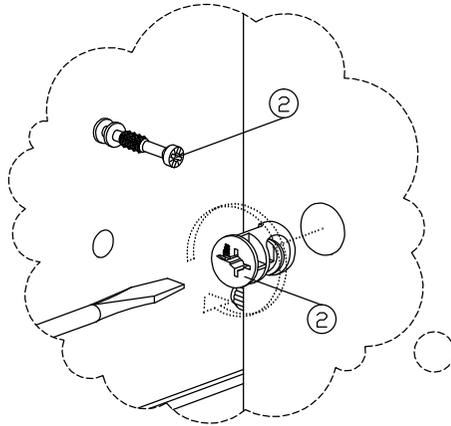


**Assemble panels, secure with Minifix as shown.*

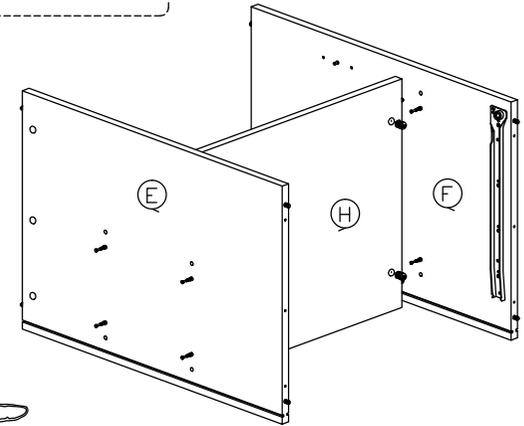



Step 13

**Assemble panels, secure with Minifix as shown.*

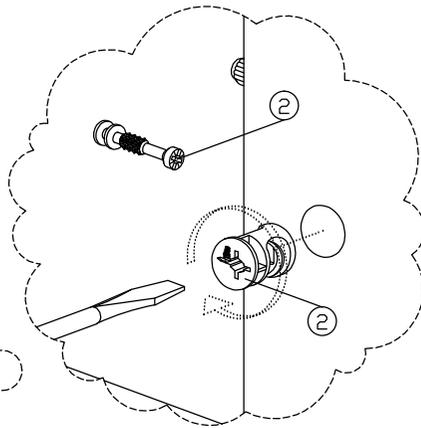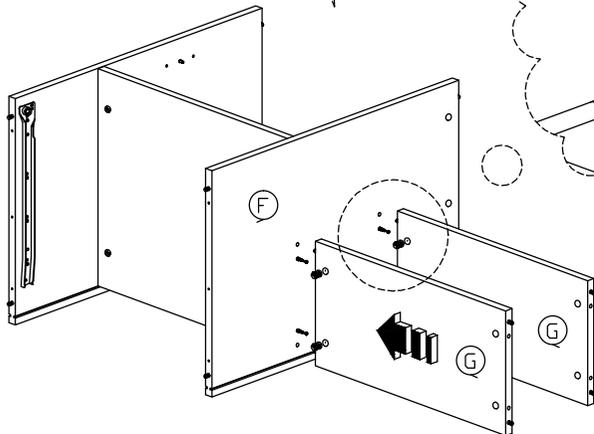


Step 14

**Assemble panels, secure with Minifix as shown.*

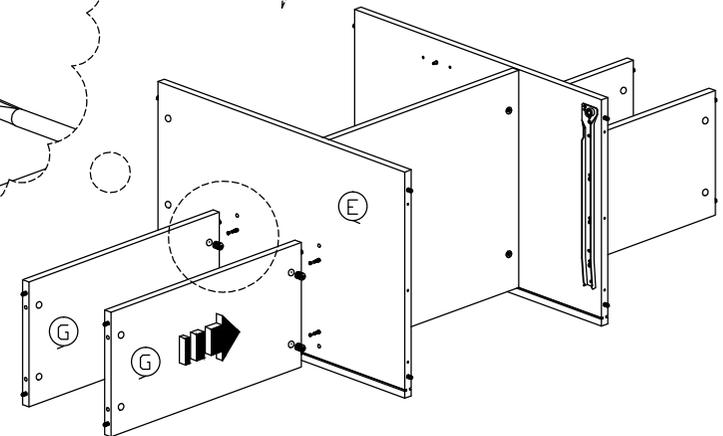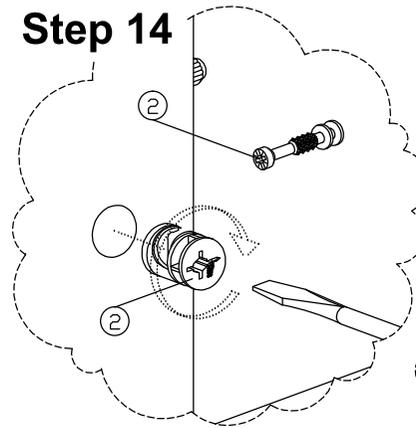


Assembly Instruction


Step 15

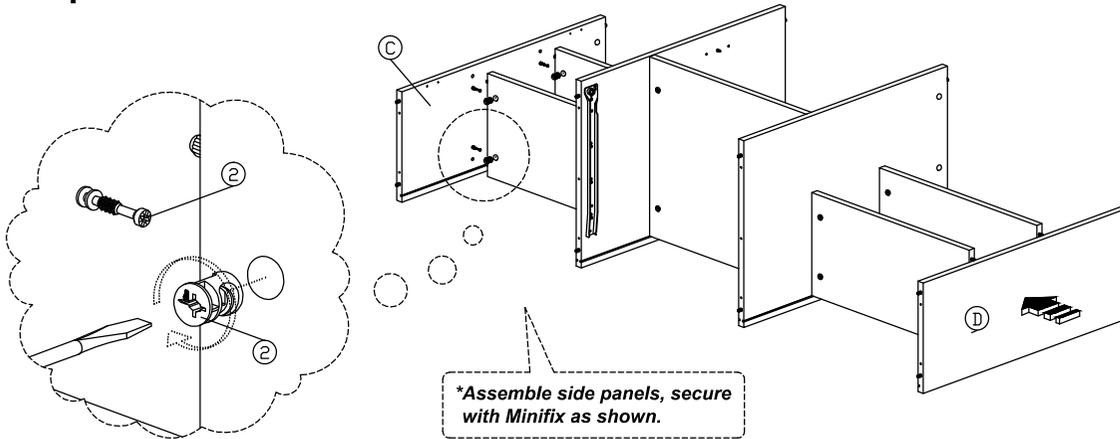


Step 16

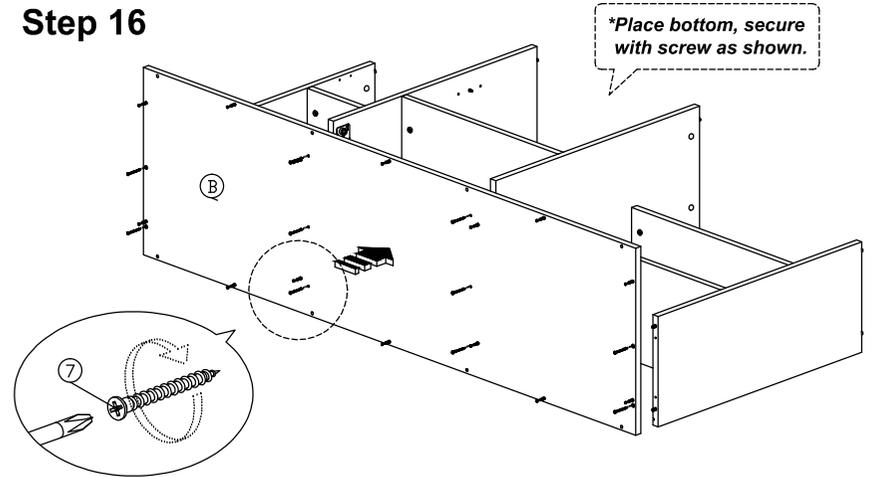


Step 17

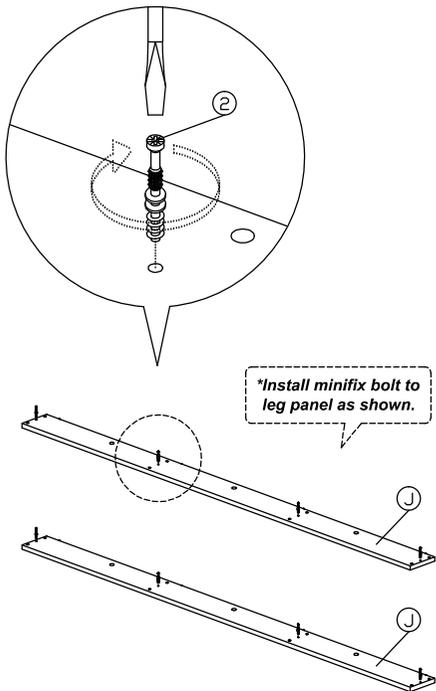

Step 18

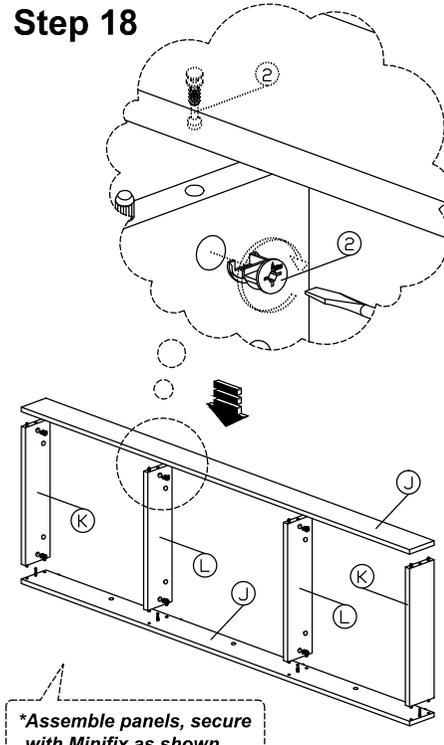


Step 19

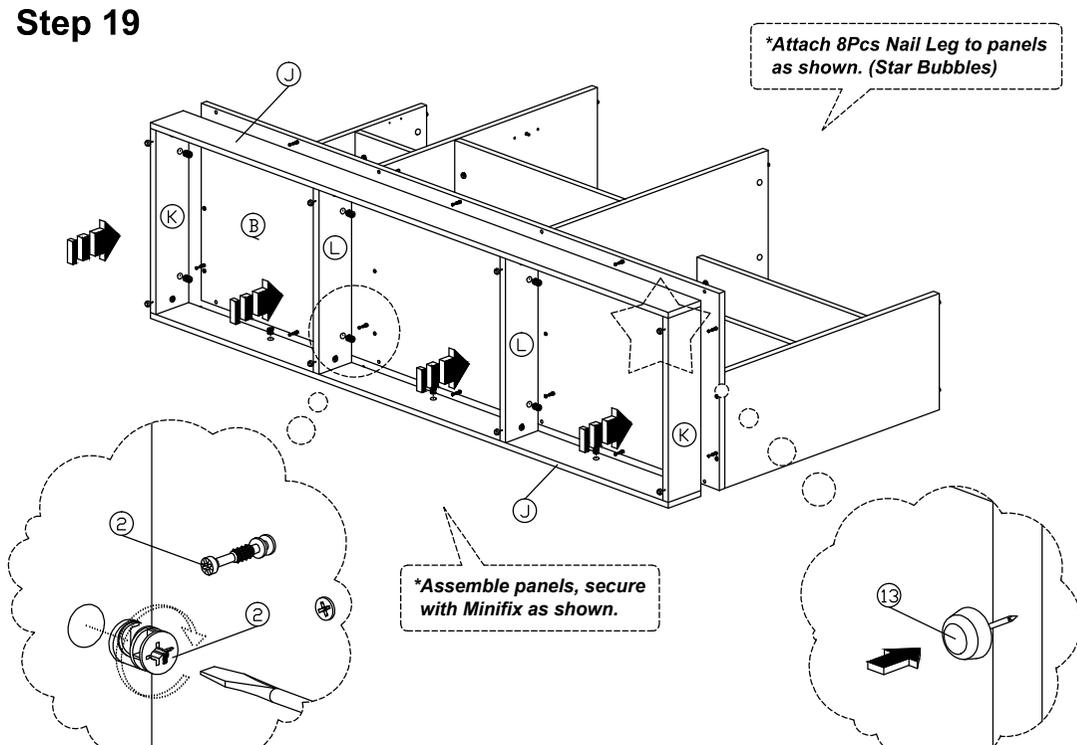


Assembly Instruction


Step 20

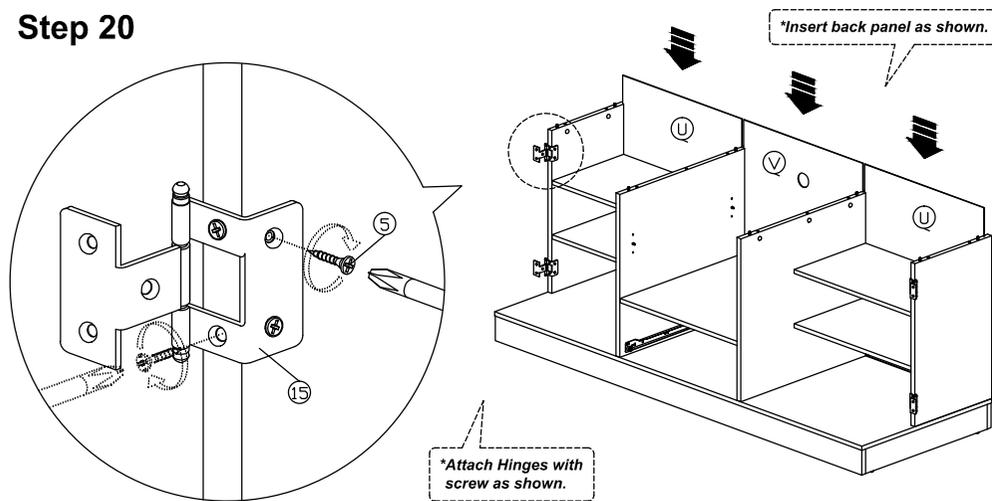


Step 21

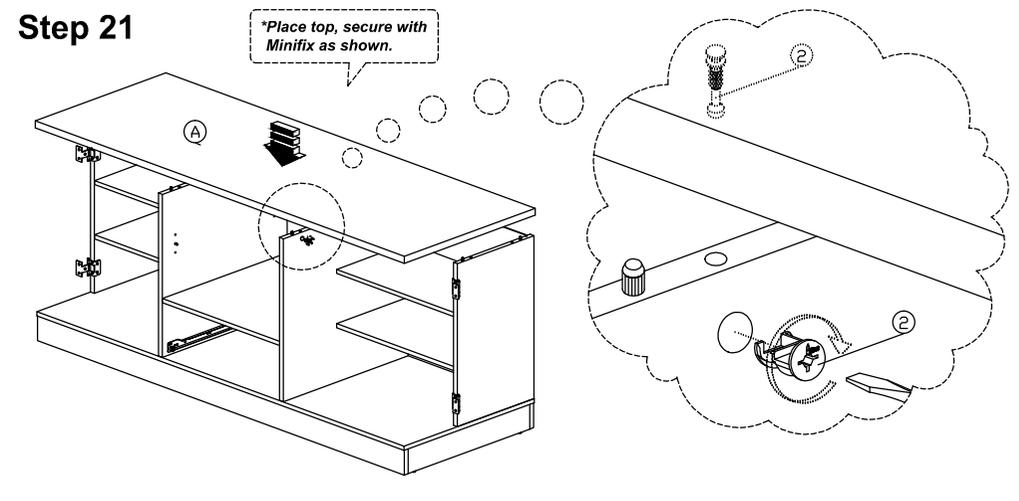


Step 22

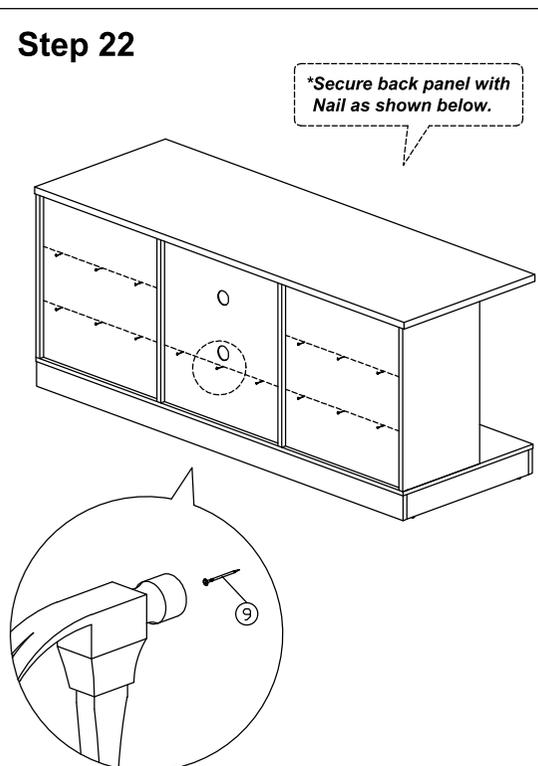


Step 23

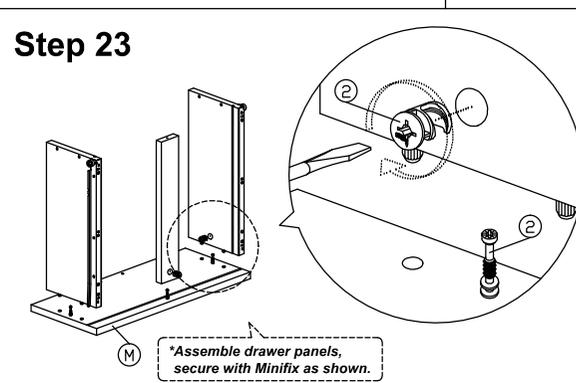


Step 24

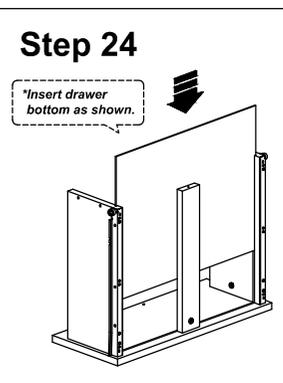


Step 25

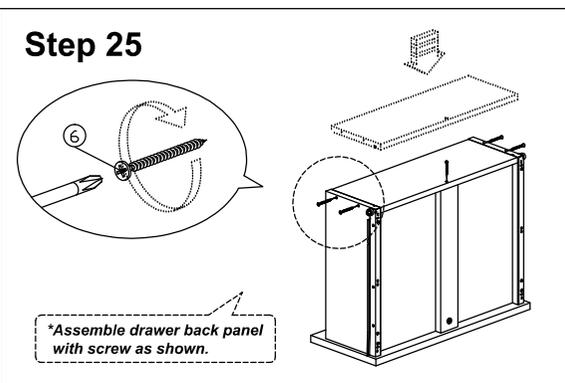

Step 26

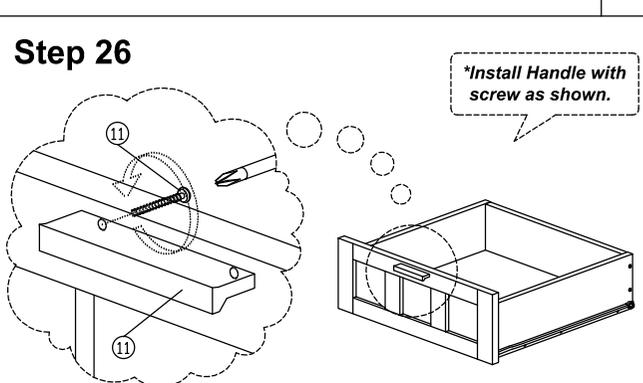


Step 27

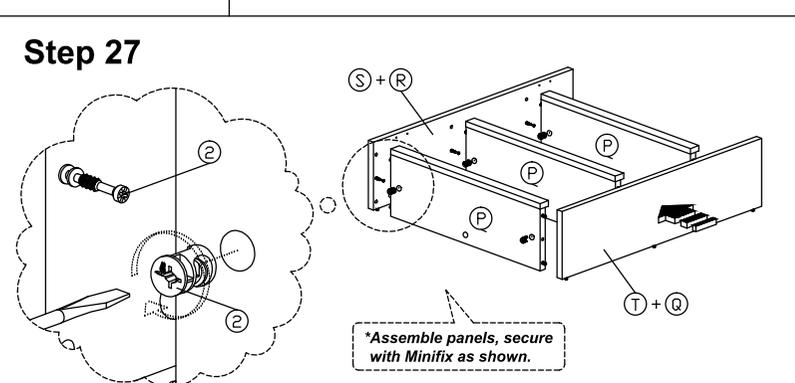


Assembly Instruction


Step 28

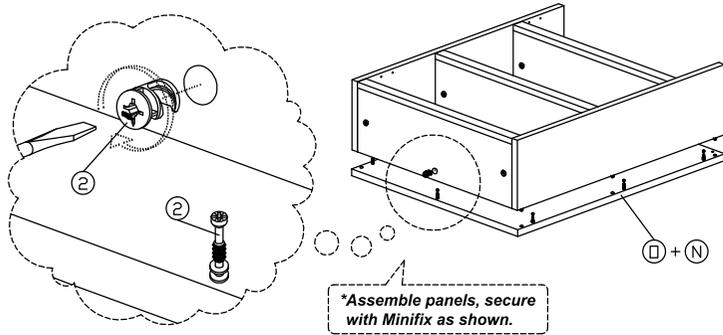


Step 29

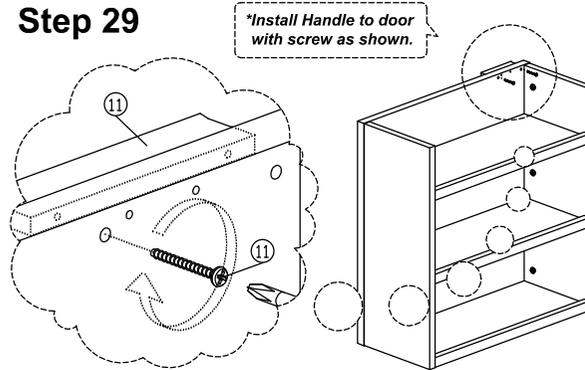

Step 30

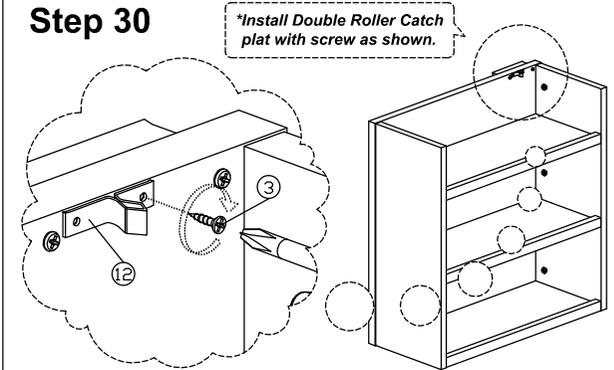

Step 31

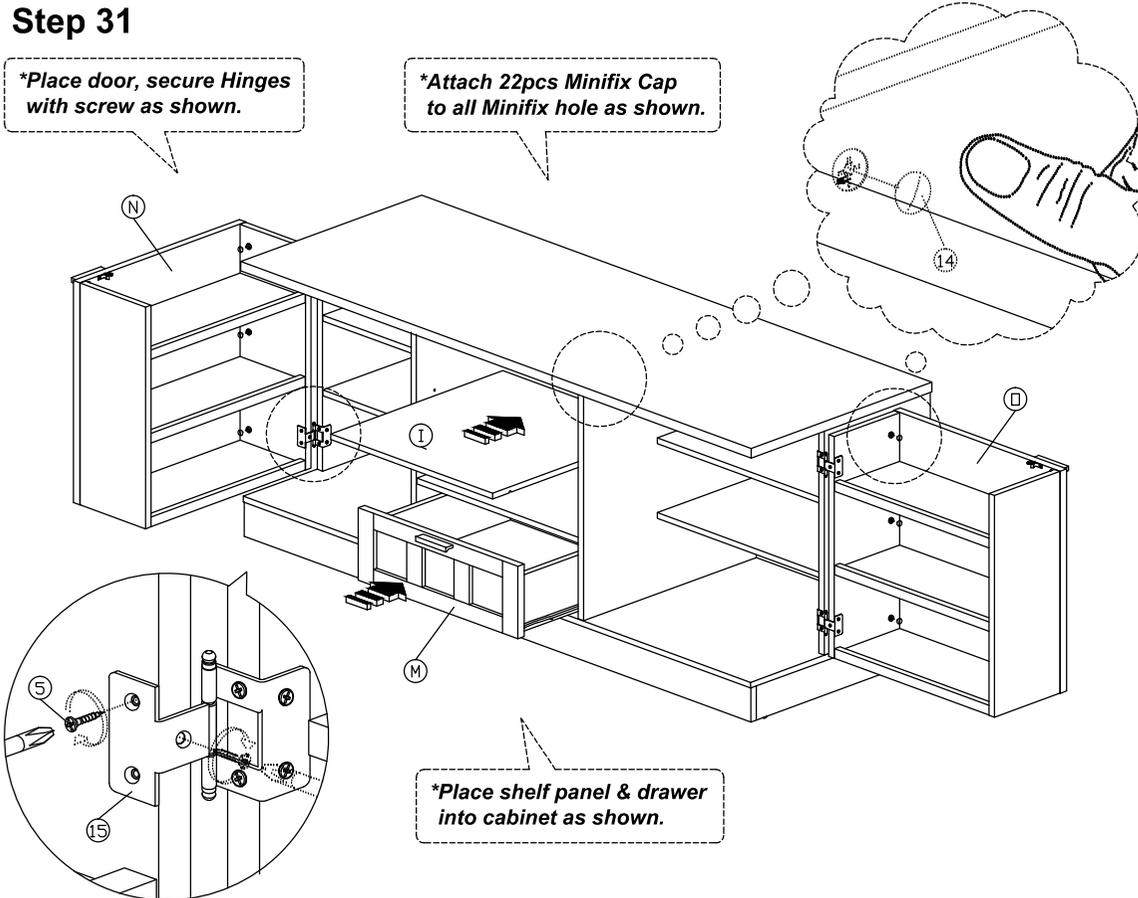

Complete

