

# ASSEMBLY INSTRUCTION


## Item NO.:IDAC-013-PC-DARK BROWN

2PCS/CTN

### ! Notice:

- ① Don't use power stool.
- ② Don't tighten until assembly all.

STEP 1:

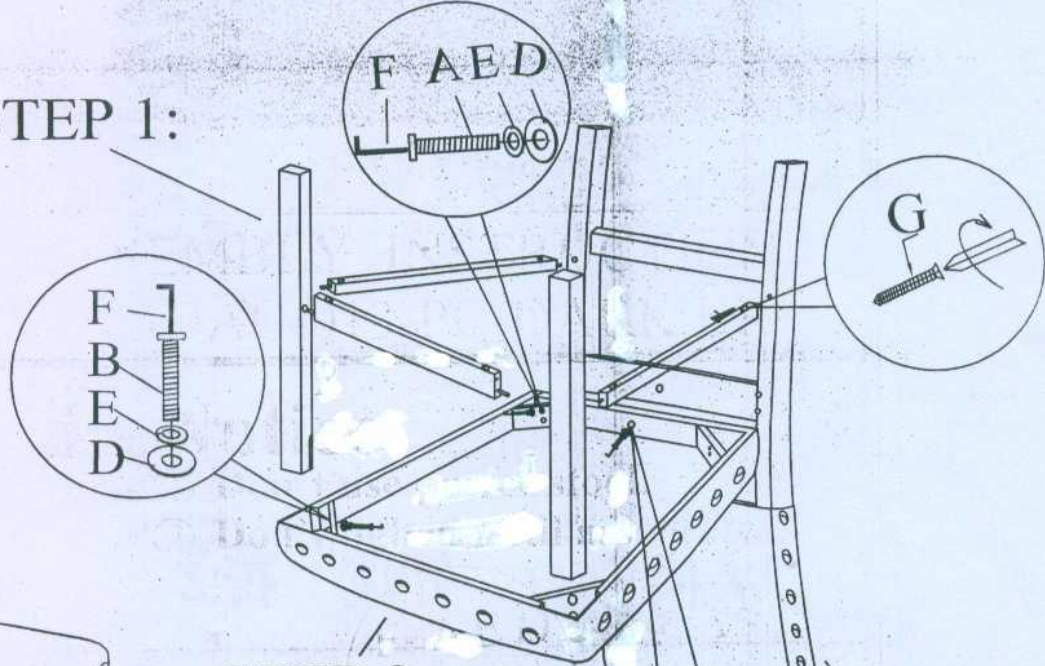

STEP 2:

STEP 4:

STEP 5:

STEP 3:



Assembly loosing finger tighten,  
Do not tighten until assembly all legs.

### PARTS LIST

### HARDWARE LIST

PARTS LIST				HARDWARE LIST			
1		Leg	2pcs	A		Bolt(Ø1/4"*3-1/2" L)	4pcs
				B		Bolt(Ø1/4"*2-1/4" L)	4pcs
2		Seat Frame	1pc	C		Bolt(Ø1/4"*1-1/2" L)	1pc
3		Chair Back	1pc	D		Washer(Ø1/4"*19mm)	9pcs
4		Side connector	2pcs	E		Lock Washer(Ø1/4")	9pcs
				F		Allen Wrench	1pc
5		Front connector	1pc	G		Wood Screw#8*1-1/2	6pcs

MADE IN CHINA