



| | | | |
|----------------------|----------------------|------------------|---------------------|
| 1. -1PC | 2. -1PC | 3. -2PCS | 4. -1PC 25x25mm |
| 5. -3PCS 25x25mm | 6. -3PCS 25X25mm | 7. -26PCS | A. M8x50mm-8PCS |
| B. M8-8PCS | C. Ø9-Ø22-8PCS | C1. Ø14-6PCS | D. M6x60mm-9PCS |
| F. 5mm-1PC | G. 4mm-1PC | H. 5mm-1PC | I. 4mm-1PC |
| J. Ø38 4PCS | K. 25X25mm 9PCS | L. 26PCS | M. 13PCS |


Step 1

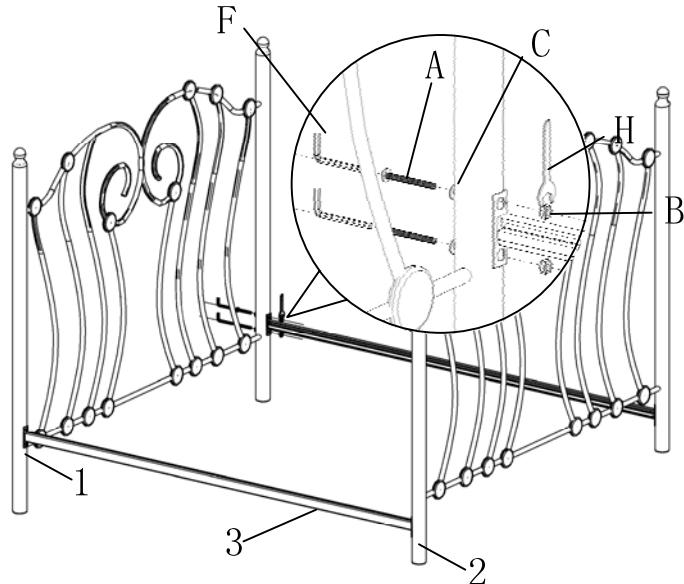


Step 2

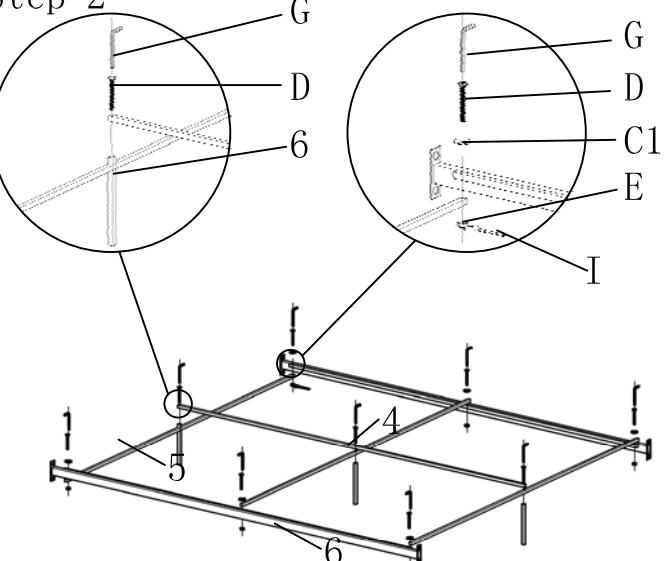

Step 3

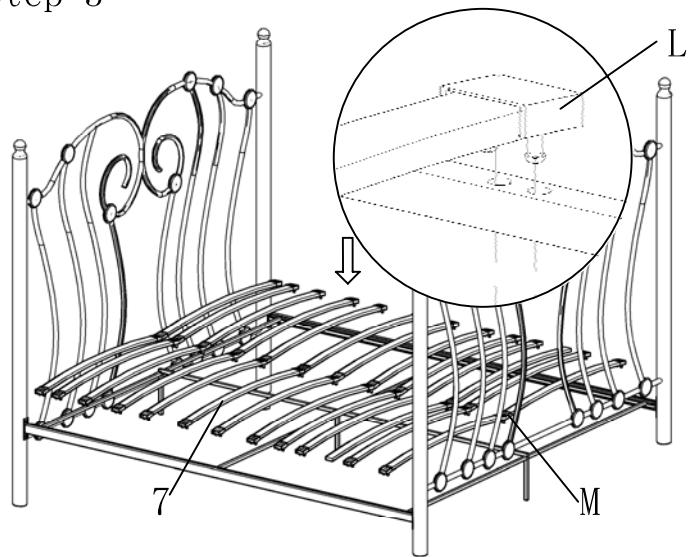

Step 4

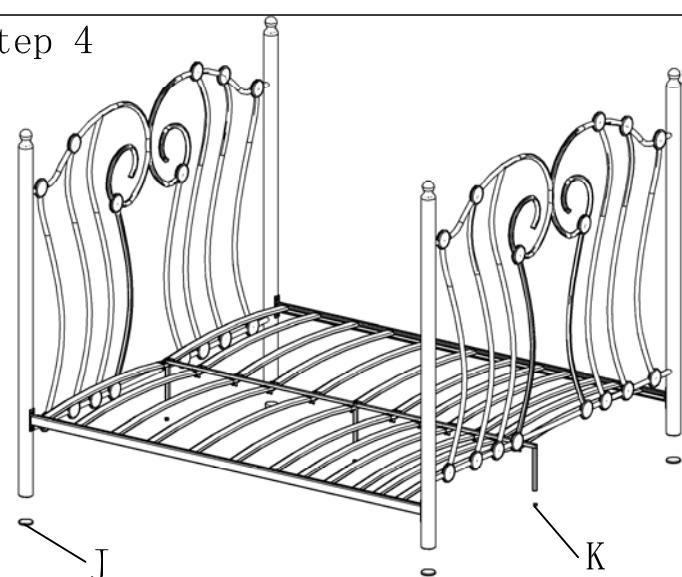

1. -1PC

2. -1PC

3. -2PCS



4. -1PC 25x25mm


5. -3PCS 25x25mm



6. -3PCS 25X25mm



7. -26PCS

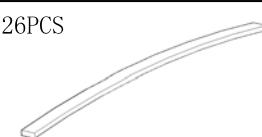

A. M8x50mm-8PCS



B. M8-8PCS



C. Ø9-Ø22-8PCS C1. Ø14-6PCS



C1. Ø14-6PCS



D. M6x60mm-9PCS



E. M6-6PCS



F. 5mm-1PC



G. 4mm-1PC



H. 5mm-1PC



I. 4mm-1PC



J. Ø38 4PCS



K. 25X25mm 9PCS



L. 26PCS



M. 13PCS

