


### 5010 King Bed


**Assembly Instructions** 

121217 3 Hardware List (2) M6 x 50mm JCB (3) M6 x 40mm JCB **(4)** M6 x 25mm JCB **(5)** M6 x 15mm JCB (1) M6 x 90mm JCB x 8 x 6 x 24 (6) Wood Dowel (7) Wood Dowel (8) Wood Dowel (9) Barrel Nut (10) Spring Washer (11) Flat Washer x 6 (10 x 40mm) **x 2** (8 x 30mm) x 16 (6 x 25mm) **x 24** x 14 x 14 (<del>)/////////</del>> ( <del>| '.'///////////</del> (12) Wood Screw (13) Wood Screw Center Rail Allen Key x 1 Adjustable (14) (15 16 (M4 x 32mm) **x 28** (M4 x 25mm) **x 60** Bracket x 4 Foot x 6 (1 4 Assembled the Center Legs (J) to the Center Rail (H). (1 Note: Extra holes on top 1 (H)9 16 16 16 **5** Assembled a Foot (K) to each 12 Support Rails (Q)  $(\mathbf{Q})$ (K)


6 Assemble the Drawer Sides (O) and Drawer Rail (P) to the Drawer Back (N). Make sure the small wheels on the Drawer Sides (O) are next to the Drawer Back (N).

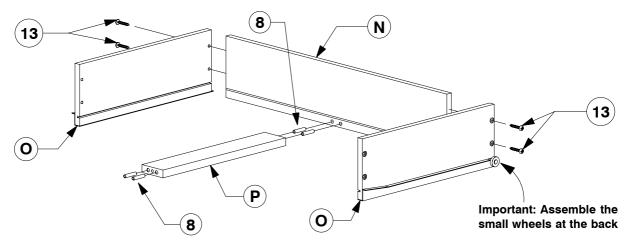

Slide the Drawer Bottom (M) into the groove on the Drawer Sides (O).

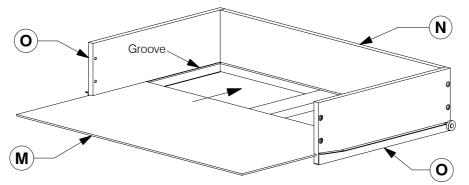


8 Assemble the Drawer Face (L) to the Drawer Sides (O).

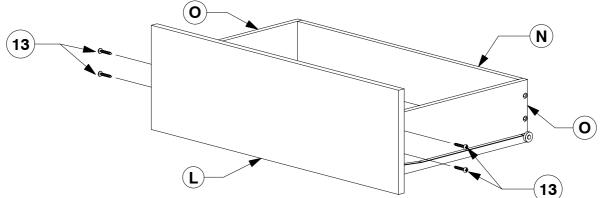



9 Turn the Drawer over to fit angled 25mm Wood screws (13) to the Drawer Rail (P).


(N)

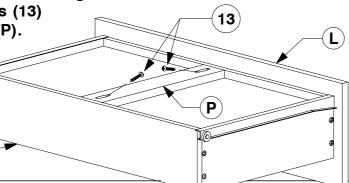


Page 3 of 7

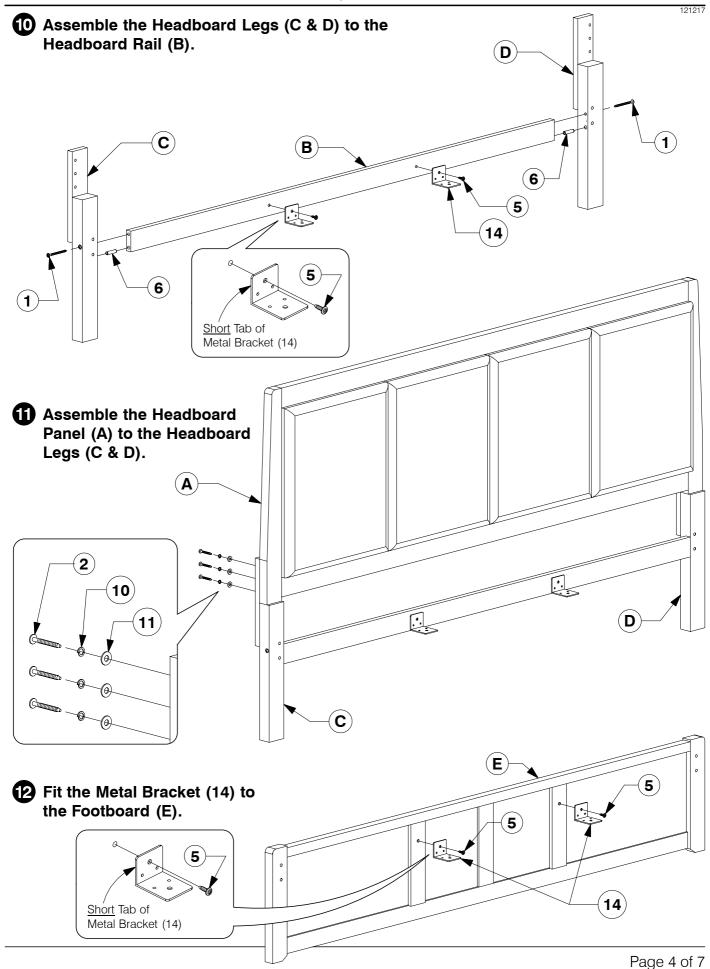

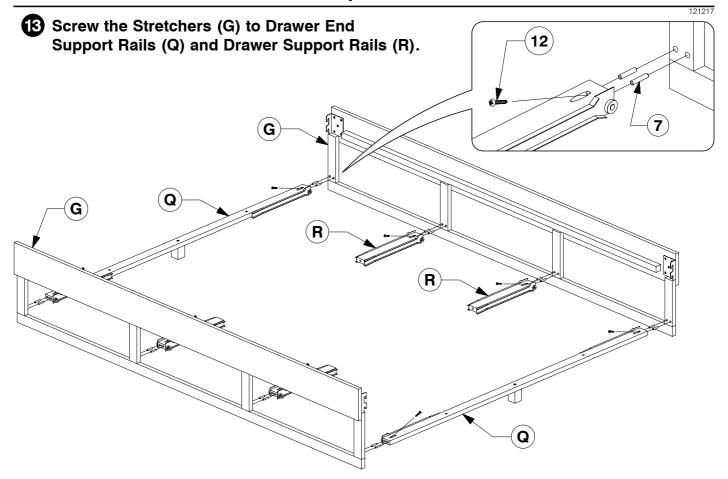

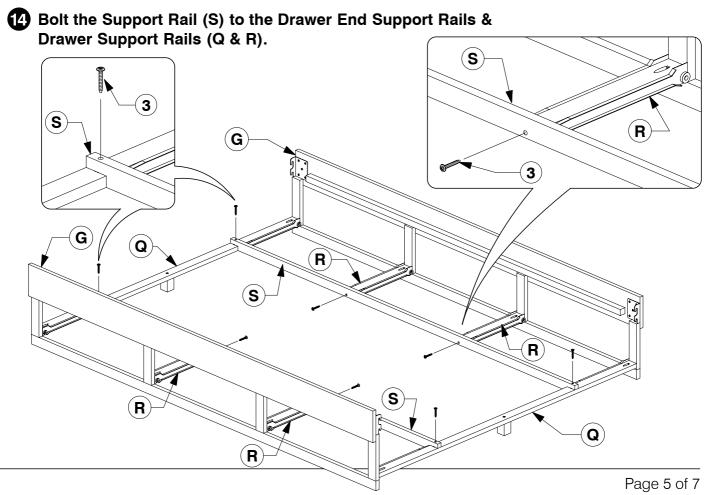

**15** Assemble the Stretchers (G) to the assembled Headboard (A) and Footboard (E).

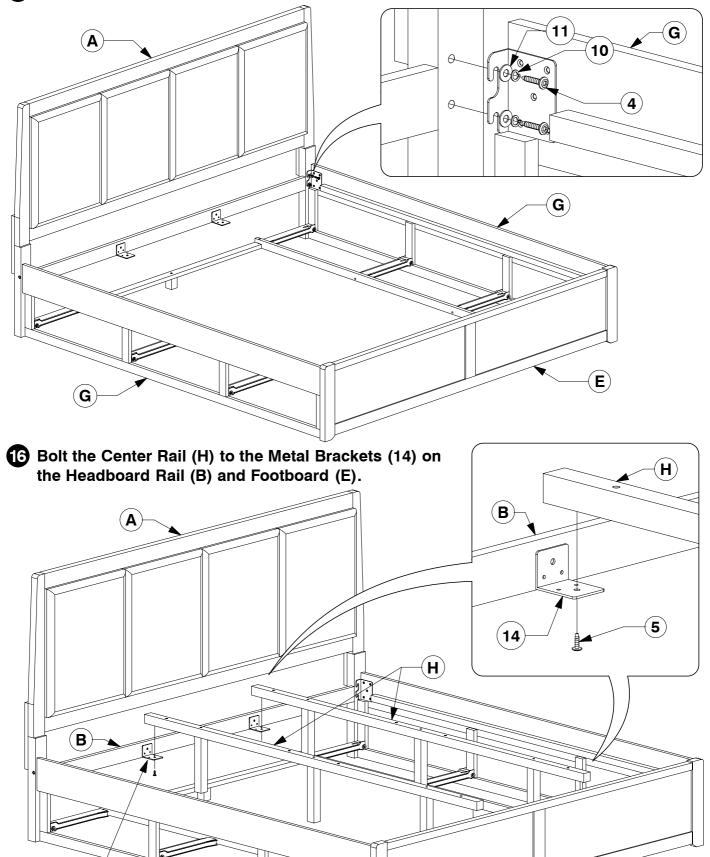


14

Page 6 of 7

E

17 Bolt the Slats (F) to the Stretchers (G).

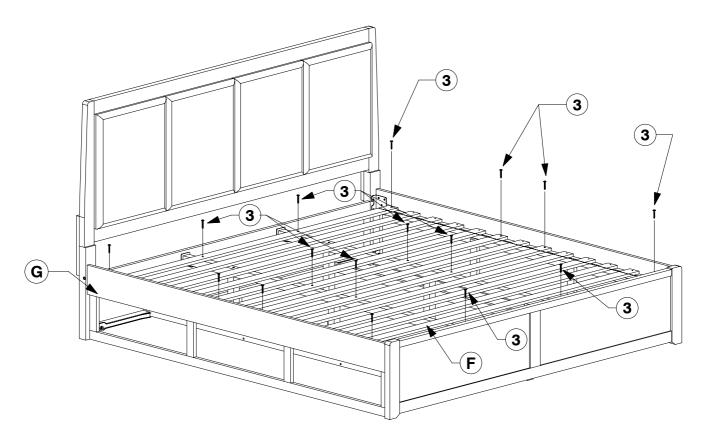

18 Screw the Slats (F) to the Stretchers (G).

