









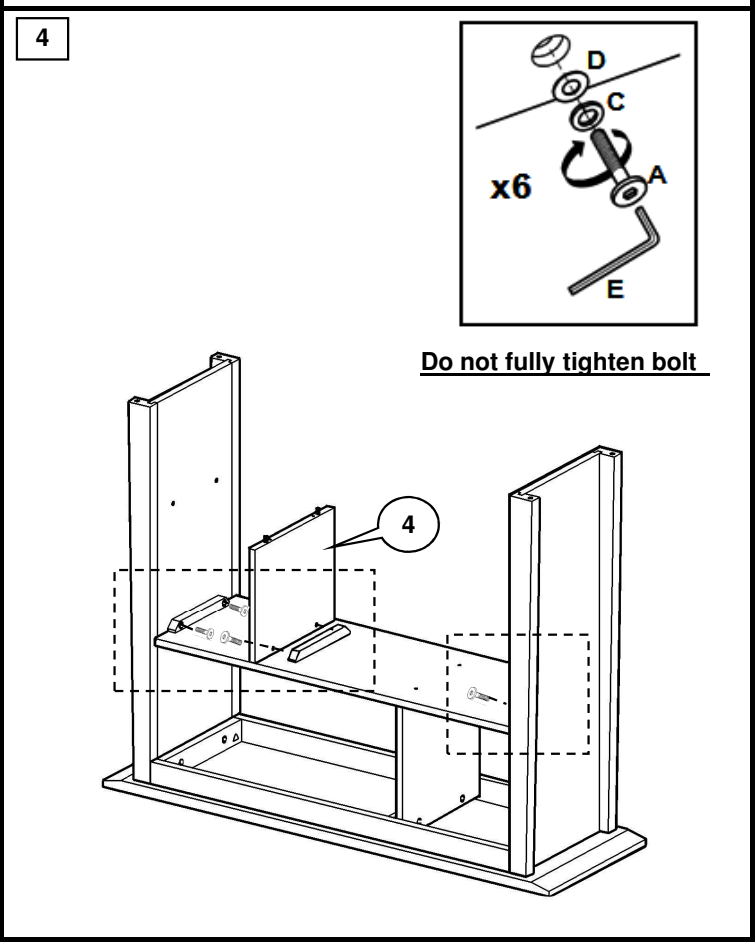
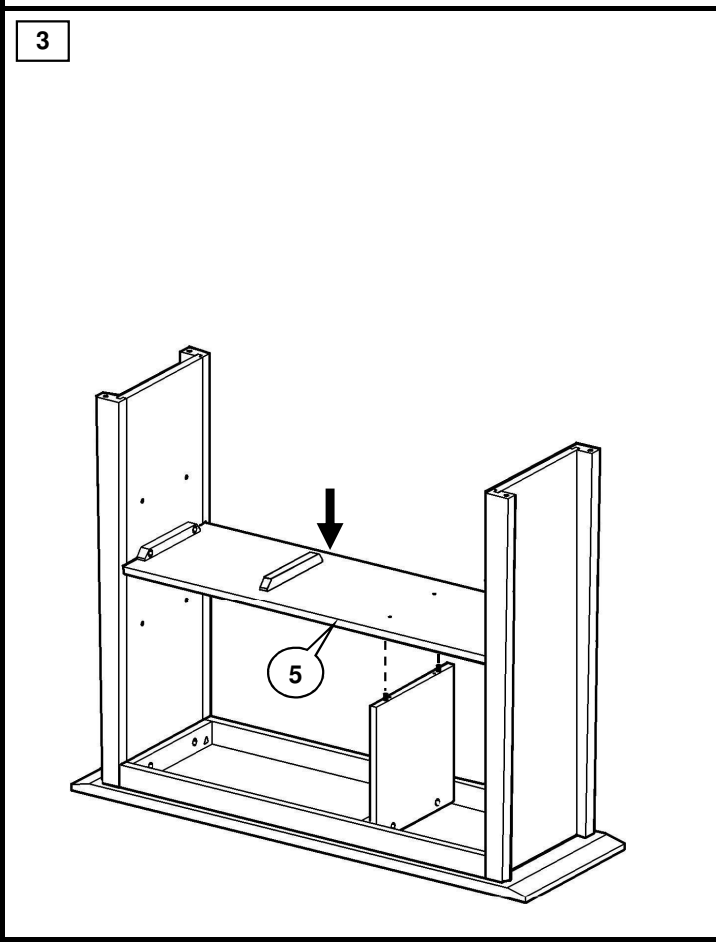
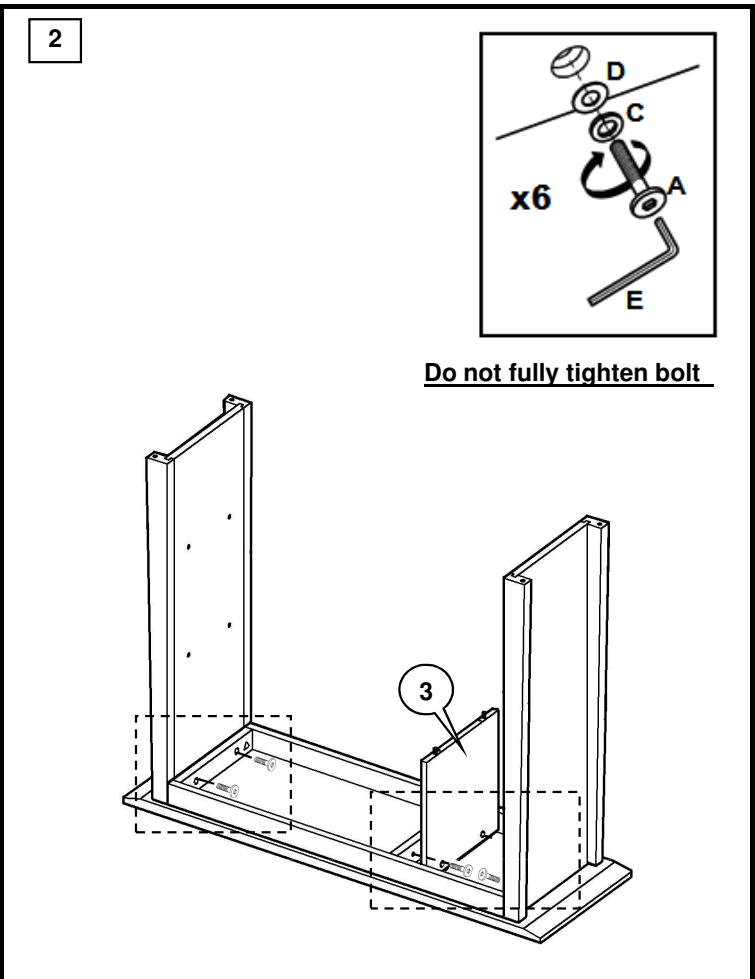
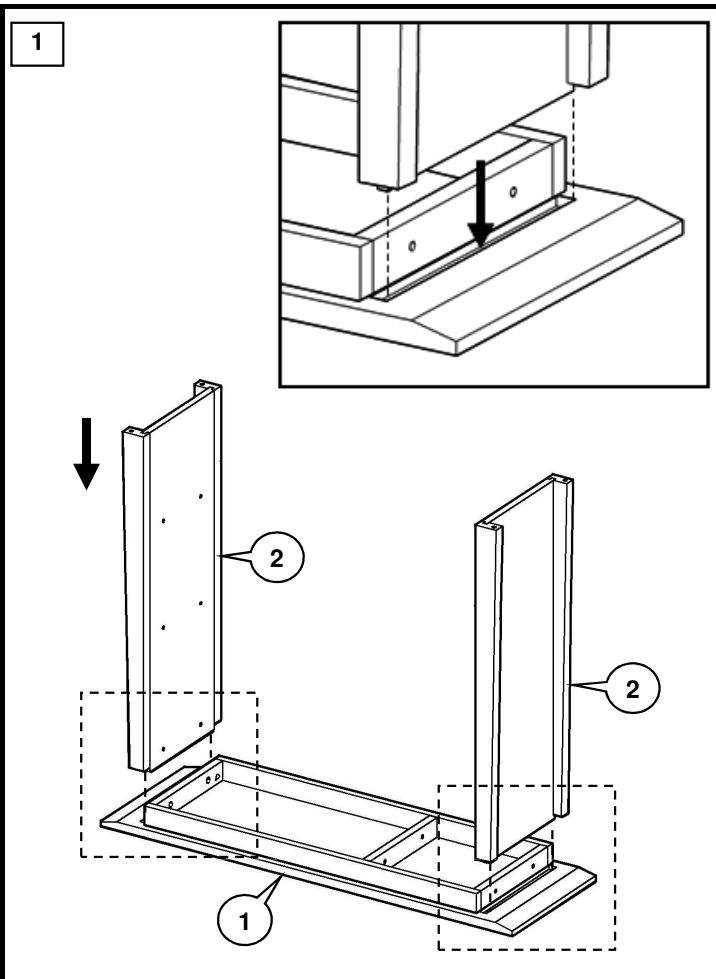


# ASSEMBLY INSTRUCTIONS



## Havana Low Bookcase

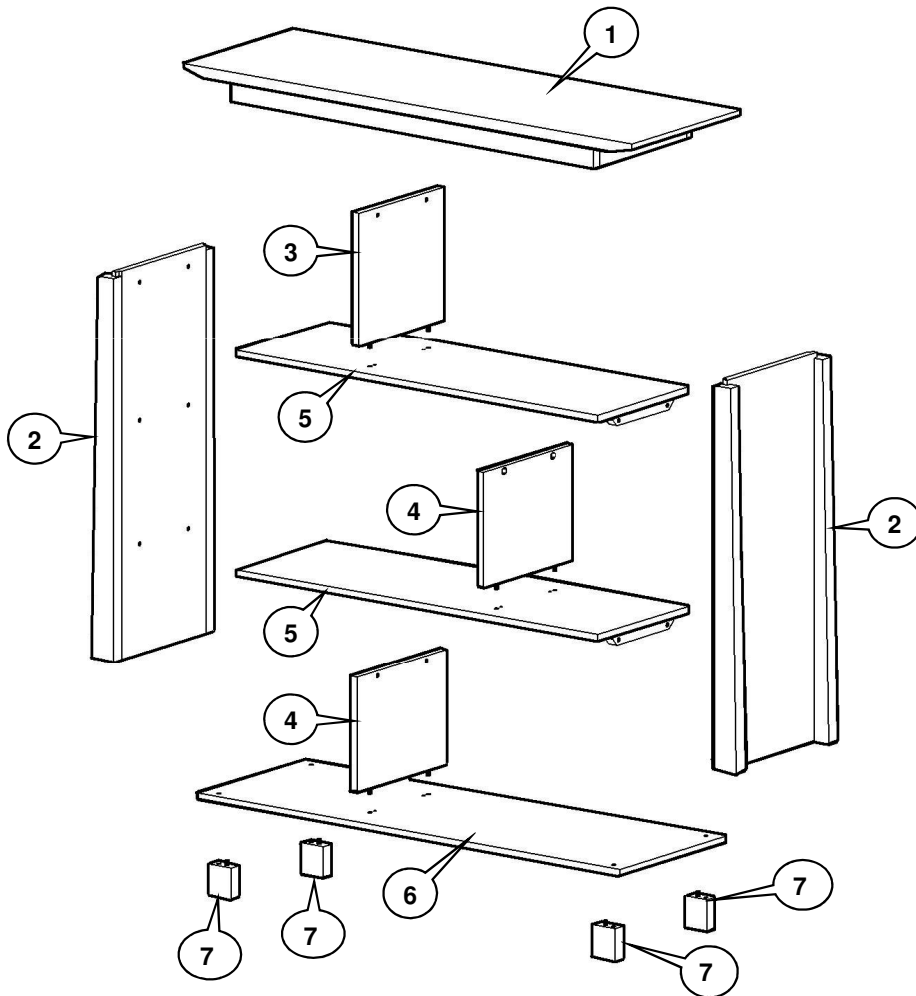


<b>A</b>  M6 x 25mm x 18	<b>E</b>  x 1	<b>I</b>  x 1
<b>B</b>  M6 x 100mm x 4	<b>F</b>  #8 x 32mm x 6	
<b>C</b>  x 22	<b>G</b>  #10 x 38mm x 4	
<b>D</b>  M6 x 13mm x 22	<b>H</b>  #8 x 16mm x 1	




5

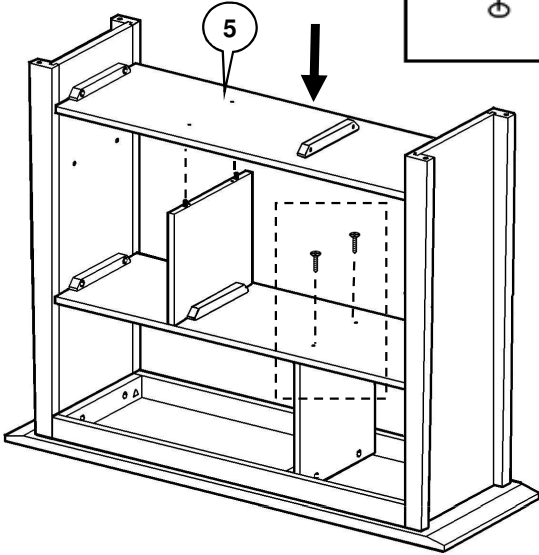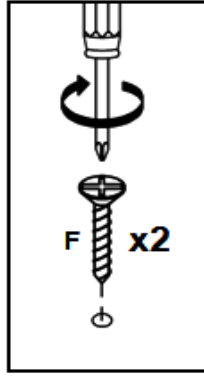




6

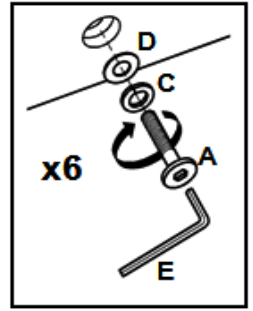

Do not fully tighten bolt

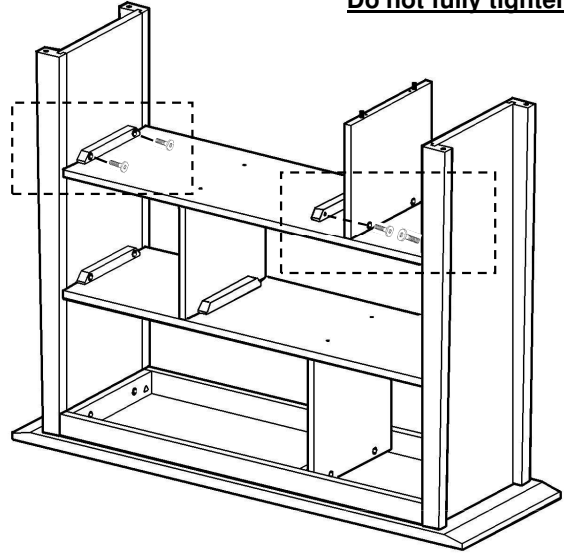

7

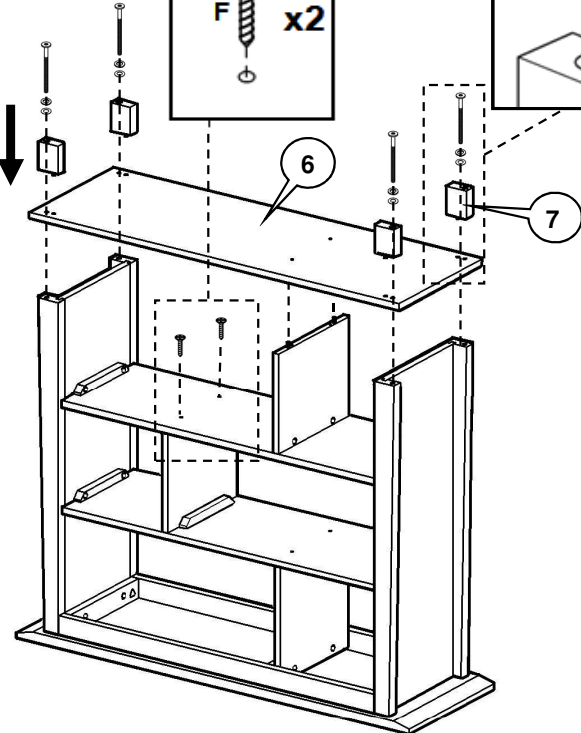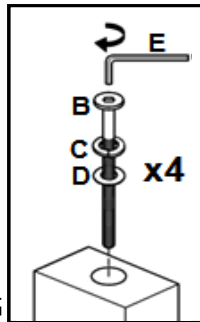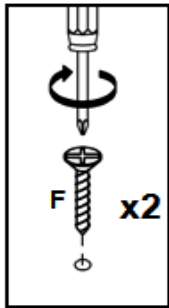

8

Tighten all bolts

