
Assembly Instructions

RECT ACACIA VNR FIXTOP TRES.BASE TABLE


HARDWARE PART:



ASSEMBLY:


STEP 1

Attach the leg stretcher to the Table Legs Base by inserting the wood dowel into the pre-drilled holes on the Table Legs Base. Attach Flat Washer, Lock Washer and JCBB Bolt by using Allen Key provided, but do not fully tighten until the whole base assembly is attached to the table top.

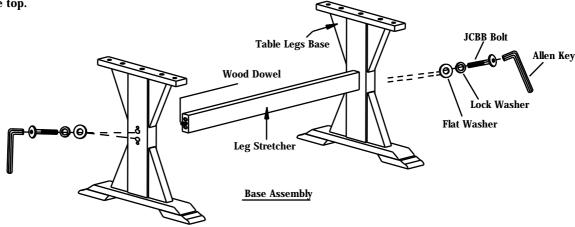


STEP 2

Place the table top upside down on a protective surface such as carpet. Align and Attach Base Assembly to the table top. Insert **Lock Washer**, **Flat Washer** and **JCBB Bolt** through the pre-drilled hole of the mounting plate into the pre-drilled hole of the Base Assembly. Then tighten the bolts by using **Allen Key** provided.

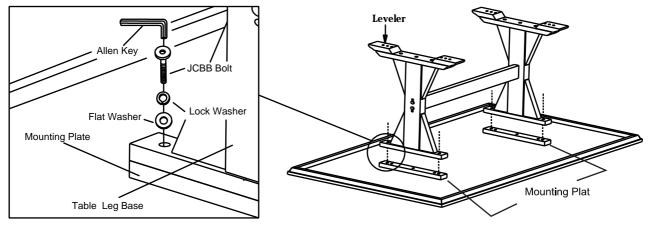

STEP 3

Set the Table upright on its legs. Check it balance and tighten all the bolts. Then Attach Cover Piece to the leg as shown.

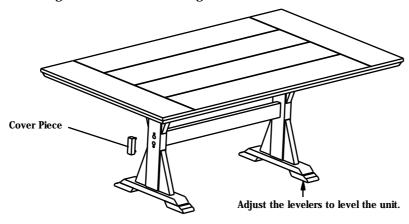

TFA-13226-UPN MADE IN MALAYSIA